2020 PARTS CATALOG

トーハツ船外機 パーツカタログ

TOHATSU

Feel the Wind™

MFS 2C
MFS 2.5C
MFS 3.5C
Models

Serial Number 000001BX～

OB NO.002-21052-1BX 3AB 2001

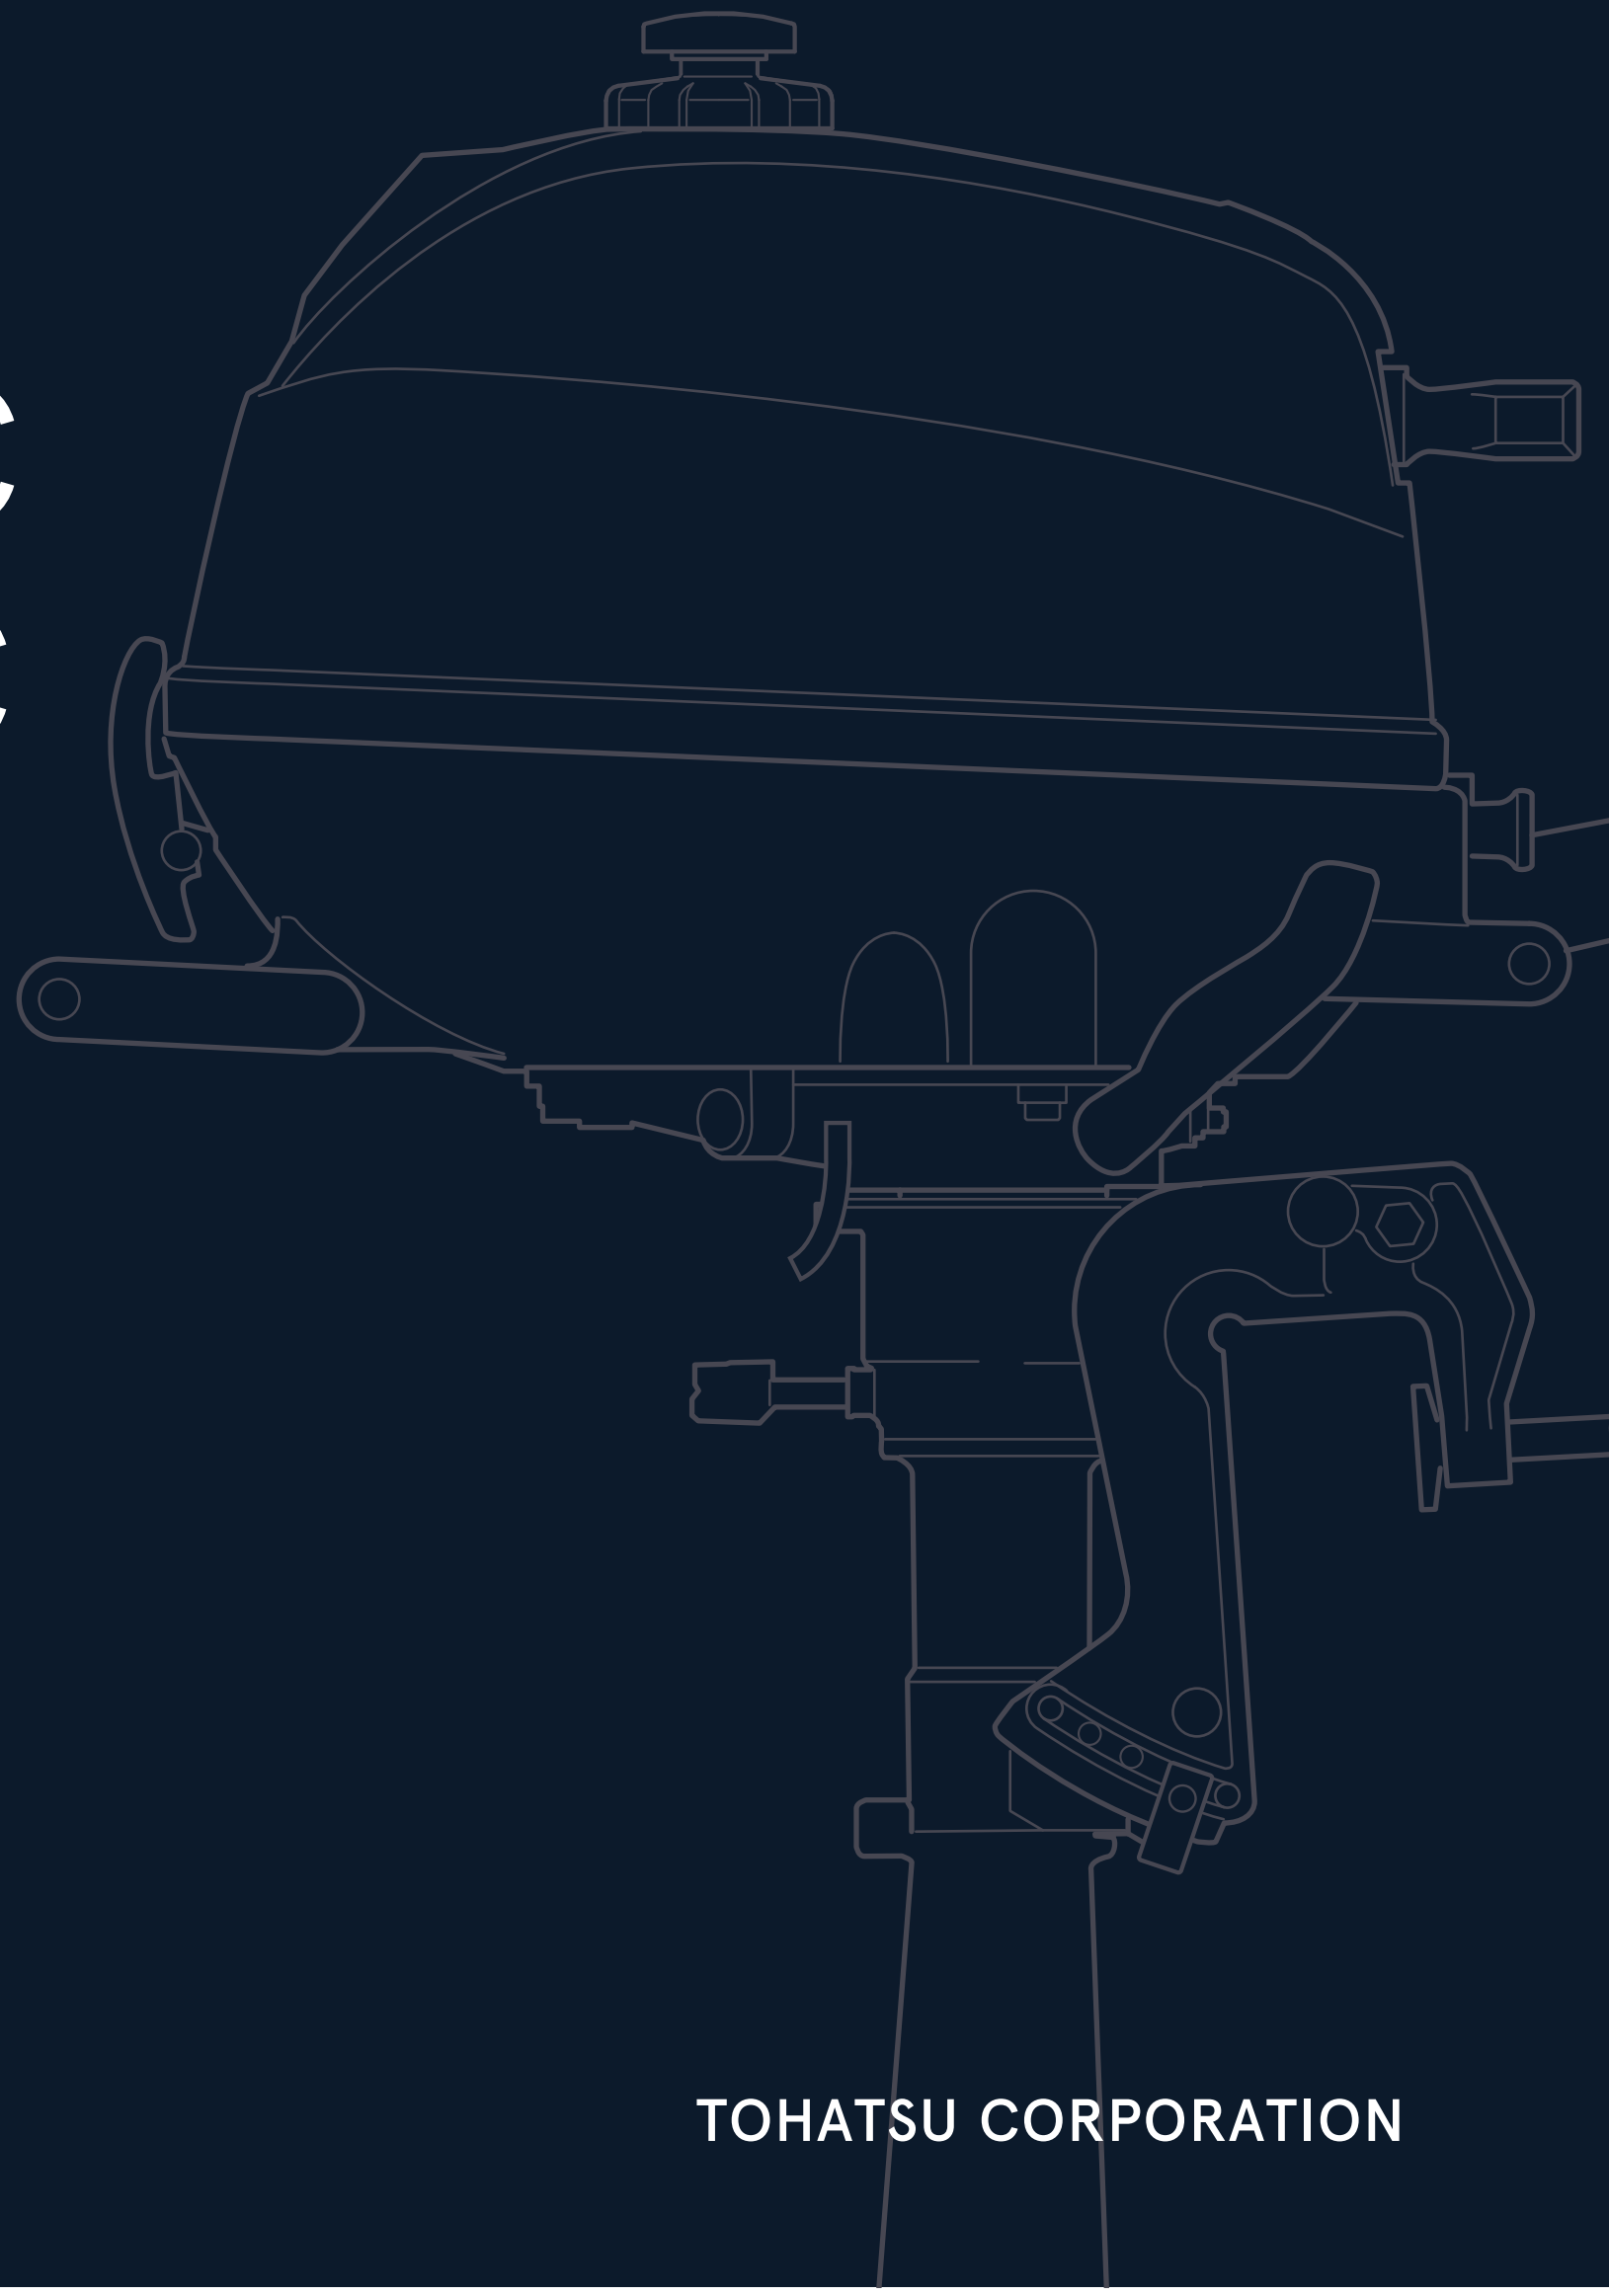

BACKS YOU UP™

TOHATSU CORPORATION

パーツカタログのご使用について

1. このパーツカタログは、2020年1月現在で編集しております。

2. 新設、廃止または、変更が生じた場合は、サービスブルテン等にてお知らせ致しますので、その都度、ご訂正ください。

3. イラストレーション（部品図）は部品検査の目安として記載していますので現品と形状が異なる場合があります。

4. イラストが一つに対して複数の品番がありますので枝番、適用モデル、備考を確認してからご注文願います。

適用モデル

Ref.No. 見出番号		Part No. 部品番号	Description 部品名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備考
4-22		3H6-03267-0	* SPRING * ｽﾌﾟﾘﾝｸﾞ ｽﾄｯﾌﾟｽｸﾘｭ	-	-	-	
4-23		3GT-03256-0	* RUBBER CAP * ﾗﾊﾞｰｷｬｯﾌﾟ	1	1	1	
4-24	1	3AB-03266-0	* PILOT SCREW * ﾊﾟｲﾛｯﾄｽｸﾘｭ	1		1	
4-24	2	3AS-03266-0	* PILOT SCREW * ﾊﾟｲﾛｯﾄｽｸﾘｭ		1		
4-25		3H6-02011-0	CARBURETOR GASKET ｷｬﾌﾞﾚﾀｶﾞｽｹｯﾄ	2	2	2	

仕様違い
イラスト位置 No.
Fig. No.

5. アッセンブリまたは、キットでの販売部品は、その構成する部品の頭に（＊）印をつけて表しています。

6. 本文中に記載されている記号は、次の様になっています。

STD	：スタンダード	OPT	：オプション
O/S	：オーバーサイズ	ASSY	：アッセンブリ
DO	：日本国内向け	EX	：海外輸出向け
A	：必要に応じて選択	EU	：欧州連合

7. オーダー上の注意
塗装部品の注文に当っては、以下に従ってください。
パーツナンバーの4桁目が“B”・“Q”記号のものは塗装されています。
現在の塗装色はパワーヘッドがブラック（B)、ロワユニットがアクアマリンブルー（Q)、プロペラがブラック（B）です。
[例示]

エンジンショートブロックキット	ロワユニットアッシ (L)
3GTB87090-3	3BMQ87302-1
B: ブラック	Q: アクアマリンブルー

8. ボルト・ナット・ワッシャのサイズ記号に付いて

ボルト　9101F4 - 5635
- 首下長さ
- 径
- 座付き (0) : 座なし

ナット・ワッシャ　9401E3 - 0600
- 径

9. 標準部品のホースは、長巻（備考を参照）に代替されます。

ホース　98AB - 50 - 080

- 50：径
- 080：長さ

HOSE/PIPE

Ref.No. 見出番号		Part No. 部品番号	Description 部　品　名	Bulk part No. バルク部品番号	Bulk part バルク部品	
					Inner Daimeter(mm) 内径(ミリ)	Length(m) 長さ(メートル)
3-11		98AB-50-080	HOSE ホース	98AB-501000	5	1
4-3		98AB-70-185	HOSE ホース	98AB-701000	7	1
4-36		98AB-30-230	HOSE ホース	98AB-301000	3	1
8-10		98AB-30-050	HOSE ホース	98AB-301000	3	1

HOW TO USE THIS PARTS CATALOG

1. This Parts Catalog provides information available as of the end of January, 2020.
2. Please keep the Parts Catalog updated each time when receiving the Service Bulletin describing the addition, abolition and/or change of parts.
3. Actual shapes of parts may be different from the illustrations shown in this Parts Catalog because they are described only as a guide for searching parts.
4. One illustration is given more than one article number. Please confirm the sub-number, applicable model and remarks before ordering parts.

Applicable model

Ref.No. 見出番号		Part No. 部品番号	Description 部　品　名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備　考
4-22		3H6-03267-0	* SPRING * ｽﾌﾟﾘﾝｸﾞ ｽﾄｯﾌﾟｽｸﾘｭ				
4-23		3GT-03256-0	* RUBBER CAP * ﾗﾊﾞｰｷｬｯﾌﾟ	1	1	1	
4-24	1	3AB-03266-0	* PILOT SCREW * ﾊﾟｲﾛｯﾄｽｸﾘｭ	1		1	
4-24	2	3AS-03266-0	* PILOT SCREW * ﾊﾟｲﾛｯﾄｽｸﾘｭ		1		
4-25		3H6-02011-0	CARBURETOR GASKET ｷｬﾌﾞﾚﾀｶﾞｽｹｯﾄ	2	2	2	

Different specification
Illustration position number
Fig. No.

5. Given mark in (∗) to part number shows assembly or kit part.
6. Marks in this Parts Catalog show.

STD	: Standard	OPT	: Optional Parts
O/S	: Over size	ASSY	: Assembly
DO	: Domestic Model	EX	: Export Model
A	: As required	EU	: European Union

7. Attention to order
   Please order painted parts in accordance with following.
   The parts that fourth figure of the parts number is (B), (Q) have painted.
   Present coloring of power head is black (B), lower unit is aqua marine blue (Q) and propeller is black (B).
   [Example]
   ENGINE SHORT BLOCK KIT　LOWER UNIT ASSY (L)
   3GTB87090-3　3BMQ87302-1
   B: Black　Q: Aquamarine Blue
8. About dimensional identification of bolts, nuts and washers.
   BOLT　9101F4 - 5635
   Length below neck
   Diameter
   Washer based (0) : No washer
   NUTS & WASHERS　9401E3 - 0600
   Diameter

9. Hose, that is a standard part, is replaced with long hose.

HOSE 98AB - 50 - 080

- 080: Length
- 50: Diameter

HOSE/PIPE

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Bulk part No. バルク部品番号	Bulk part バルク部品	
					Inner Daimeter(mm) 内径(ミリ)	Length(m) 長さ(メートル)
3-11		98AB-50-080	HOSE ホース	98AB-501000	5	1
4-3		98AB-70-185	HOSE ホース	98AB-701000	7	1
4-36		98AB-30-230	HOSE ホース	98AB-301000	3	1
8-10		98AB-30-050	HOSE ホース	98AB-301000	3	1

CONTENTS
目　　次

Fig. 1 CYLINDER・CRANK CASE ········ 1
シリンダ・クランクケース

Fig. 2 PISTON・CRANK SHAFT ········ 5
ピストン・クランクシャフト

Fig. 3 OIL PAN ········ 7
オイルパン

Fig. 4 INTAKE MANIFOLD・CARBURETOR ········ 9
インテークマニホールド・キャブレタ

Fig. 5 THROTTLE ········ 13
スロットル

Fig. 6 RECOIL STARTER ········ 15
リコイルスタータ

Fig. 7 MAGNETO ········ 17
マグネト

Fig. 8 DRIVE SHAFT HOUSING ········ 19
ドライブシャフトハウジング

Fig. 9 SHIFT ········ 21
シフト

Fig. 10 GEAR CASE ········ 23
ギヤケース

Fig. 11 CLAMP BRACKET・SWIVEL BRACKET ········ 27
クランプブラケット・スイベルブラケット

Fig. 12 TILLER HANDLE ········ 31
ティラハンドル

Fig. 13 BOTTOM COWL ········ 33
ボトムカウル

Fig. 14 TOP COWL ········ 35
トップカウル

Fig. 15 FUEL TANK ········ 37
フュエルタンク

Fig. 16 OPTIONAL PARTS (ACCESSORIES) ········ 39
オプショナルパーツ（アクセサリ）

Fig. 17 ASSEMBLY・KIT PARTS ········ 41
アッセンブリ・キットパーツ

索引 ········ 47

INDEX ········ 50

INDEX (Parts Number) ········ 52

Fig. 1 CYLINDER・CRANK CASE
シリンダ・クランクケース

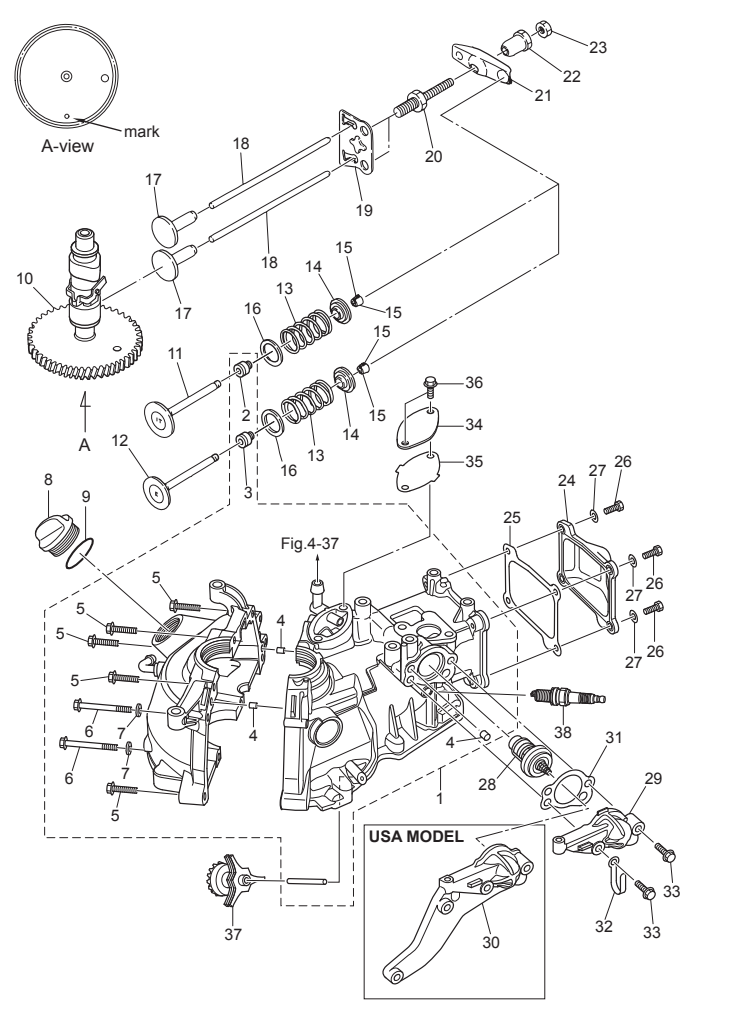

Fig. 2 PISTON・CRANK SHAFT
ピストン・クランクシャフト

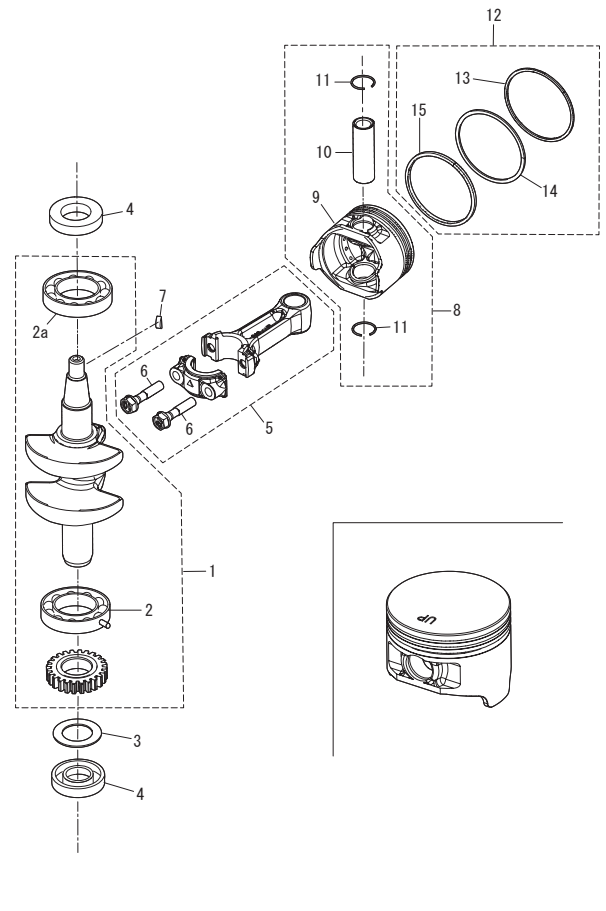

Fig. 3 OIL PAN
オイルパン

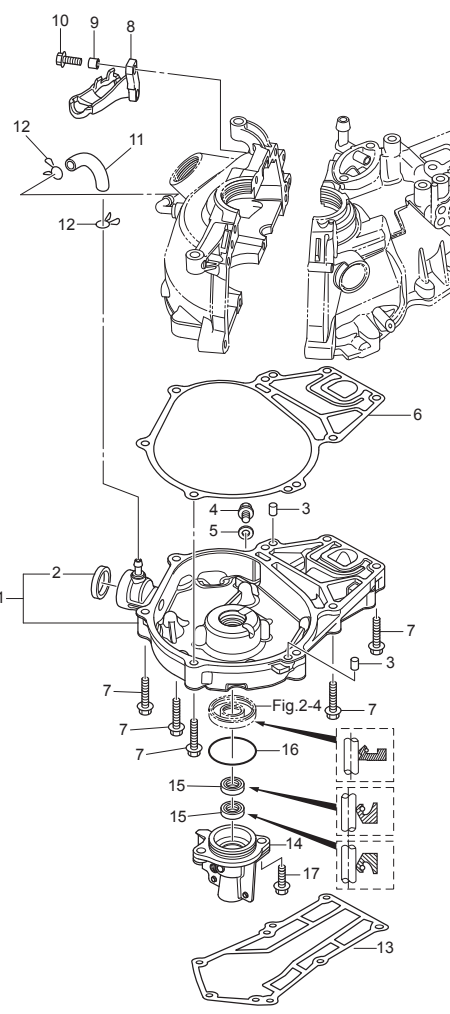

Fig. 4 INTAKE MANIFOLD・CARBURETOR
インテークマニホールド・キャブレタ

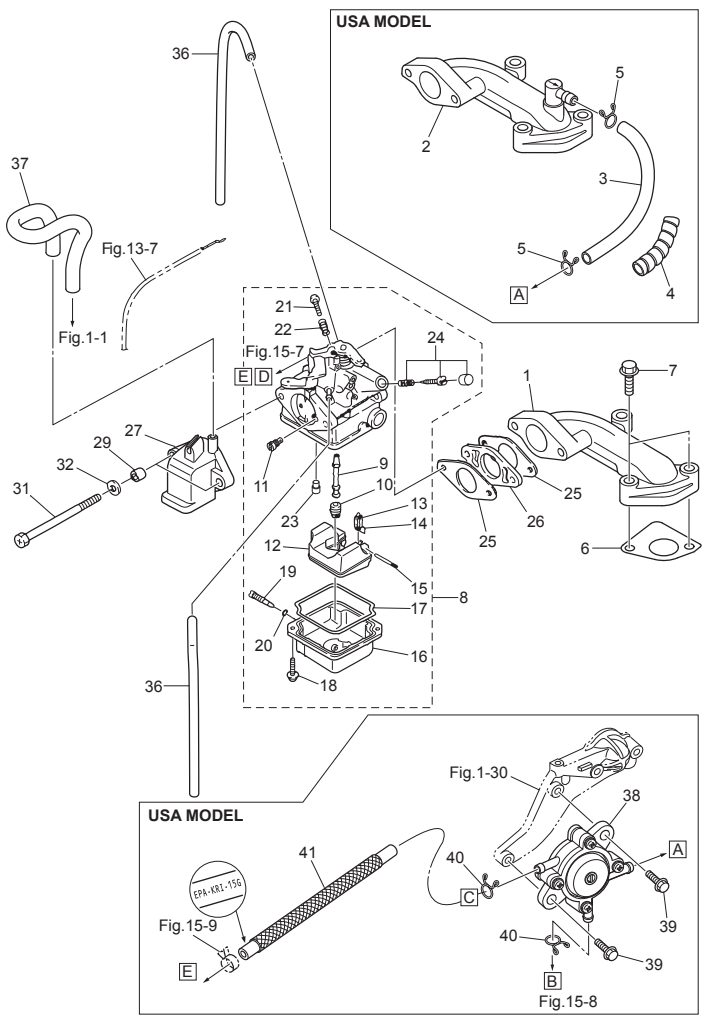

Fig. 5 THROTTLE
スロットル

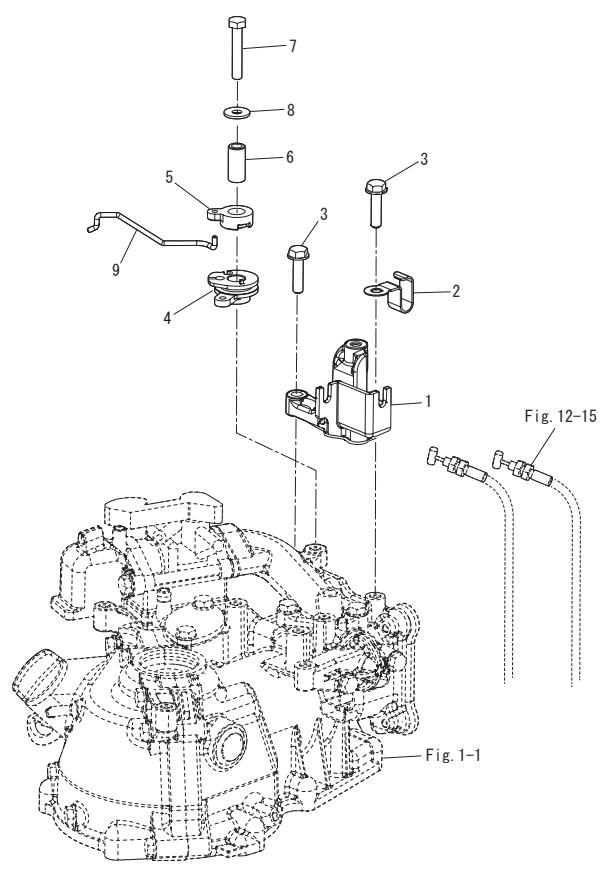

Fig. 6 RECOIL STARTER
リコイルスタータ

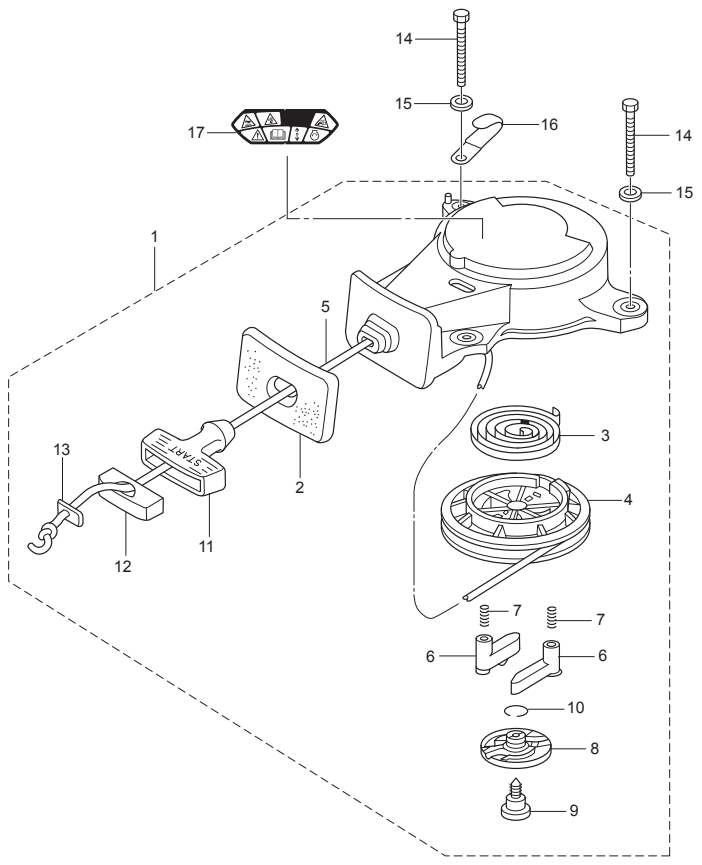

Fig. 7 MAGNETO
マグネト

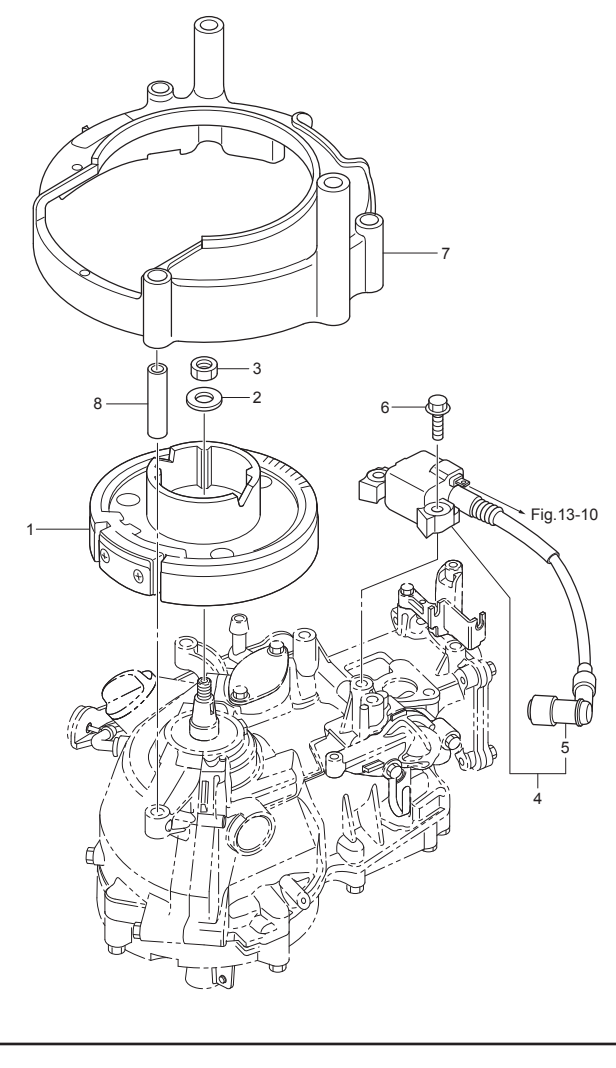

Fig. 8 DRIVE SHAFT HOUSING
ドライブシャフトハウジング

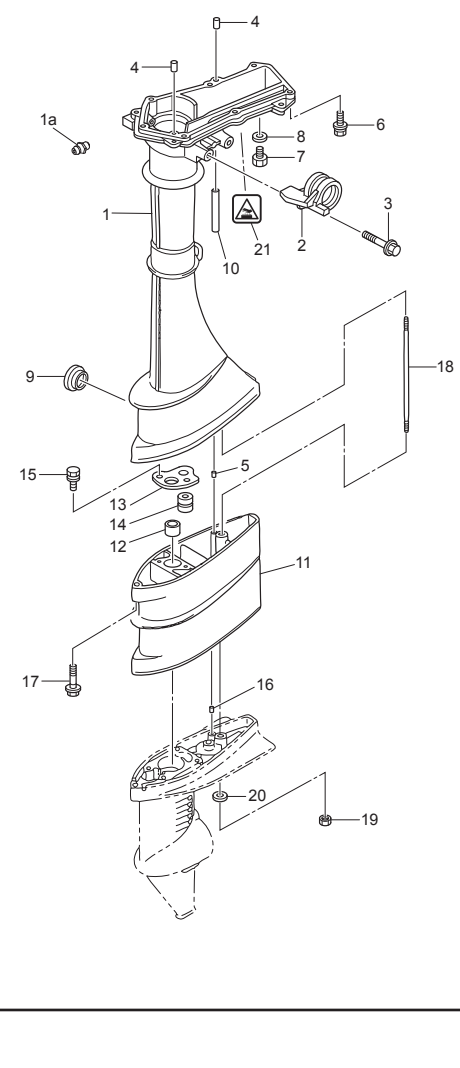

Fig. 9 SHIFT
シフト

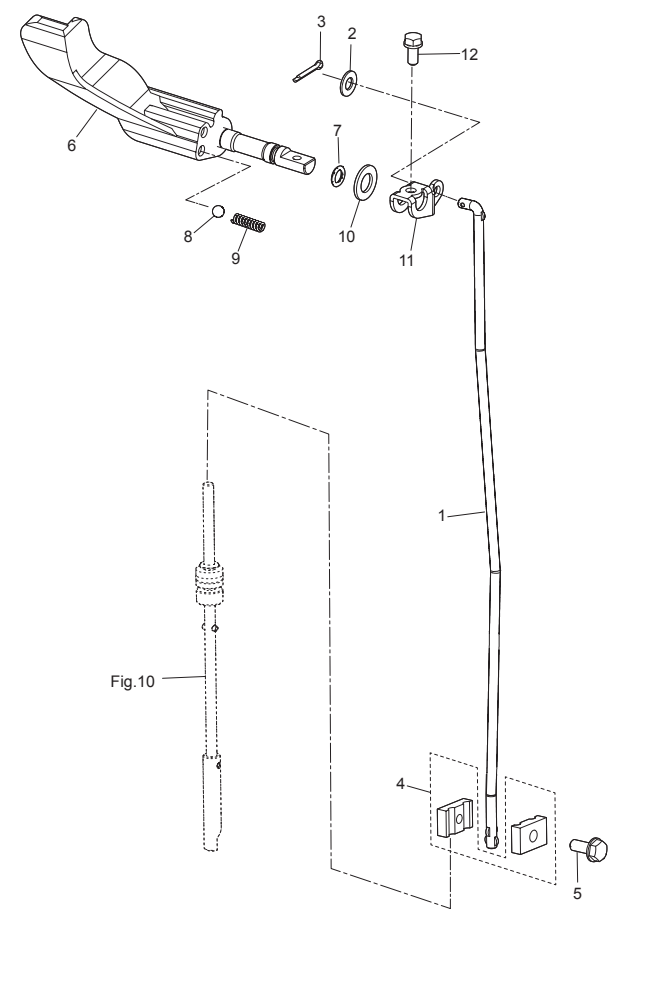

Fig. 10 GEAR CASE
ギヤケース

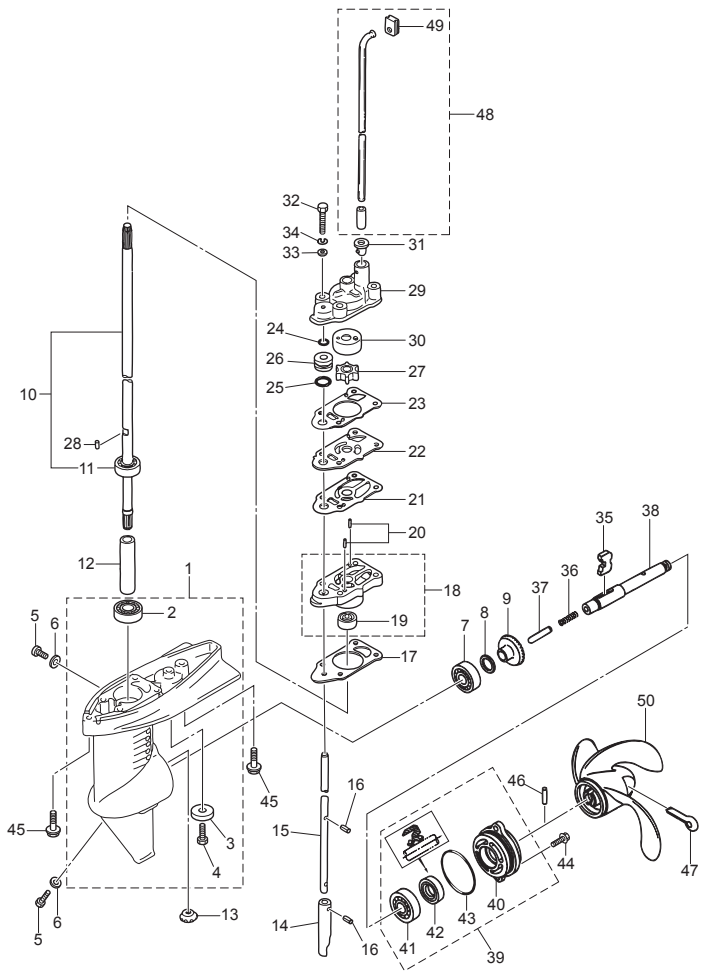

Fig. 11 CLAMP BRACKET・SWIVEL BRACKET
クランプブラケット・スイベルブラケット

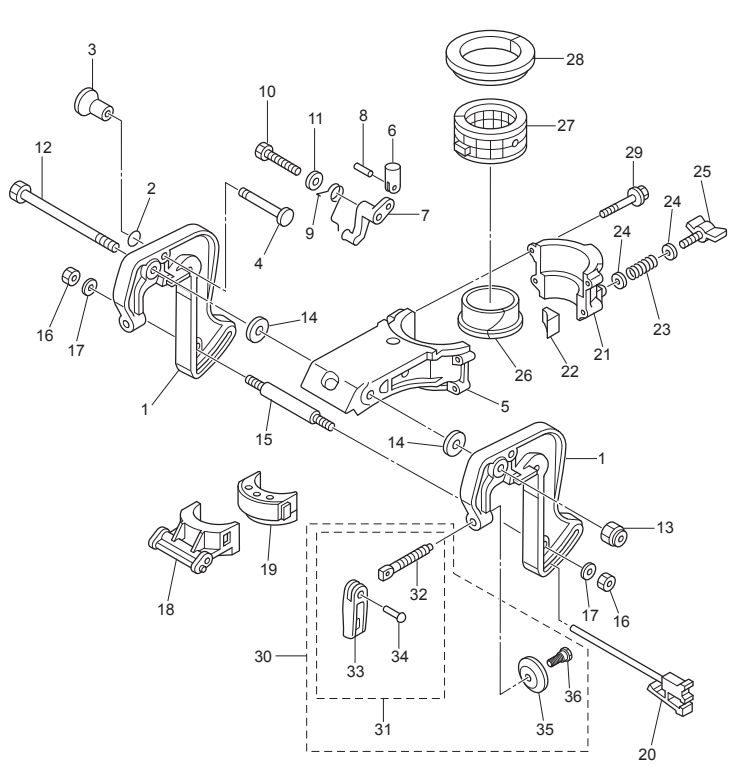

Fig. 12 TILLER HANDLE
ティラハンドル

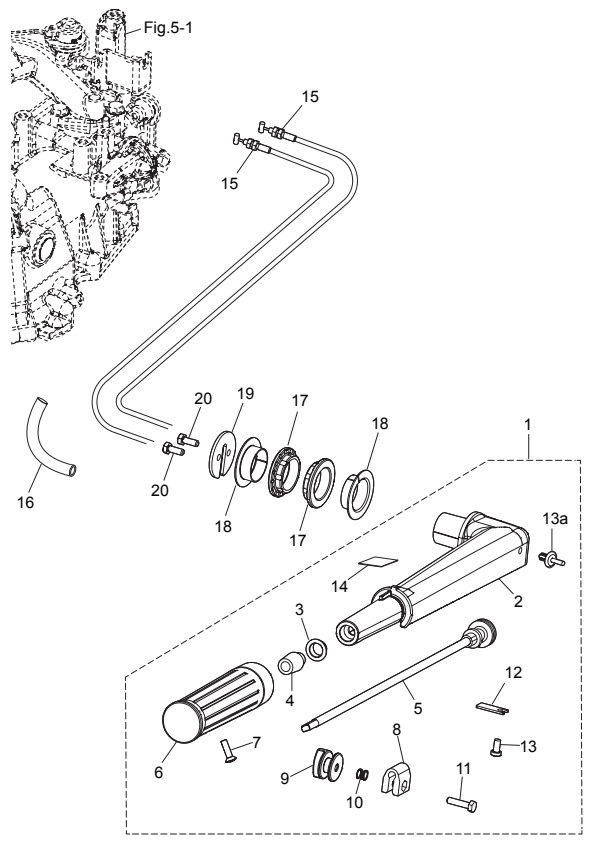

Fig. 13 BOTTOM COWL
ボトムカウル

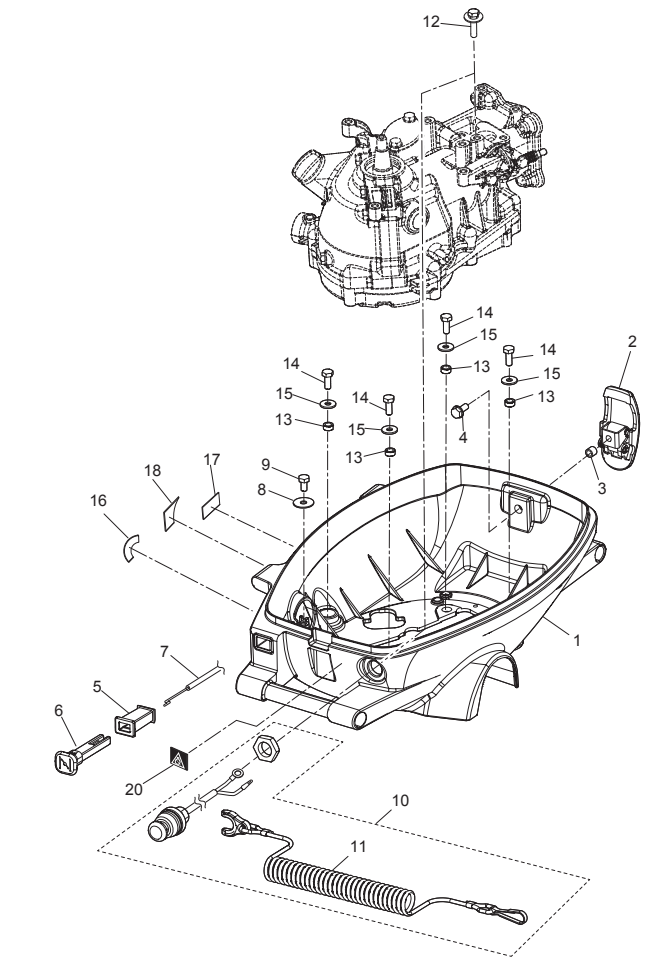

Fig. 14 TOP COWL
トップカウル

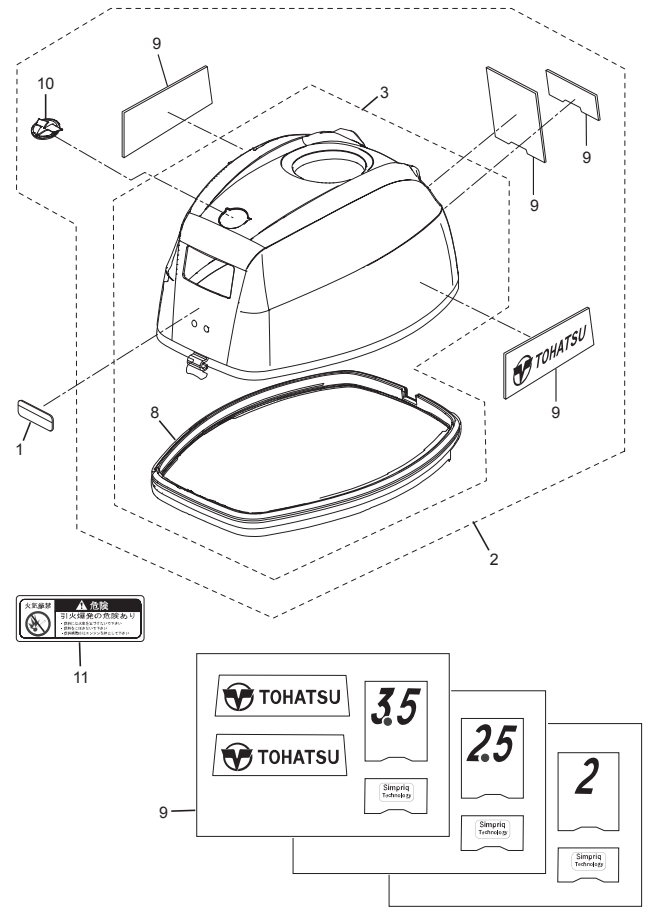

Fig. 15 FUEL TANK
フュエルタンク

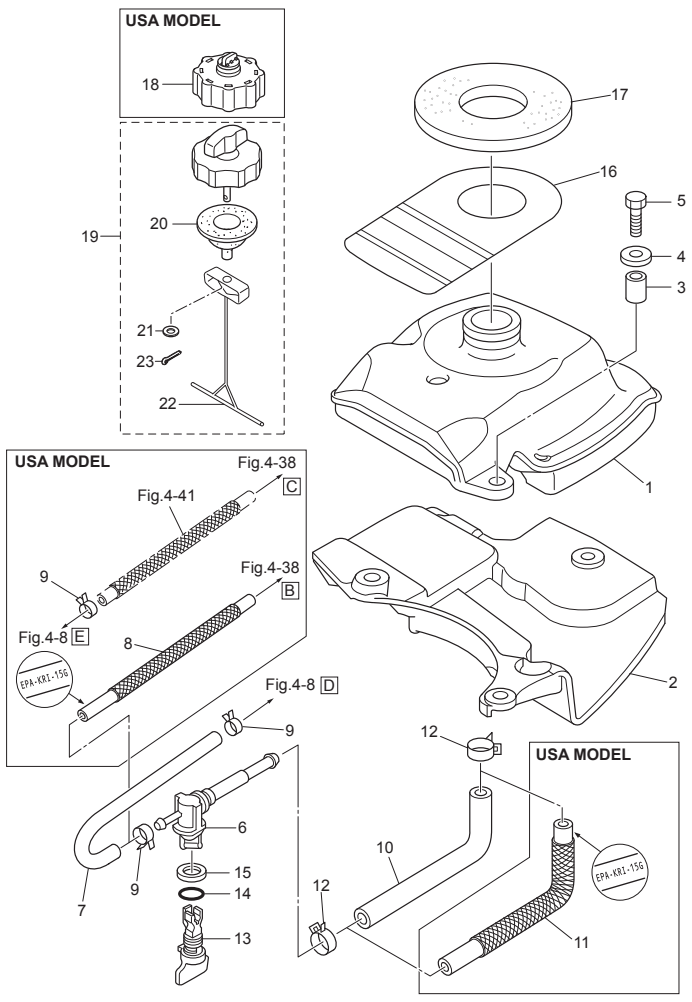

Fig. 16 OPTIONAL PARTS (ACCESSORIES)
オプショナルパーツ（アクセサリ）

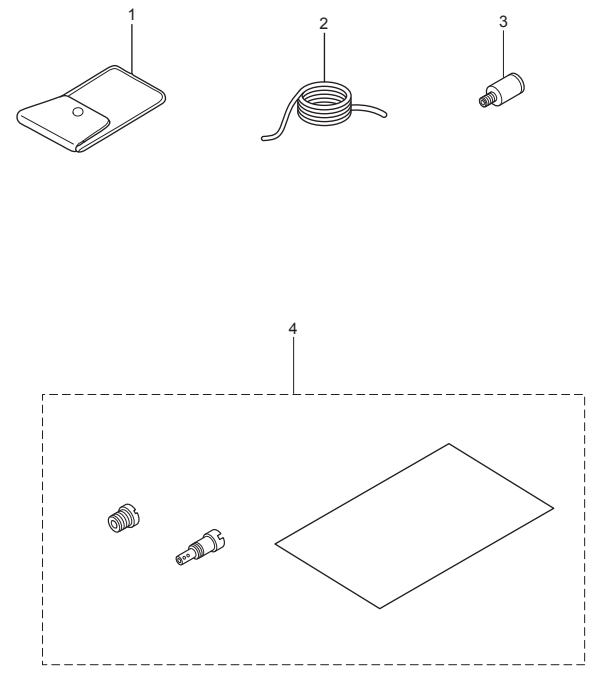

Fig. 17 ASSEMBLY・KIT PARTS
アッセンブリ・キットパーツ

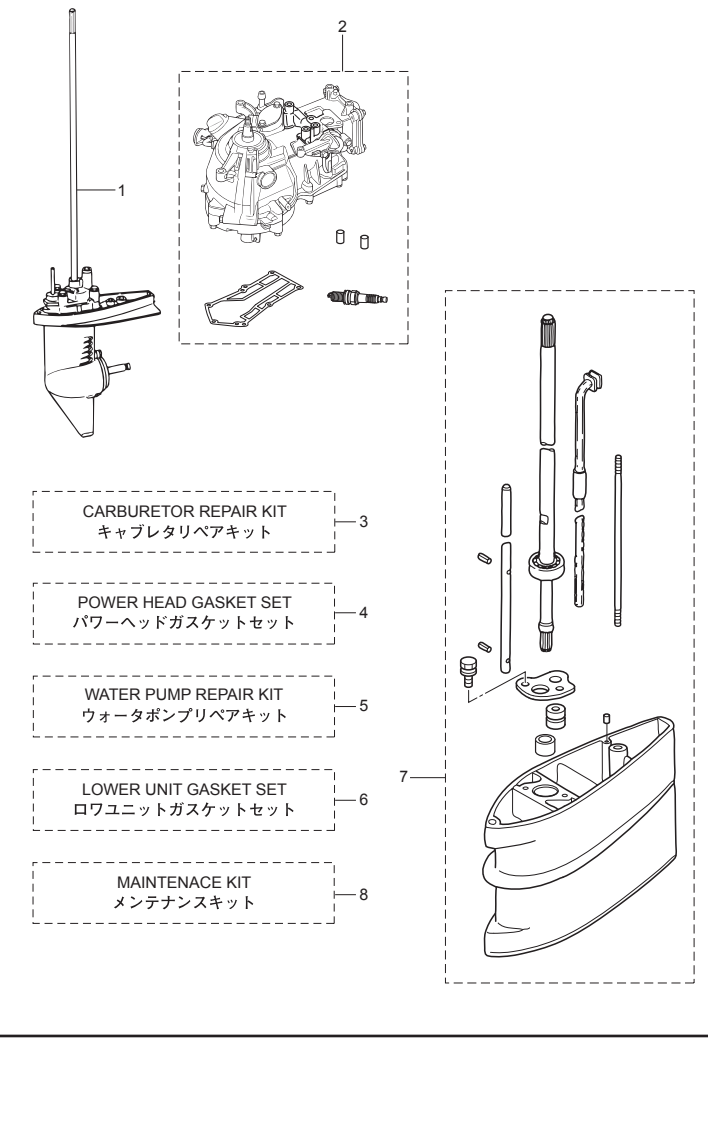

Fig. 1 CYLINDER・CRANK CASE
シリンダ・クランクケース

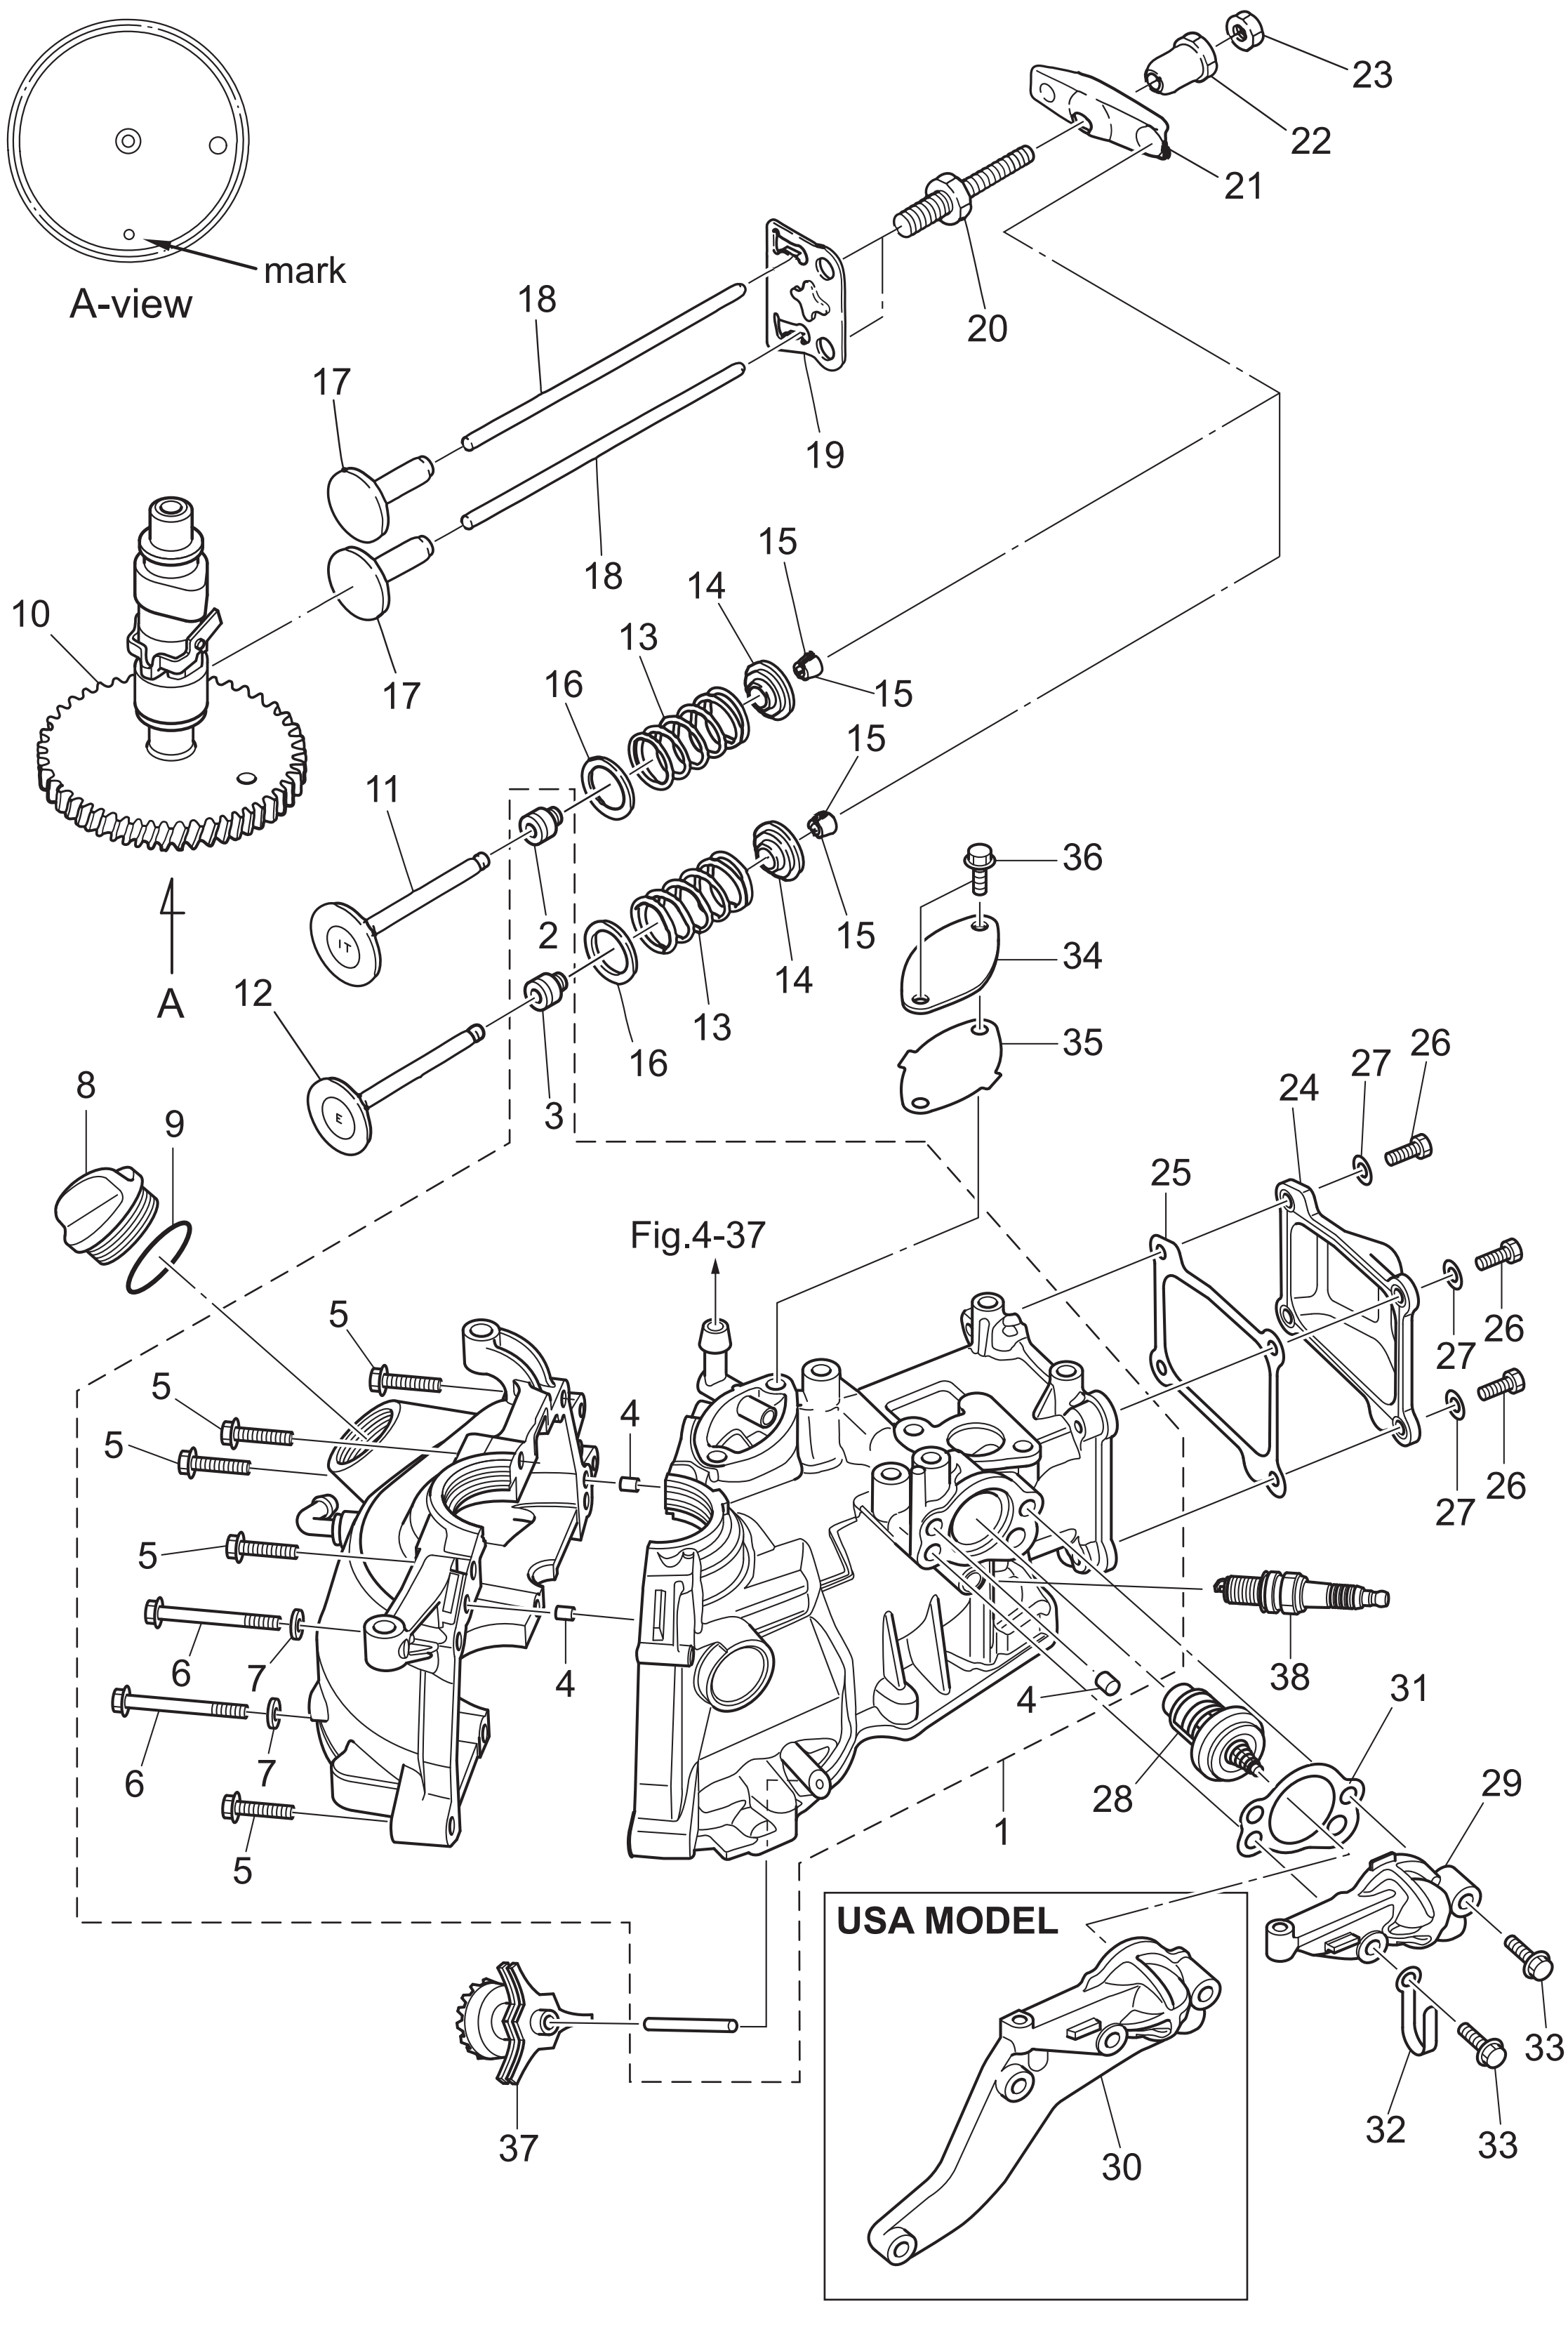

Ref.No. 見出番号	Part No. 部品番号	Description 部 品 名	Q' ty/個数			Remarks 備 考
			MFS2C	MFS2.5C	MFS3.5C	
1-1	3GTB01100-2	CYL BLOCK & CRANKCASE ASSY ｼﾘﾝﾀﾞﾌﾞﾛｯｸ&ｸﾗﾝｸｹｰｽｱｯｼ	1	1	1	Nipple
1-2	3R3-07204-0	* INTAKE VALVE STEM SEAL * ｲﾝﾃｰｸﾊﾞﾙﾌﾞｽﾃﾑｼｰﾙ	1	1	1	Black
1-3	3R3-07206-0	* EXHAUST VALVE STEM SEAL * ｴｷｿﾞｰｽﾄﾊﾞﾙﾌﾞｽﾃﾑｼｰﾙ	1	1	1	Green
1-4	345-01111-0	* DOWEL PIN 6-12 * ﾀﾞｳｪﾙﾋﾟﾝ 6-12	3	3	3	
1-5	9101F4-5635	* BOLT * ﾎﾞﾙﾄ	6	6	6	
1-6	9161F9-0675	* BOLT * ﾎﾞﾙﾄ	2	2	2	
1-7	9401E3-0600	* WASHER * ﾜｯｼｬ	2	2	2	
1-8	3R0-71015-1	OIL FILLER CAP ｵｲﾙﾌｨﾗｷｬｯﾌﾟ	1	1	1	
1-9	3R0-07422-0	O-RING 3.1-24.4 Oﾘﾝｸﾞ 3.1-24.4	1	1	1	
1-10	3GT-07810-1	CAMSHAFT ASSY ｶﾑｼｬﾌﾄｱｯｼ	1	1	1	
1-11	3AB-07201-0	INTAKE VALVE ｲﾝﾃｰｸﾊﾞﾙﾌﾞ	1	1	1	
1-12	3V1-07202-0	EXHAUST VALVE ｴｷｿﾞｰｽﾄﾊﾞﾙﾌﾞ	1	1	1	
1-13	3AE-07203-0	VALVE SPRING L=35 ﾊﾞﾙﾌﾞｽﾌﾟﾘﾝｸﾞ L=35	2	2	2	
1-14	3GT-07921-0	RETAINER ﾘﾃｰﾅ	2	2	2	
1-15	3KY-07923-0	COTTER ｺｯﾀ	4	4	4	
1-16	3GR-07905-0	VALVE SPRING SEAT ﾊﾞﾙﾌﾞｽﾌﾟﾘﾝｸﾞｼｰﾄ	2	2	2	
1-17	3AB-07231-0	LIFTER ﾘﾌﾀ	2	2	2	
1-18	3H6-07232-0	PUSH ROD ﾌﾟｯｼｭﾛｯﾄﾞ	2	2	2	
1-19	3AB-07233-0	PLATE ﾌﾟﾚｰﾄ ﾌﾟｯｼｭﾛｯﾄﾞ	1	1	1	
1-20	3H6-07234-0	PIVOT BOLT ﾋﾟﾎﾞｯﾄﾎﾞﾙﾄ	2	2	2	
1-21	3AB-07235-0	ROCKER ARM ﾛｯｶｱｰﾑ	2	2	2	
1-22	3H6-07236-0	PIVOT ﾋﾟﾎﾞｯﾄ ﾛｯｶｱｰﾑ	2	2	2	
1-23	3H6-07937-0	ADJUSTING NUT ｱｼﾞｬｽﾄﾅｯﾄ	2	2	2	
1-24	3ABB01021-0	CYLINDER HEAD COVER ｼﾘﾝﾀﾞﾍｯﾄﾞｶﾊﾞｰ	1	1	1	
1-25	3AB-01024-1	CYLINDER HEAD COVER GASKET ｼﾘﾝﾀﾞﾍｯﾄﾞｶﾊﾞｰｶﾞｽｹｯﾄ	1	1	1	
1-26	910103-0616	BOLT ﾎﾞﾙﾄ	4	4	4	
1-27	3C8-66308-0	WASHER 6-16-1.5 ﾜｯｼｬ 6-16-1.5	4	4	4	
1-28	3H6-01030-0	THERMOSTAT ｻｰﾓｽﾀｯﾄ	1	1	1	Mark 52B PRV
1-29	3ABB01031-0	THERMOSTAT CAP ｻｰﾓｽﾀｯﾄｷｬｯﾌﾟ	1	1	1	STD

Fig. 1 **CYLINDER・CRANK CASE**
シリンダ・クランクケース

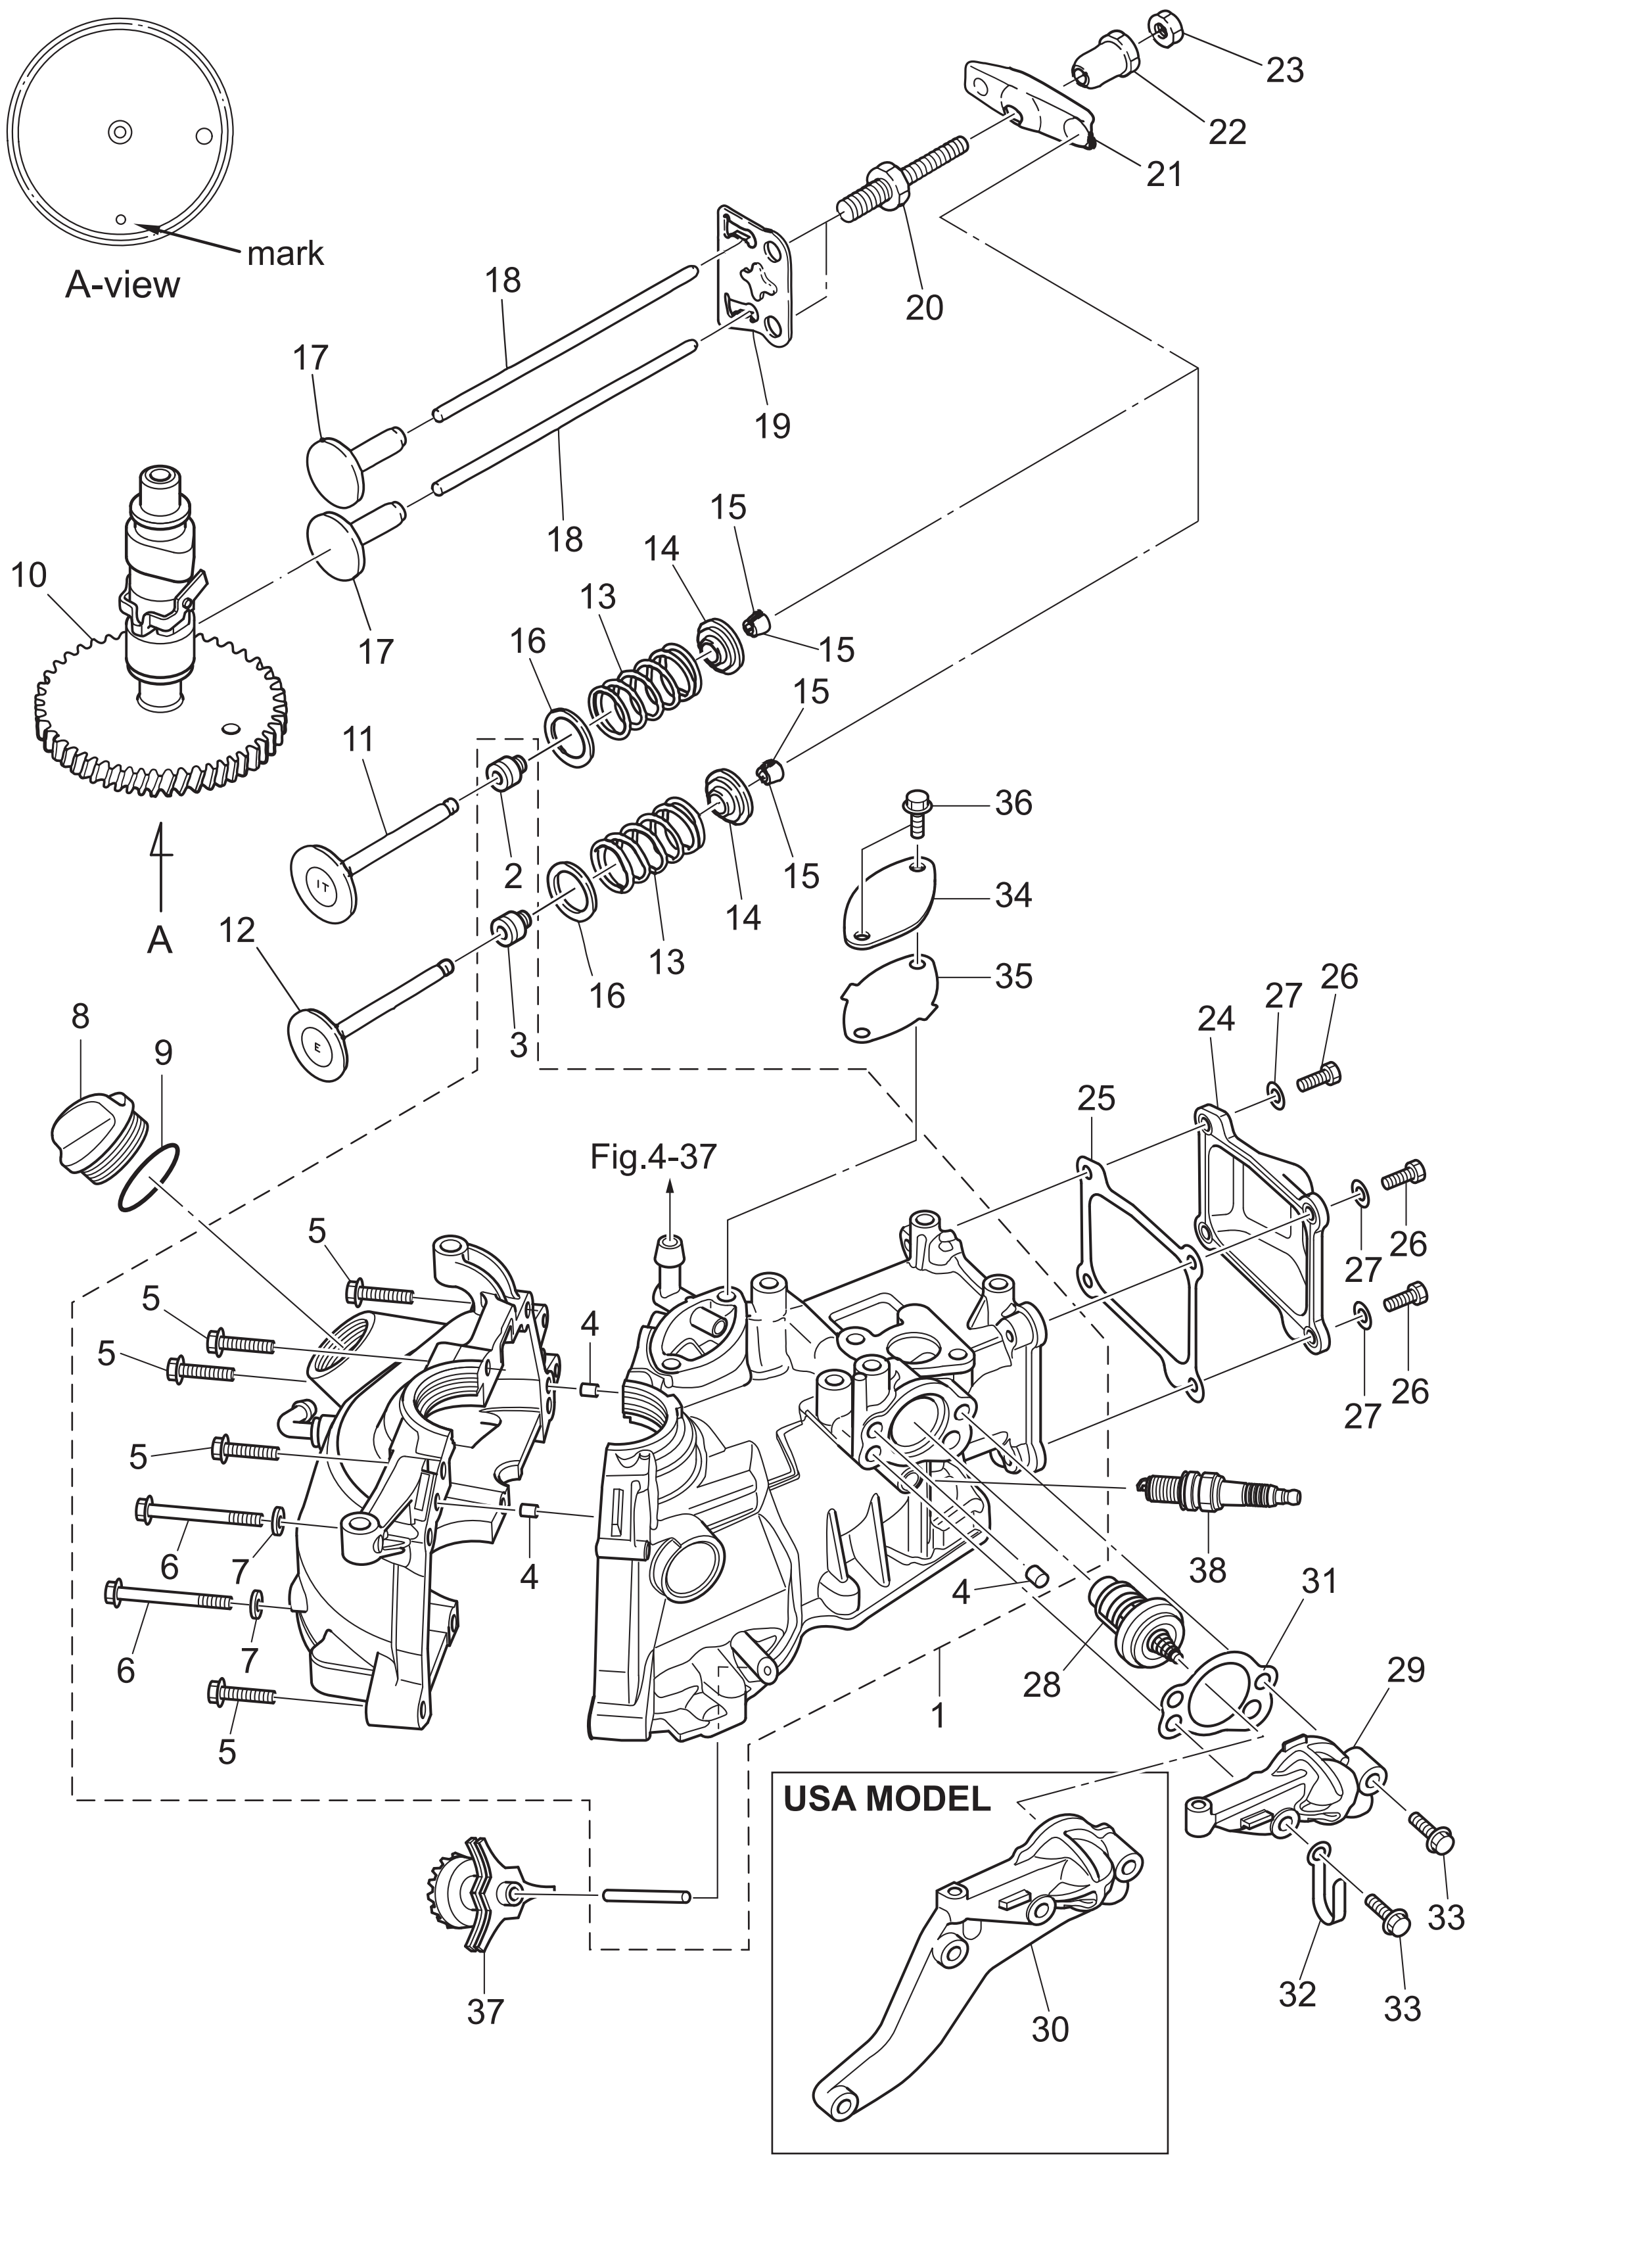

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	 MFS2.5C	 MFS3.5C	Remarks 備 考
1-30		3GTB01031-0	THERMOSTAT CAP ｻｰﾓｽﾀｯﾄｷｬｯﾌﾟ		1	1	for USA Model Bracket, Fuel Pump
1-31		3AB-01032-0	THERMOSTAT CAP GASKET ｻｰﾓｽﾀｯﾄｷｬｯﾌﾟｶﾞｽｹｯﾄ	1	1	1	
1-32		398-06972-0	CLAMP 6.5-67P ｸﾗﾝﾌﾟ 6.5-67P	1	1	1	
1-33		9101E3-5630	BOLT ﾎﾞﾙﾄ	2	2	2	
1-34		3AB-07431-0	BREATHER CHAMBER COVER ﾌﾞﾘｰｻﾞﾁｬﾝﾊﾞｶﾊﾞｰ	1	1	1	
1-35		3AB-07432-0	GASKET ｶﾞｽｹｯﾄ ﾌﾞﾘｰｻﾞﾁｬﾝﾊﾞｶﾊﾞｰ	1	1	1	
1-36		910103-5616	BOLT ﾎﾞﾙﾄ	2	2	2	
1-37		3AB-07640-0	SLINGER ｽﾘﾝｶﾞ	1	1	1	
1-38		9701-1-1103	SPARK PLUG(DCPR6E) ｽﾊﾟｰｸﾌﾟﾗｸﾞ (DCPR6E)	1	1	1	

Fig. 2 PISTON・CRANK SHAFT
ピストン・クランクシャフト

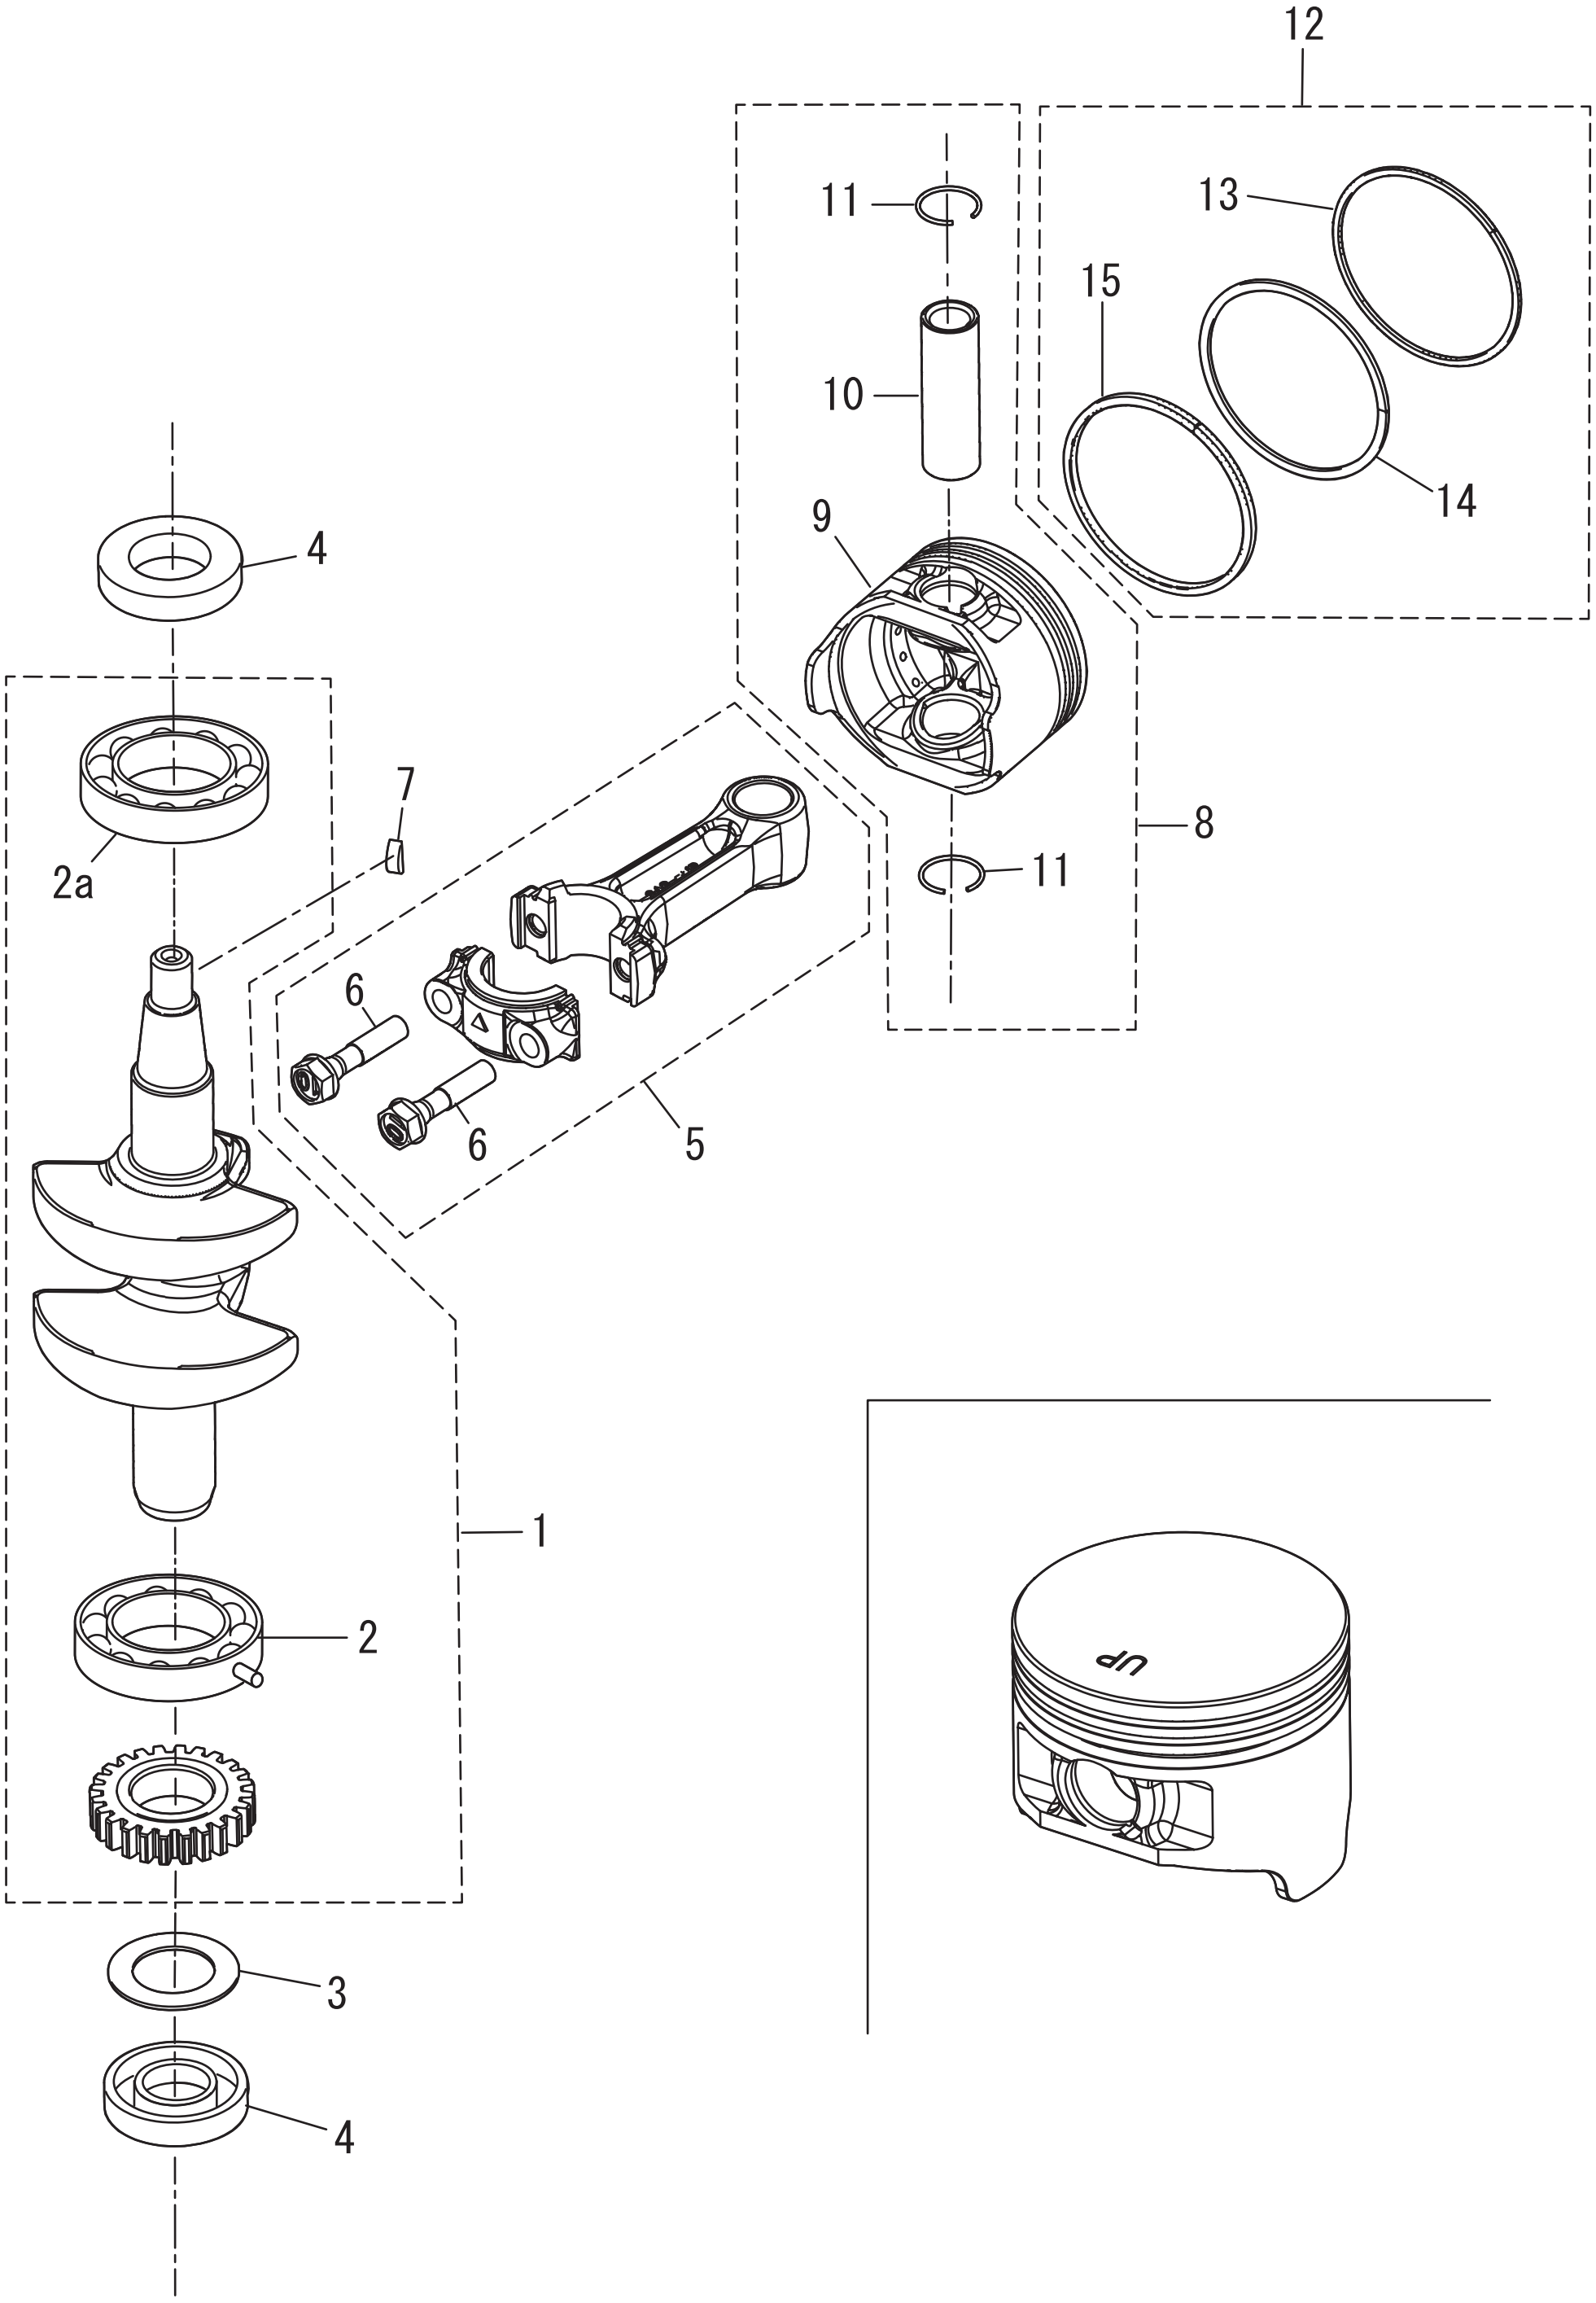

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
2-1		3AB-00070-1	CRANKSHAFT ASSY W/GEAR ｸﾗﾝｸｼｬﾌﾄｱｯｼ W/ｷﾞﾔ	1	1	1	
2-2		9603-3-6204	* BALL BEARING 6204 * ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6204	1	1	1	
2-2a		9601-3-6204	* BALL BEARING 6204 * ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6204	1	1	1	
2-3		3AB-00115-0	THRUST PLATE 20.2-32-1 ｽﾗｽﾄﾌﾟﾚｰﾄ 20.2-32-1	1	1	1	
2-4		3AB-00121-0	OIL SEAL 20-35-7 ｵｲﾙｼｰﾙ 20-35-7	2	2	2	
2-5		3AB-00040-2	CONNECTING ROD ASSY ｺﾝﾛｯﾄﾞｱｯｼ	1	1	1	
2-6		3AB-00059-0	* CONNECTING ROD BOLT * ｺﾝﾛｯﾄﾞﾎﾞﾙﾄ	2	2	2	
2-7		309-00131-0	KEY 10-3.7-3 ｷｰ 10-3.7-3	1	1	1	
2-8		3GT-87130-0	PISTON REPAIR KIT ﾋﾟｽﾄﾝﾘﾍﾟｱｷｯﾄ	1	1	1	
2-9		3AB-00001-1	* PISTON * ﾋﾟｽﾄﾝ	1	1	1	
2-10		332-00021-1	* PISTON PIN * ﾋﾟｽﾄﾝﾋﾟﾝ	1	1	1	
2-11		350-00024-1	* PISTON PIN CLIP * ﾋﾟｽﾄﾝﾋﾟﾝｸﾘｯﾌﾟ	2	2	2	
2-12		3FK-87123-0	PISTON RING SET ﾋﾟｽﾄﾝﾘﾝｸﾞｾｯﾄ	1	1	1	
2-13		3V1-00011-0	* PISTON RING * ﾋﾟｽﾄﾝﾘﾝｸﾞ	1	1	1	1st
2-14		3V1-00012-0	* PISTON RING * ﾋﾟｽﾄﾝﾘﾝｸﾞ	1	1	1	2nd
2-15		3V1-00013-0	* PISTON RING-OIL * ﾋﾟｽﾄﾝﾘﾝｸﾞ ｵｲﾙ	1	1	1	Oil

Fig. 3 **OIL PAN**
オイルパン

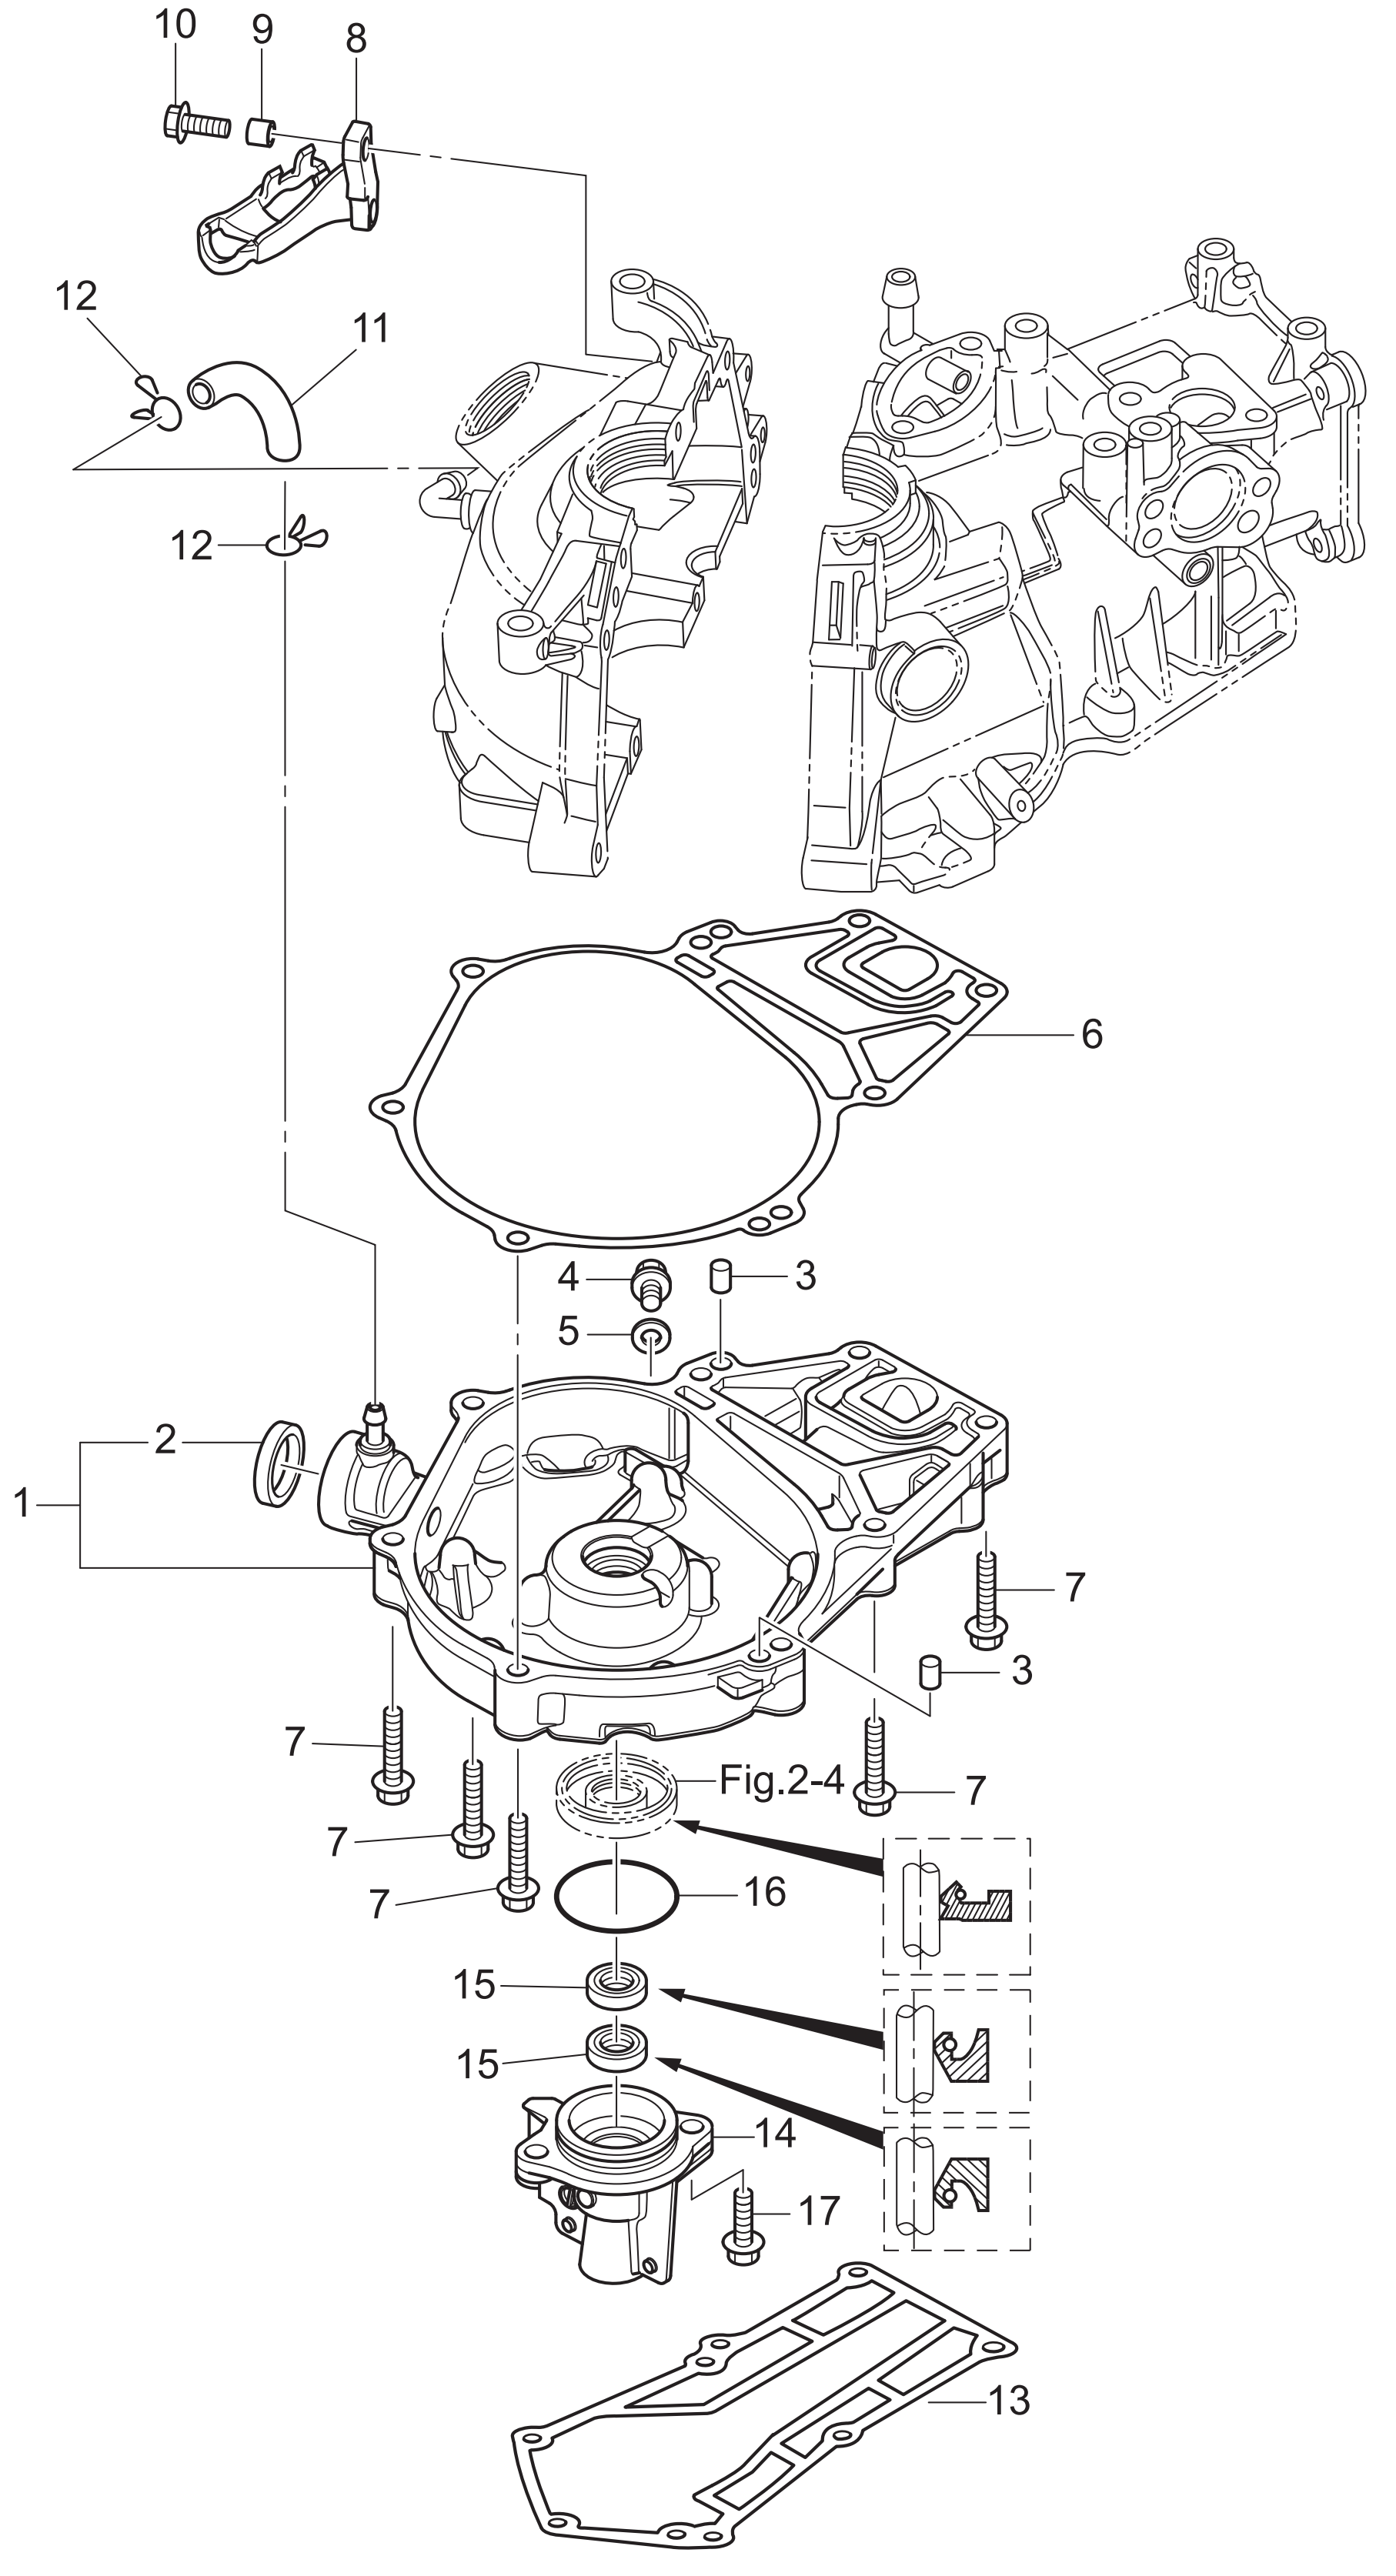

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
3-1		3ABB07400-0	OILPAN ASSY ｵｲﾙﾊﾟﾝｱｯｼ	1	1	1	
3-2		3AB-07421-0	* OIL SIGHT GAUGE * ｵｲﾙｻｲﾄｹﾞｰｼﾞ	1	1	1	
3-3		345-01111-0	DOWEL PIN 6-12 ﾀﾞｳｪﾙﾋﾟﾝ 6-12	2	2	2	
3-4		3H6-07705-1	DRAIN BOLT 10-14 P1.25 ﾄﾞﾚﾝﾎﾞﾙﾄ 10-14 P1.25	1	1	1	
3-5		3H6-07406-0	WASHER 10.2-19-1 ﾜｯｼｬ 10.2-19-1	1	1	1	
3-6		3AB-07402-0	OILPAN GASKET ｵｲﾙﾊﾟﾝｶﾞｽｹｯﾄ	1	1	1	
3-7		9101F4-5635	BOLT ﾎﾞﾙﾄ	8	8	8	
3-8		3GT-05101-0	BRACKET ﾌﾞﾗｹｯﾄ ｽﾄｯﾊﾟ	1	1	1	
3-9		3A0-76079-0	COLLAR 6.2-9-7.4 ｶﾗｰ 6.2-9-7.4	2	2	2	
3-10		910103-5620	BOLT ﾎﾞﾙﾄ	2	2	2	
3-11		98AB-50-080	HOSE ﾎｰｽ	1	1	1	98AB-501000
3-12		338-02215-0	CLIP φ10 ｸﾘｯﾌﾟ φ10	2	2	2	
3-13		3AB-61012-0	DRIVE SHAFT HOUSING GASKET ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞｶﾞｽｹｯﾄ	1	1	1	
3-14		3AB-01210-0	CRANKCASE HEAD ｸﾗﾝｸｹｰｽﾍｯﾄﾞ	1	1	1	
3-15		3AB-01215-0	OIL SEAL 10.1-20-7 ｵｲﾙｼｰﾙ 10.1-20-7	2	2	2	
3-16		3V1-02012-0	O-RING 2.4-35.2 Oﾘﾝｸﾞ 2.4-35.2	1	1	1	
3-17		9101E3-5620	BOLT ﾎﾞﾙﾄ	2	2	2	

Fig. 4 **INTAKE MANIFOLD・CARBURETOR**
インテークマニホールド・キャブレタ

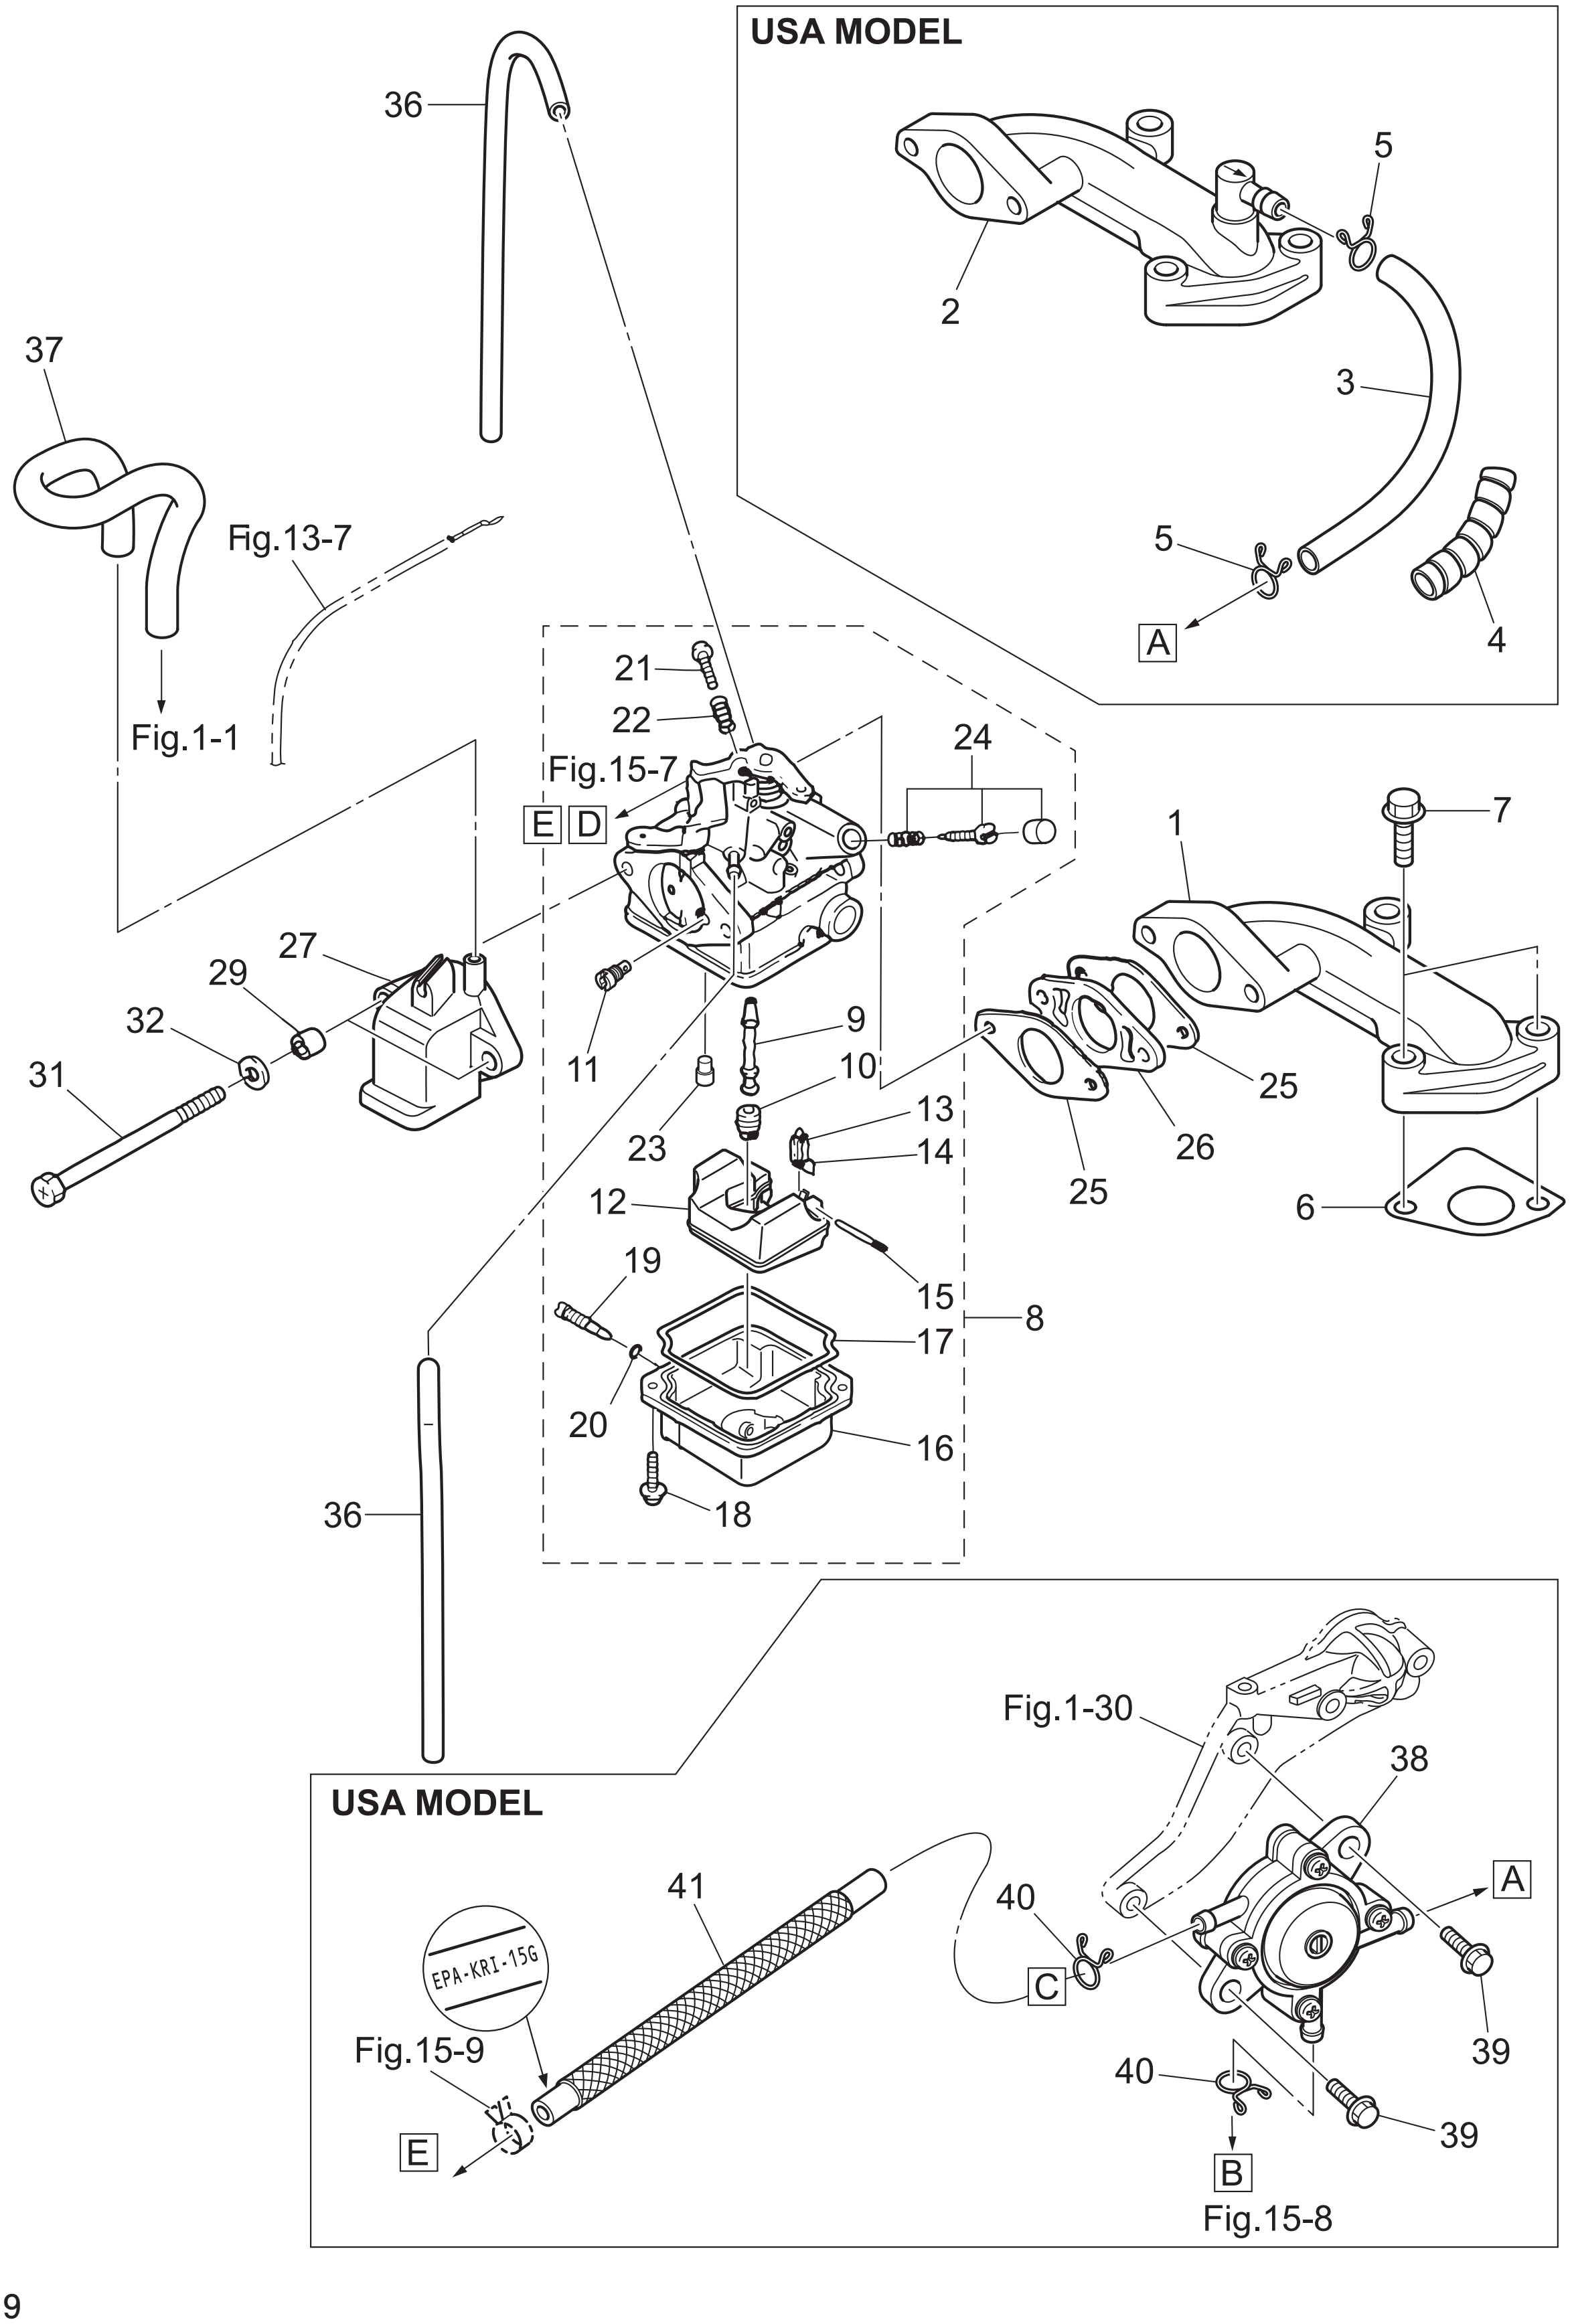

Ref.No. 見出番号		Part No. 部品番号	Description 部品名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備考
4-1		3BRB02091-1	INTAKE MANIFOLD ｲﾝﾃｰｸﾏﾆﾎｰﾙﾄﾞ	1	1	1	STD
4-2		3GTB02010-1	INTAKE MANIFOLD ASSY ｲﾝﾃｰｸﾏﾆﾎｰﾙﾄﾞｱｯｼ		1	1	Nipple for USA Model
4-3		98AB-70-185	HOSE ﾎｰｽ		1	1	for USA Model 98AB-701000
4-4		3V1-76148-0	SPIRAL TUBE PROTECTOR φ10-100 ｽﾊﾟｲﾗﾙﾁｭｰﾌﾞﾌﾟﾛﾃｸﾀ φ10-100		1	1	for USA Model
4-5		3C7-02215-0	CLIP φ12 ｸﾘｯﾌﾟ φ12		2	2	for USA Model
4-6		3AB-02104-0	INTAKE MANIFOLD GASKET ｲﾝﾃｰｸﾏﾆﾎｰﾙﾄﾞｶﾞｽｹｯﾄ	1	1	1	
4-7		9101F4-5630	BOLT ﾎﾞﾙﾄ	2	2	2	
4-8	1	3GT-03200-0	CARBURETOR ASSY ｷｬﾌﾞﾚﾀｱｯｼ	1			2ps Mark 3GTA
4-8	2	3WD-03200-0	CARBURETOR ASSY ｷｬﾌﾞﾚﾀｱｯｼ		1		2.5ps Mark 3WDA
4-8	3	3WE-03200-0	CARBURETOR ASSY ｷｬﾌﾞﾚﾀｱｯｼ			1	3.5ps Mark 3WEA
4-9	1	3GT-03252-0	* MAIN NOZZLE * ﾒｲﾝﾉｽﾞﾙ	1			
4-9	2	3GU-03252-0	* MAIN NOZZLE * ﾒｲﾝﾉｽﾞﾙ		1		
4-9	3	3R4-03252-0	* MAIN NOZZLE * ﾒｲﾝﾉｽﾞﾙ			1	
4-10	1	3DJ-04458-0	* MAIN JET (#58) * ﾒｲﾝｼﾞｪｯﾄ (#58)	1			
4-10	2	3R1-03251-0	* MAIN JET (#65) * ﾒｲﾝｼﾞｪｯﾄ (#65)		1		
4-10	3	3AU-04468-0	* MAIN JET (#68) * ﾒｲﾝｼﾞｪｯﾄ (#68)			1	
4-11	1	3GT-04915-0	* SLOW AIR JET (#115) * ｽﾛｰｴｱｼﾞｪｯﾄ (#115)	1			
4-11	2	3GT-04925-0	* SLOW AIR JET (#125) * ｽﾛｰｴｱｼﾞｪｯﾄ (#125)		1		
4-11	3	3GU-04930-0	* SLOW AIR JET (#130) * ｽﾛｰｴｱｼﾞｪｯﾄ (#130)			1	
4-12		3GT-03231-0	* FLOAT * ﾌﾛｰﾄ	1	1	1	
4-13		3H6-03240-0	* FLOAT VALVE * ﾌﾛｰﾄﾊﾞﾙﾌﾞ	1	1	1	
4-14		3H6-03244-0	* CLIP * ｸﾘｯﾌﾟ	1	1	1	
4-15		3H6-03232-0	* FLOAT ARM PIN * ﾌﾛｰﾄｱｰﾑﾋﾟﾝ	1	1	1	
4-16		3GT-03221-0	* FLOAT CHAMBER * ﾌﾛｰﾄﾁｬﾝﾊﾞ	1	1	1	
4-17		3H6-03222-0	* FLOAT CHAMBER O-RING * ﾌﾛｰﾄﾁｬﾝﾊﾞOﾘﾝｸﾞ	1	1	1	
4-18		922503-6412	* SCREW * ｽｸﾘｭ	2	2	2	
4-19		3H6-03292-0	* DRAIN SCREW * ﾄﾞﾚﾝｽｸﾘｭ	1	1	1	
4-20		3H6-03293-0	* O-RING * Oﾘﾝｸﾞ ﾄﾞﾚﾝｽｸﾘｭ	1	1	1	
4-21		3AB-03265-0	* STOP SCREW * ｽﾄｯﾌﾟｽｸﾘｭ	1	1	1	

Fig. 4 INTAKE MANIFOLD・CARBURETOR
インテークマニホールド・キャブレタ

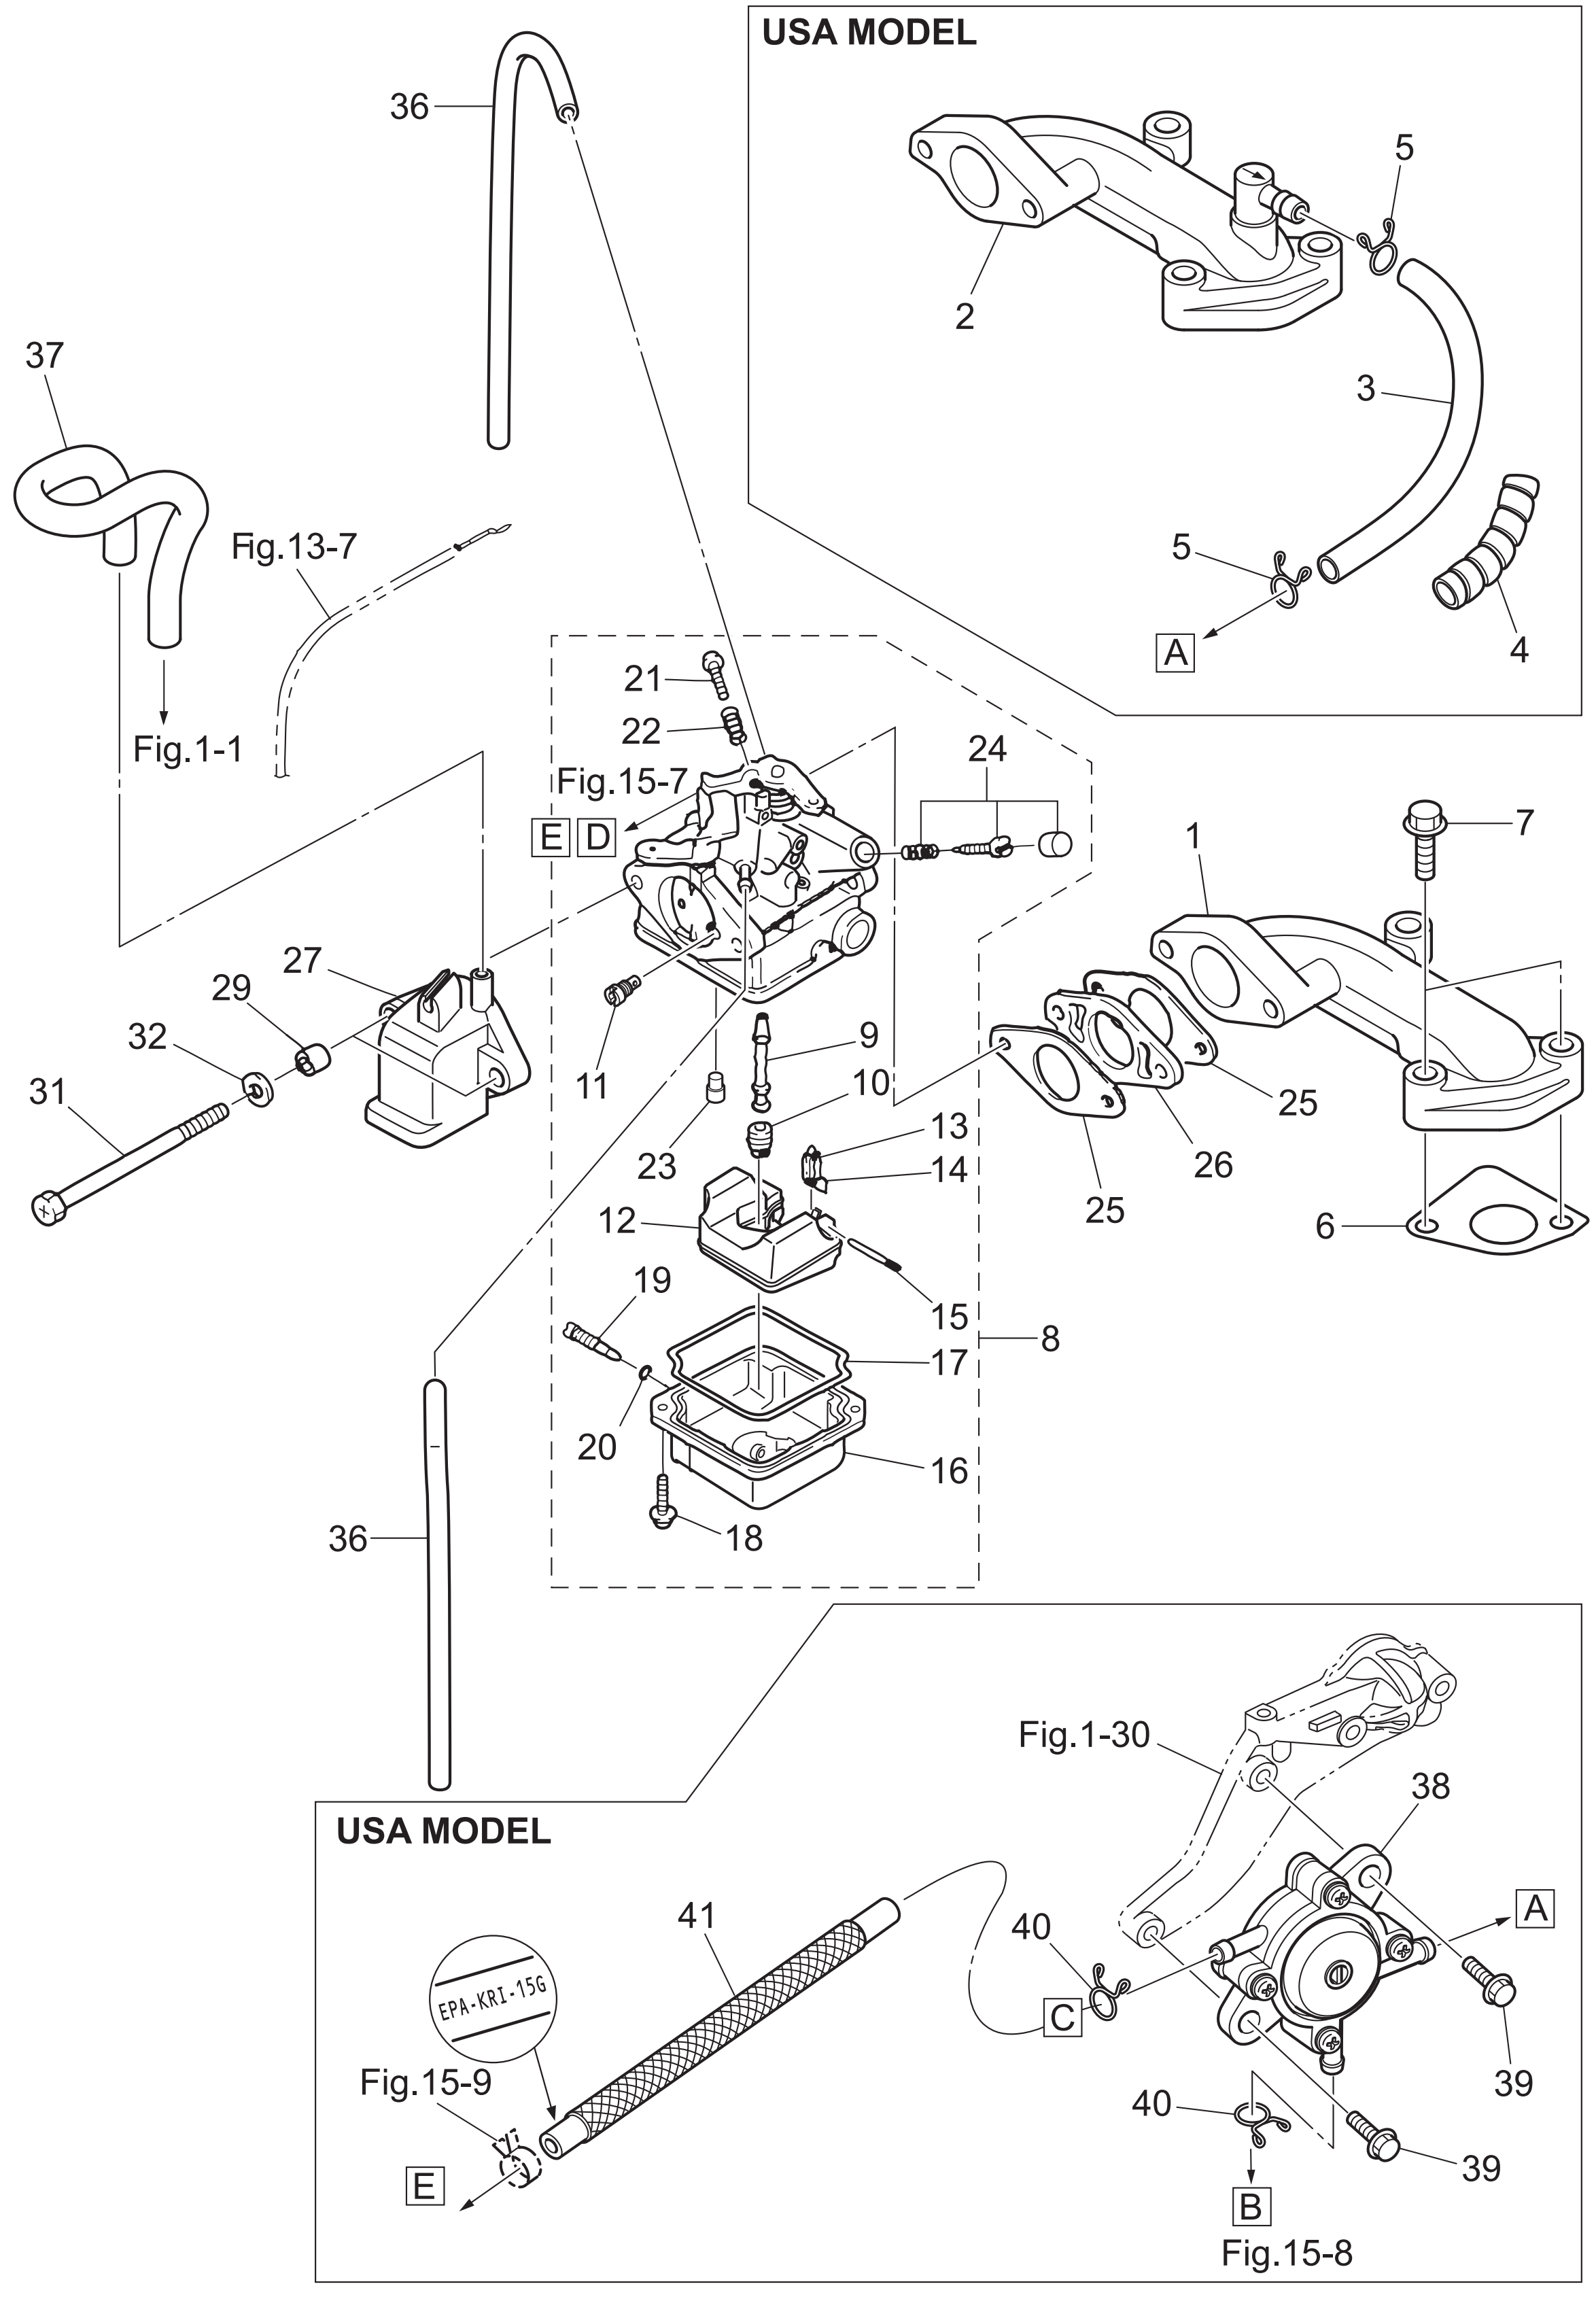

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
4-22		3H6-03267-0	* SPRING * ｽﾌﾟﾘﾝｸﾞ ｽﾄｯﾌﾟｽｸﾘｭ	1	1	1	
4-23		3GT-03256-0	* RUBBER CAP * ﾗﾊﾞｰｷｬｯﾌﾟ	1	1	1	
4-24	1	3AB-03266-0	* PILOT SCREW * ﾊﾟｲﾛｯﾄｽｸﾘｭ	1		1	
4-24	2	3AS-03266-0	* PILOT SCREW * ﾊﾟｲﾛｯﾄｽｸﾘｭ		1		
4-25		3H6-02011-0	CARBURETOR GASKET ｷｬﾌﾞﾚﾀｶﾞｽｹｯﾄ	2	2	2	
4-26		3H6-03952-1	INSULATOR ｲﾝｼｭﾚｰﾀ	1	1	1	
4-27		3GR-02409-0	INTAKE SILENCER ASSY ｲﾝﾃｰｸｻｲﾚﾝｻｱｯｼ	1	1	1	
4-29		3A0-76079-0	COLLAR 6.2-9-7.4 ｶﾗｰ 6.2-9-7.4	2	2	2	
4-31		9161F1-0685	BOLT ﾎﾞﾙﾄ	2	2	2	
4-32		940103-0600	WASHER ﾜｯｼｬ	2	2	2	
4-36		98AB-30-230	HOSE ﾎｰｽ	2	2	2	98AB-301000
4-37		3AB-07435-0	BREATHER HOSE ﾌﾞﾘｰｻﾞﾎｰｽ	1	1	1	
4-38		3GT-04000-0	FUEL PUMP ASSY ﾌｭｴﾙﾎﾟﾝﾌﾟｱｯｼ		1	1	for USA Model
4-39		910103-5620	BOLT ﾎﾞﾙﾄ		2	2	for USA Model
4-40		338-02215-0	CLIP φ10 ｸﾘｯﾌﾟ φ10		2	2	for USA Model
4-41		3GT-02161-0	FUEL HOSE W/PROTECTOR L=390 ﾌｭｴﾙﾎｰｽ W/ﾌﾟﾛﾃｸﾀ L=390		1	1	Fuel Pump-Carburetor USA EPA-KRI-15G

Fig. 5 THROTTLE
スロットル

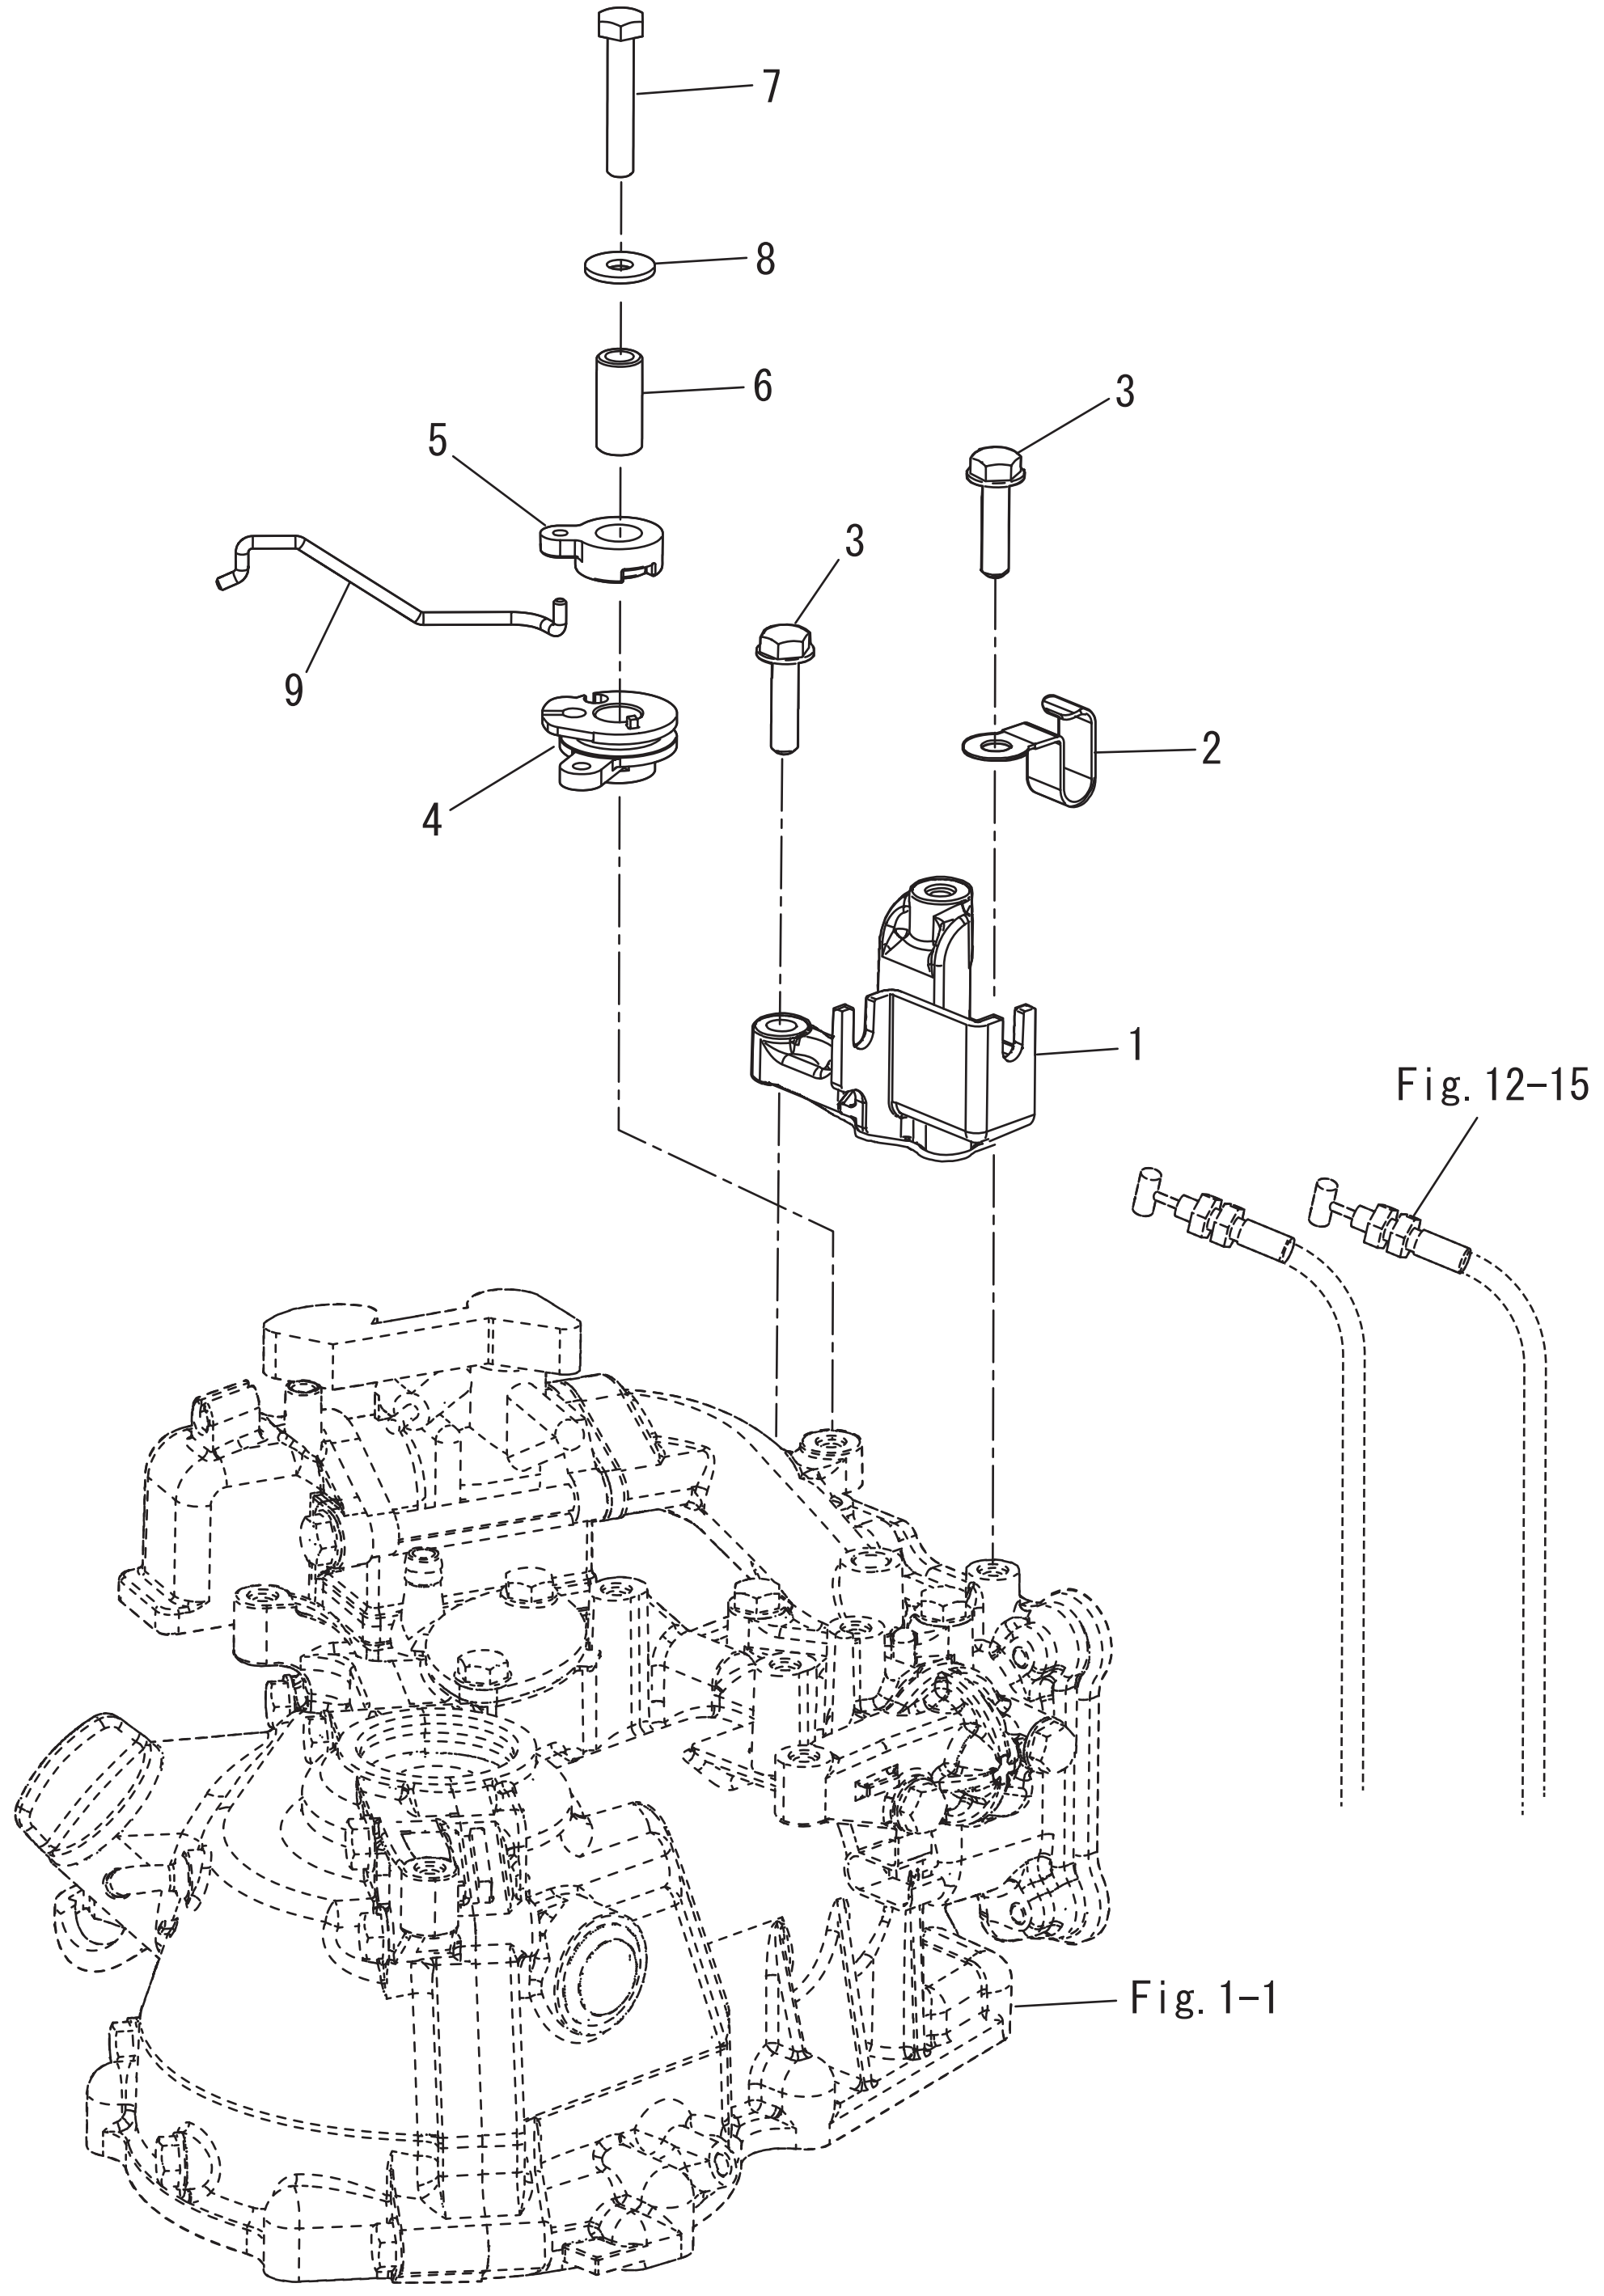

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	 MFS2.5C	 MFS3.5C	Remarks 備 考
5-1		3ABB63508-0	THROTTLE WIRE BRACKET ｽﾛｯﾄﾙﾜｲﾔﾌﾞﾗｹｯﾄ	1	1	1	
5-2		398-06972-0	CLAMP 6.5-67P ｸﾗﾝﾌﾟ 6.5-67P	1	1	1	
5-3		910103-5625	BOLT ﾎﾞﾙﾄ	2	2	2	
5-4		3H6-63611-0	THROTTLE DRUM ｽﾛｯﾄﾙﾄﾞﾗﾑ	1	1	1	
5-5		3H6-63612-0	THROTTLE OPENER ｽﾛｯﾄﾙｵｰﾌﾟﾅ	1	1	1	
5-6		3H6-63618-0	COLLAR 6.5-10.5-22.6 ｶﾗｰ ﾄﾞﾗﾑ	1	1	1	
5-7		910103-0635	BOLT ﾎﾞﾙﾄ	1	1	1	
5-8		3C8-66308-0	WASHER 6-16-1.5 ﾜｯｼｬ 6-16-1.5	1	1	1	
5-9		3AB-63617-0	THROTTLE ROD ｽﾛｯﾄﾙﾛｯﾄﾞ	1	1	1	

Fig. 6 **RECOIL STARTER**
リコイルスタータ

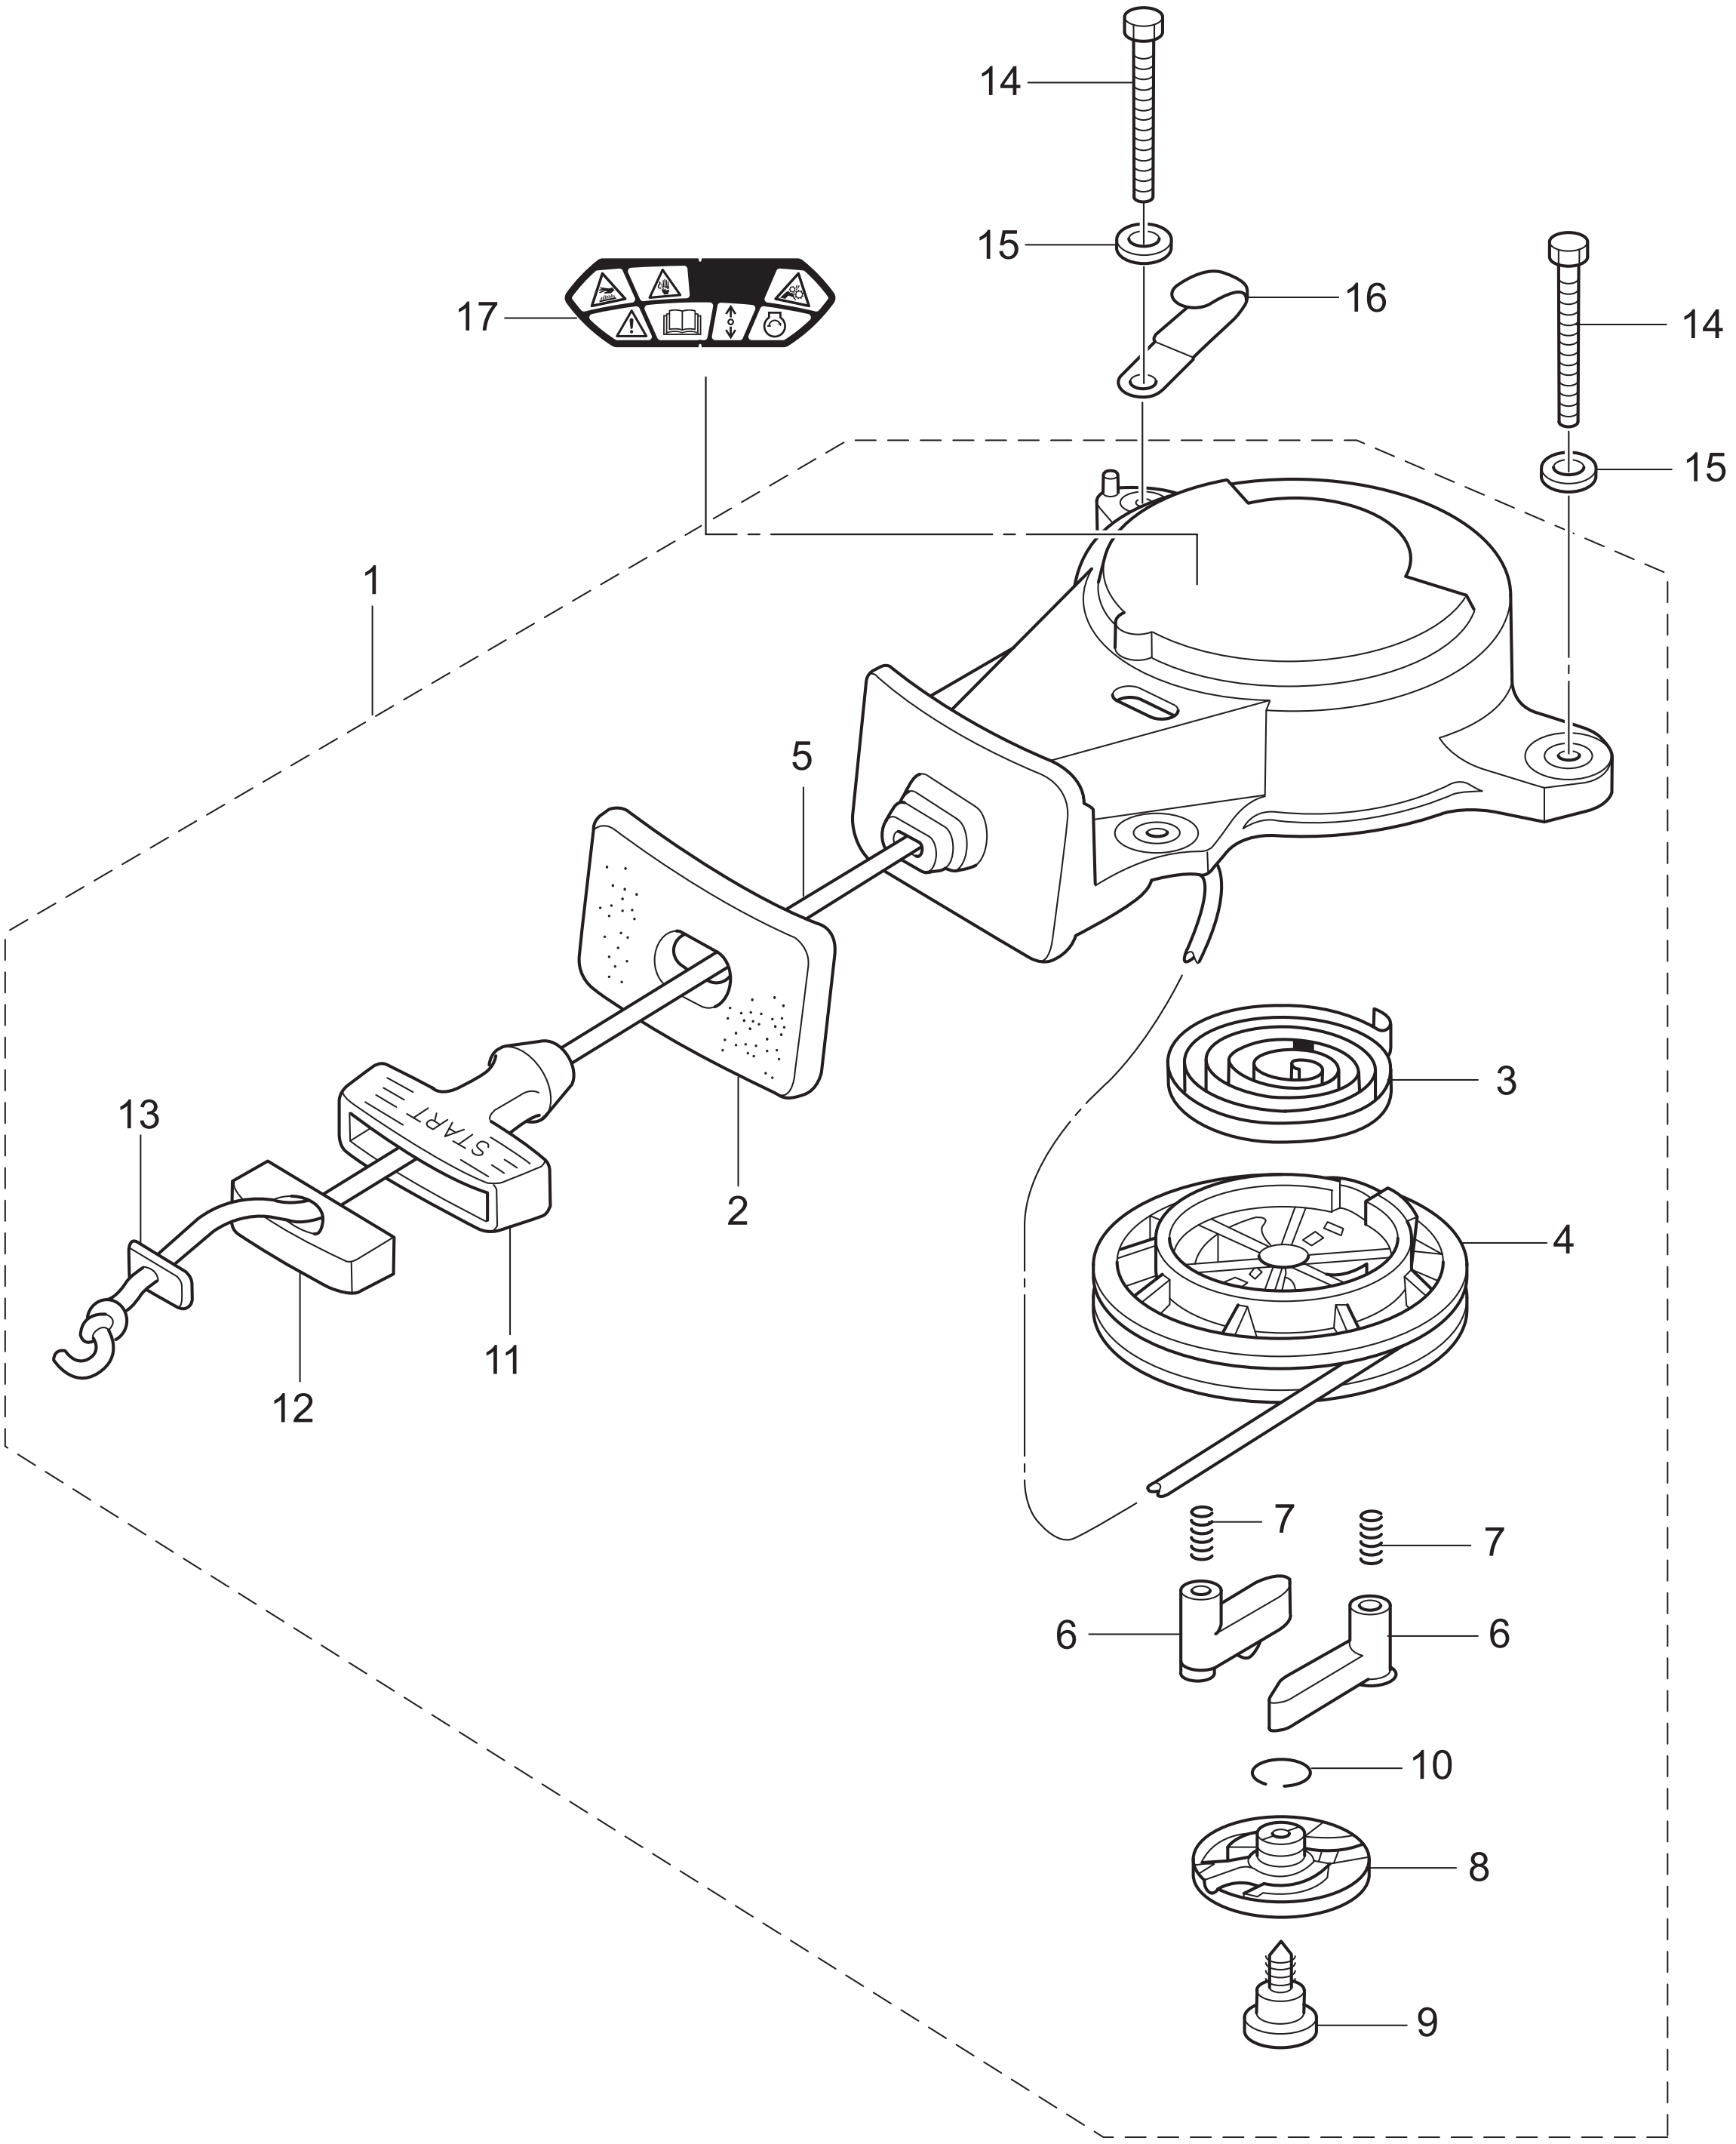

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
6-1		3AB-05090-0	RECOIL STARTER ASSY ﾘｺｲﾙｽﾀｰﾀｱｯｼ	1	1	1	
6-2		3AA-67503-0	* STARTER SEAL * ｽﾀｰﾀｼｰﾙ	1	1	1	
6-3		3AB-05004-0	* STARTER SPRING * ｽﾀｰﾀｽﾌﾟﾘﾝｸﾞ	1	1	1	
6-4		3AB-05104-0	* REEL * ﾘｰﾙ	1	1	1	
6-5		3AB-05013-0	* STARTER ROPE φ3.5-1200 * ｽﾀｰﾀﾛｰﾌﾟ φ3.5-1200	1	1	1	
6-6		3AB-05003-0	* RATCHET * ﾗﾁｪｯﾄ	2	2	2	
6-7		3AB-05012-0	* RETURN SPRING * ﾘﾀｰﾝｽﾌﾟﾘﾝｸﾞ	2	2	2	
6-8		3AB-05006-0	* FRICTION PLATE * ﾌﾘｸｼｮﾝﾌﾟﾚｰﾄ	1	1	1	
6-9		3AB-05138-0	* BOLT * ﾎﾞﾙﾄ	1	1	1	
6-10		3AB-05007-0	* FRICTION SPRING * ﾌﾘｸｼｮﾝｽﾌﾟﾘﾝｸﾞ	1	1	1	
6-11		3AB-05019-0	* STARTER HANDLE * ｽﾀｰﾀﾊﾝﾄﾞﾙ	1	1	1	
6-12		3AB-05131-0	* ROPE ANCHOR * ﾛｰﾌﾟｱﾝｶ	1	1	1	
6-13		3AB-05134-0	* ROPE ANCHOR PLATE * ﾛｰﾌﾟｱﾝｶﾌﾟﾚｰﾄ	1	1	1	
6-14		3GT-60108-0	PRE-COATED BOLT 6-60 ﾌﾟﾚｺｰﾄﾎﾞﾙﾄ 6-60	3	3	3	
6-15		3C8-66308-0	WASHER 6-16-1.5 ﾜｯｼｬ 6-16-1.5	3	3	3	
6-16		398-06972-0	CLAMP 6.5-67P ｸﾗﾝﾌﾟ 6.5-67P	1	1	1	
6-17		3PA-72181-1	CAUTION DECAL (B) ｺｰｼｮﾝﾃﾞｶｰﾙ(B)		1	1	for EU Model

Fig. 7 MAGNETO
マグネト

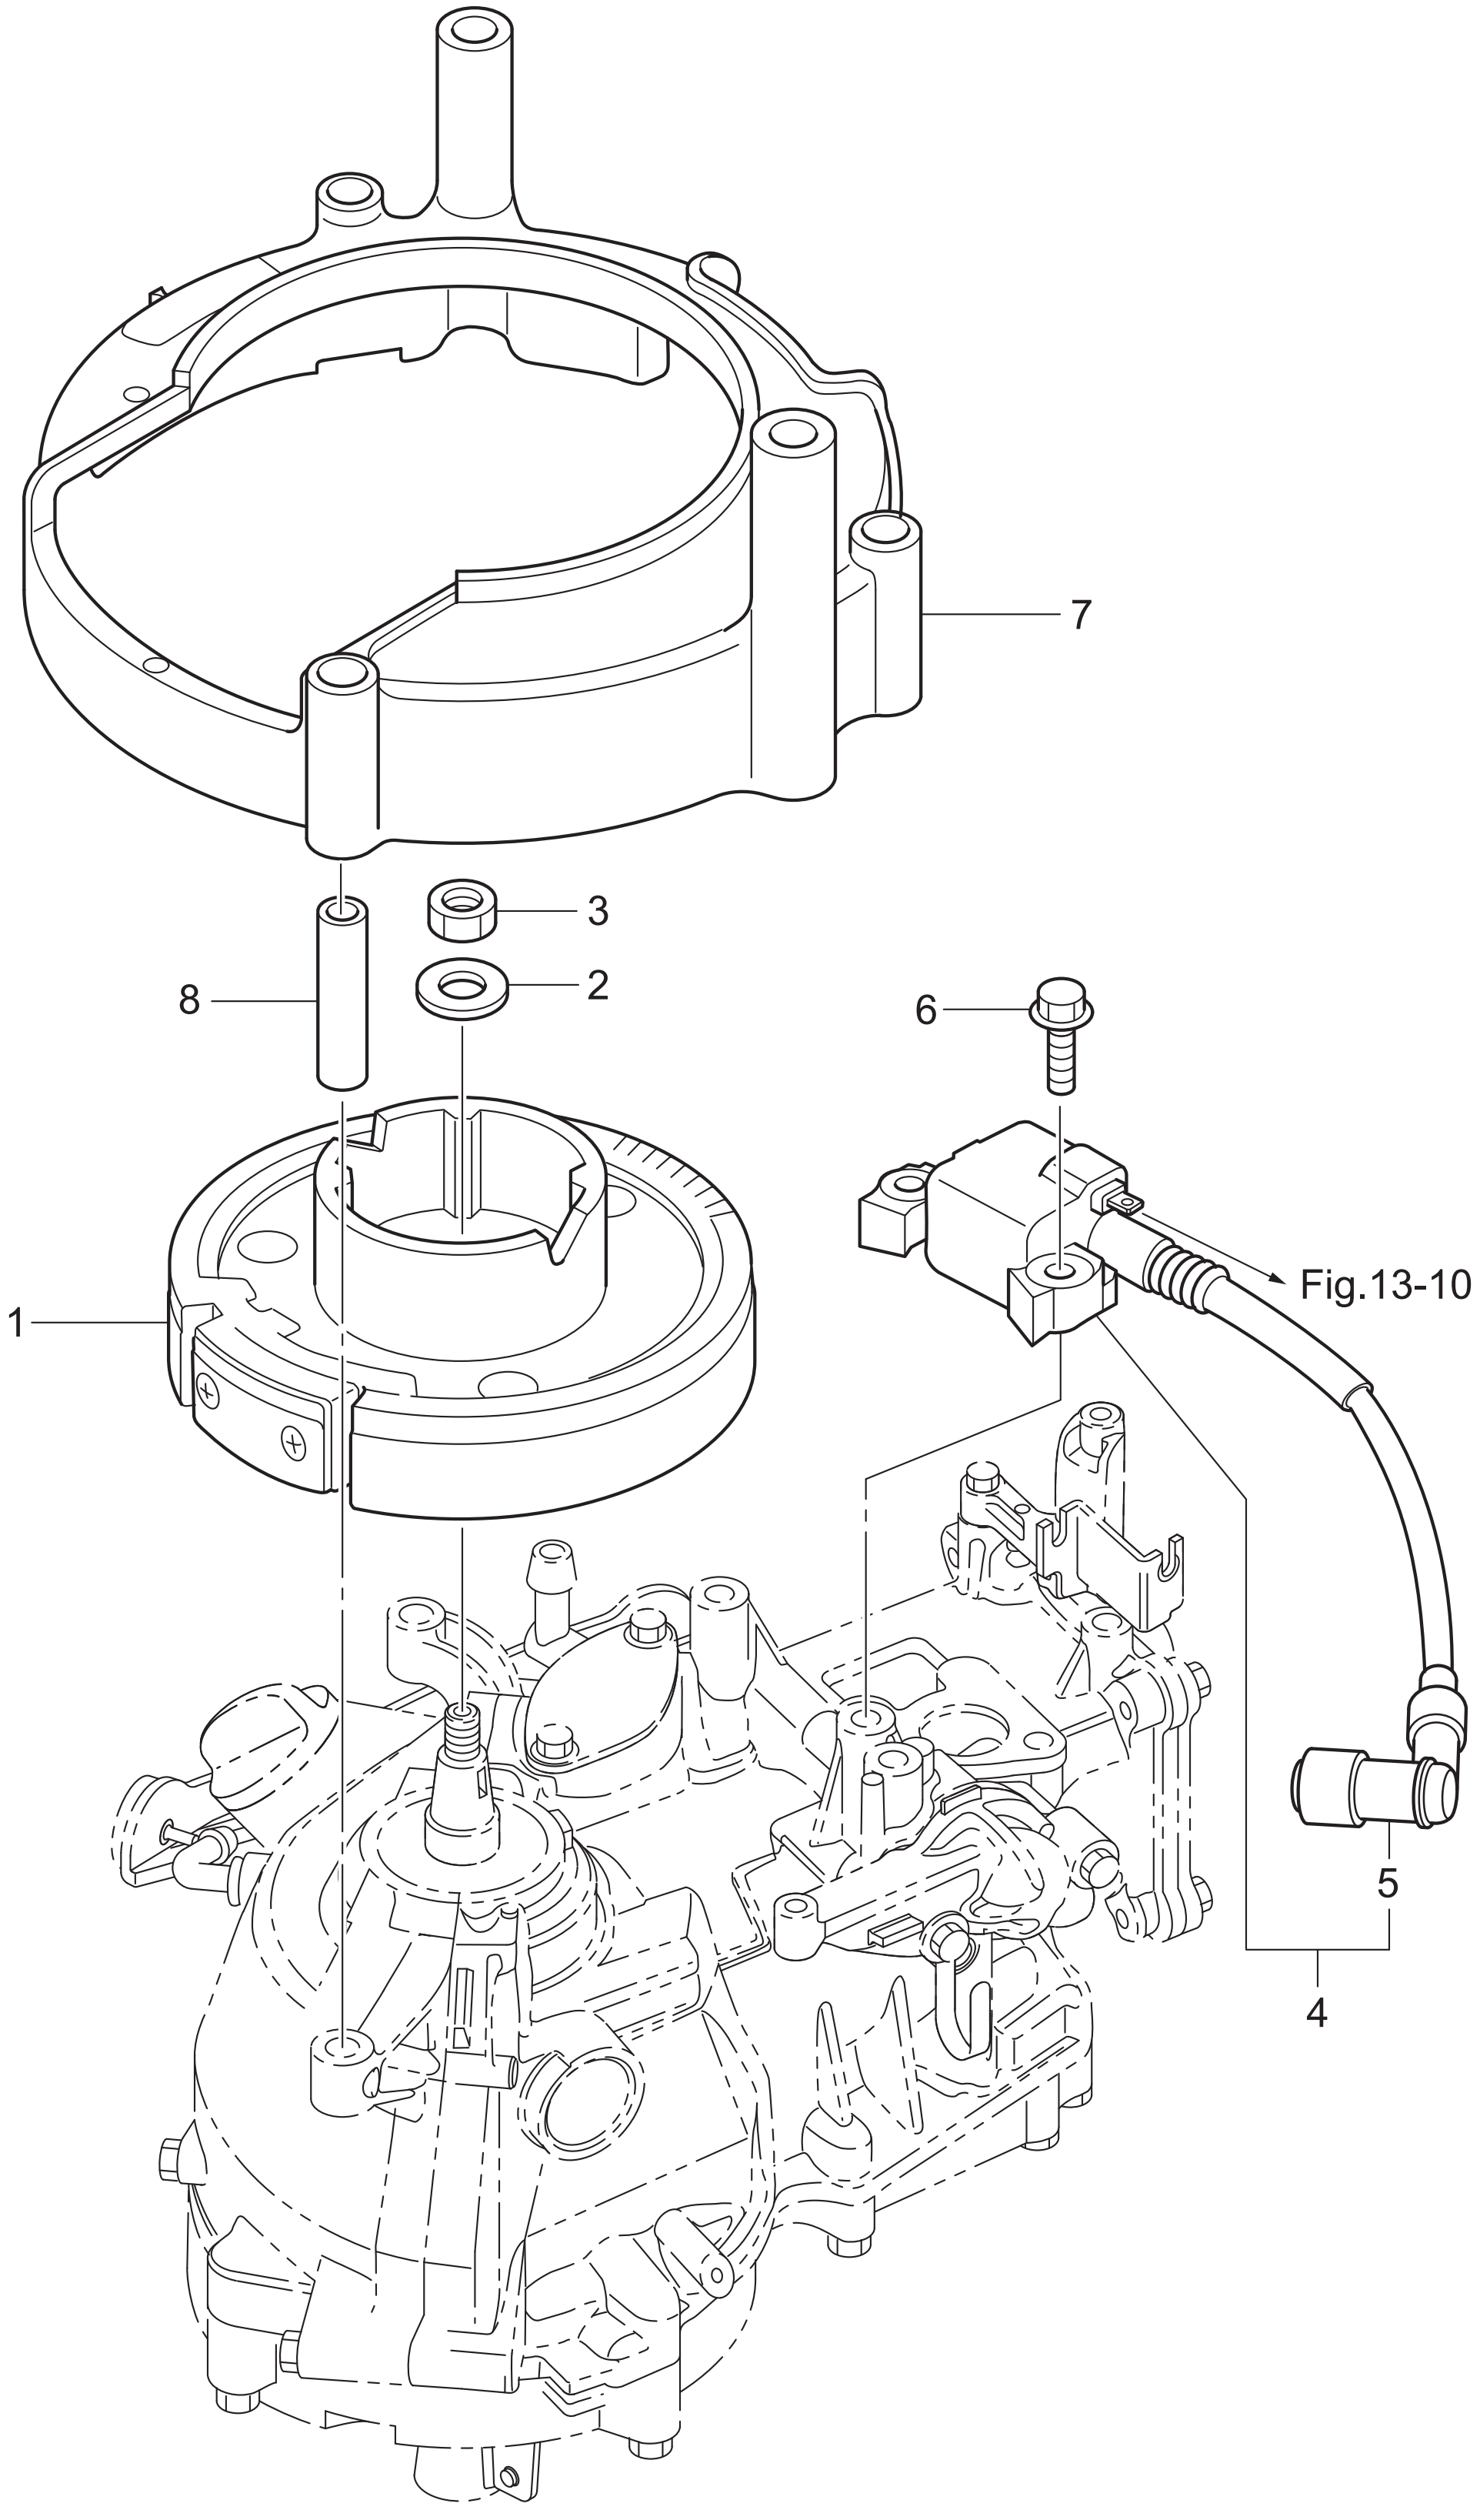

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
7-1		3GT-06001-0	FLYWHEEL ﾌﾗｲﾎｲｰﾙ	1	1	1	Mark MF5494
7-2		940121-1000	WASHER ﾜｯｼｬ	1	1	1	
7-3		309-00132-0	NUT 10-P1.25 ﾅｯﾄ 10-P1.25	1	1	1	Magneto
7-4		3GT-06041-0	IGNITER W/R-CAP ｲｸﾞﾅｲﾀ W/R-ｷｬｯﾌﾟ	1	1	1	Mark IU3123
7-5		3H6-06999-0	* PLUG CAP W/RESISTANCE * ﾌﾟﾗｸﾞｷｬｯﾌﾟ W/ﾚｼﾞｽﾀﾝｽ	1	1	1	
7-6		910103-5625	BOLT ﾎﾞﾙﾄ	2	2	2	
7-7		3AB-06300-1	RING GEAR COVER ASSY ﾘﾝｸﾞｷﾞﾔｶﾊﾞｰｱｯｼ	1	1	1	
7-8		3AB-06303-1	COLLAR 6.2-9-35 ｶﾗｰ 6.2-9-35	3	3	3	

Fig. 8 DRIVE SHAFT HOUSING
ドライブシャフトハウジング

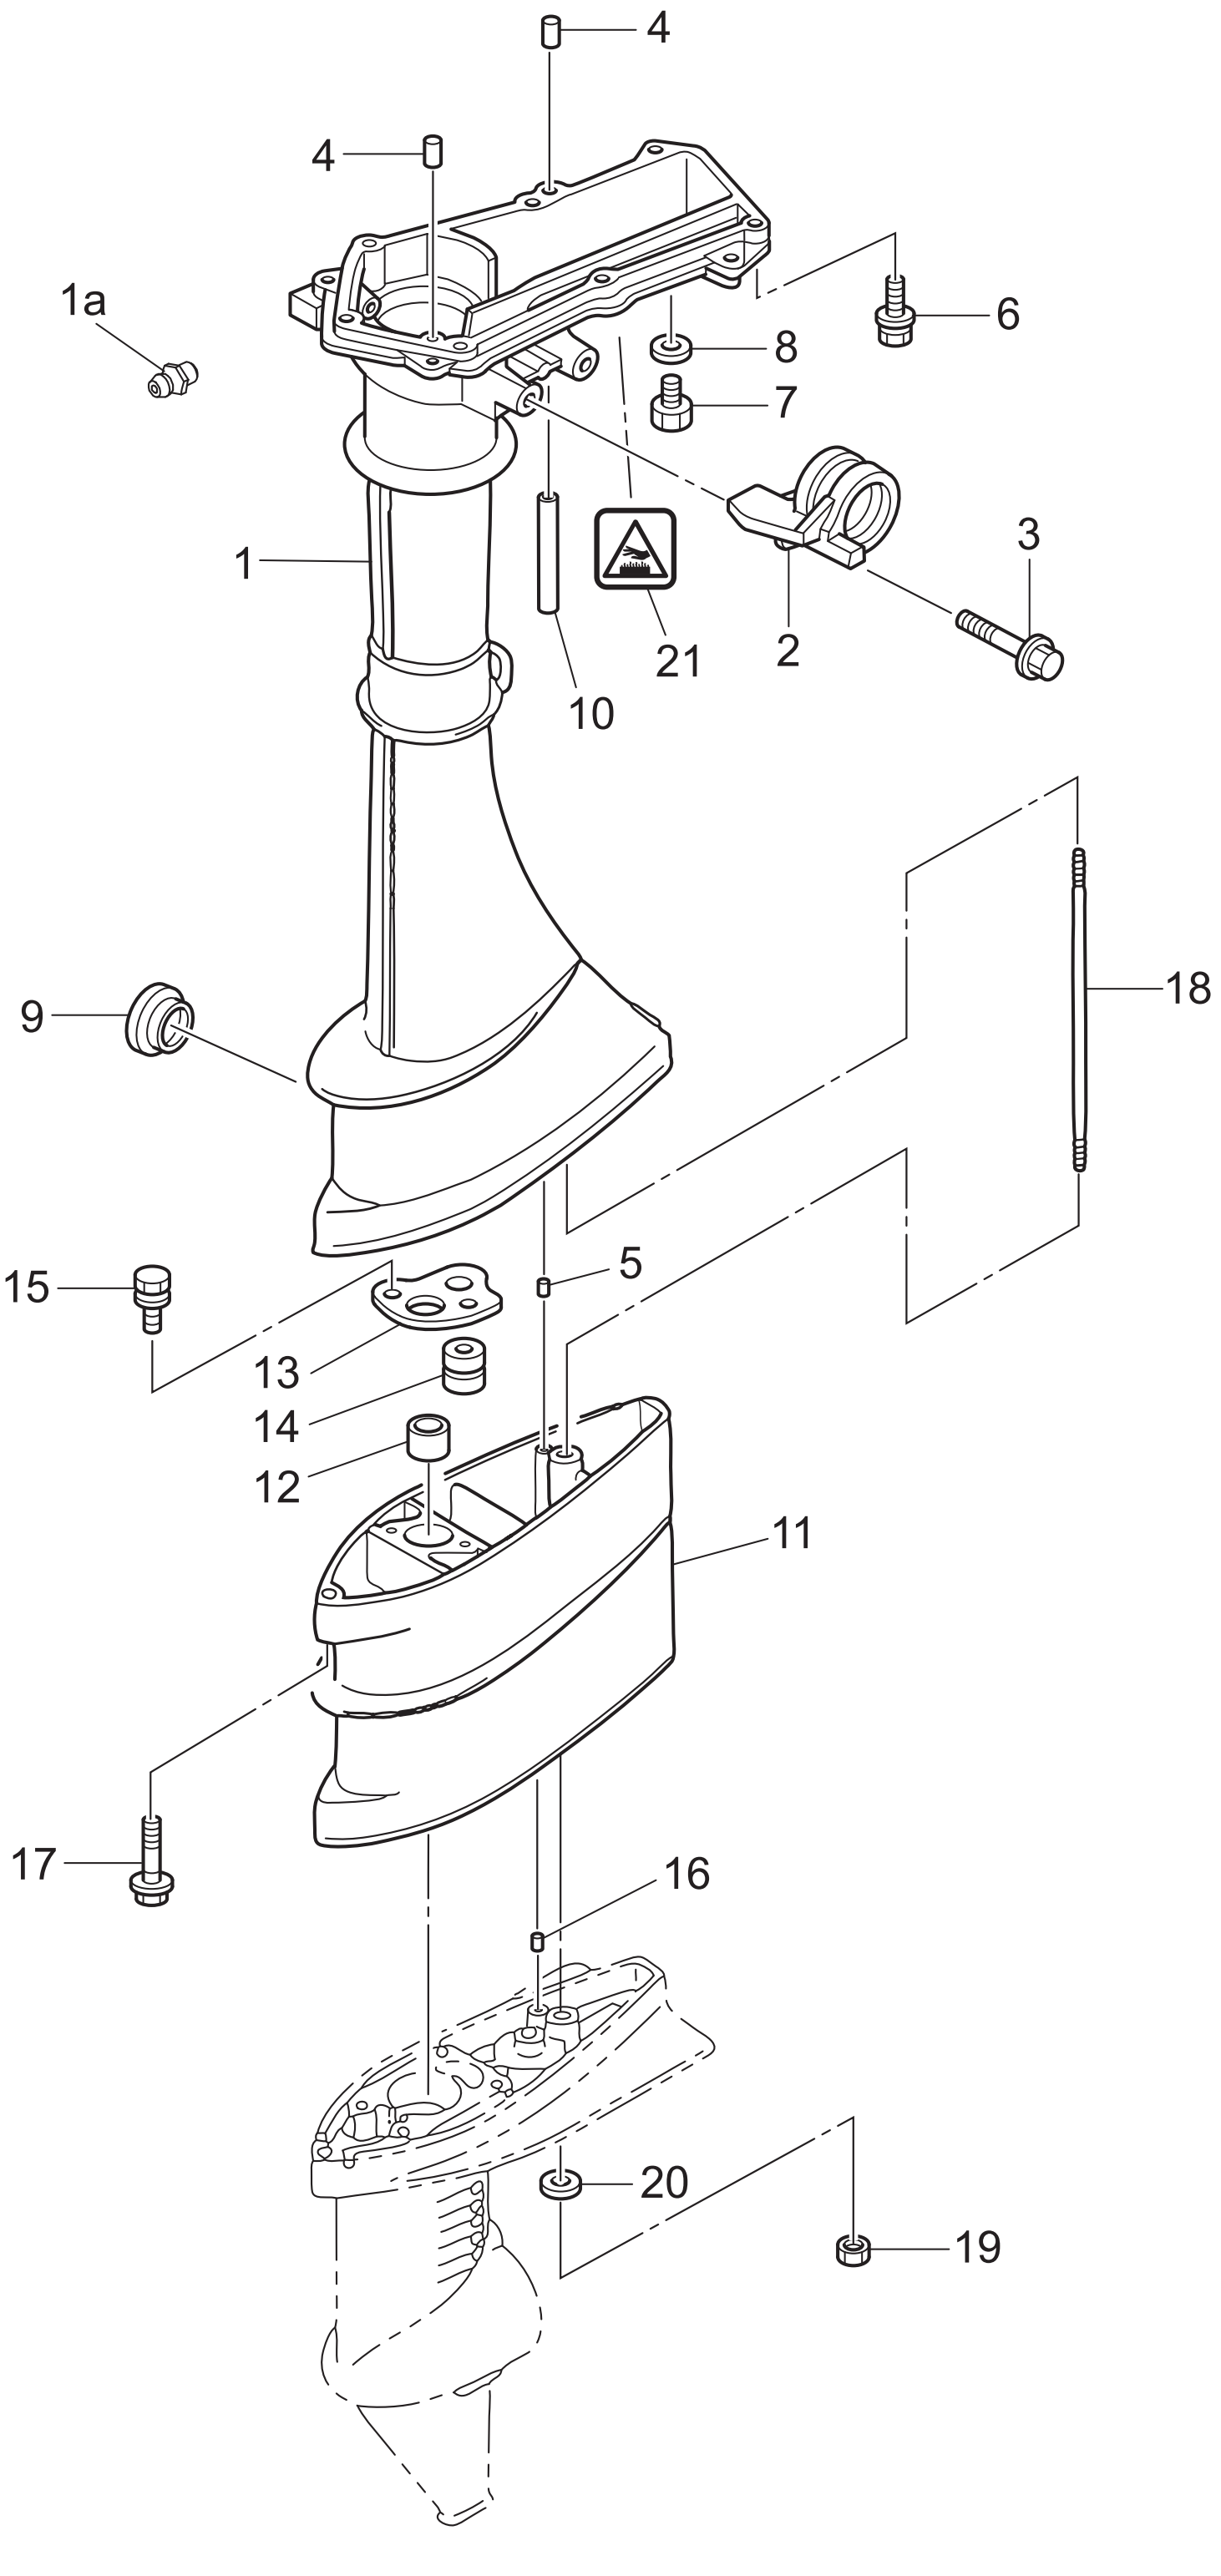

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
8-1		3ABQ61020-3	DRIVE SHAFT HOUSING ASSY (S) ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞｱｯｼ(S)	1	1	1	
8-1a		344-67177-1	GREASE FITTING ｸﾞﾘｽﾌｨｯﾃｨﾝｸﾞ	1	1	1	
8-2		3ABQ62001-1	STEERING BRACKET ｽﾃｱﾘﾝｸﾞﾌﾞﾗｹｯﾄ	1	1	1	
8-3		9101E3-5835	BOLT ﾎﾞﾙﾄ	2	2	2	
8-4		345-01111-0	DOWEL PIN 6-12 ﾀﾞｳｪﾙﾋﾟﾝ 6-12	2	2	2	
8-5		3AB-01111-0	DOWEL PIN 6-12 ﾀﾞｳｪﾙﾋﾟﾝ 6-12	1	1	1	
8-6		9101E3-5630	BOLT ﾎﾞﾙﾄ	7	7	7	
8-7		9106E3-0808	BOLT ﾎﾞﾙﾄ	1	1	1	
8-8		332-60006-1	GASKET ｶﾞｽｹｯﾄ 8.1-15-1	1	1	1	
8-9		369-61016-0	GROMMET 29-3 ｸﾞﾛﾒｯﾄ 29-3	1	1	1	
8-10		98AB-30-050	HOSE ﾎｰｽ	1	1	1	98AB-301000
8-11		3ABQ61100-0	EXTENSION HOUSING ｴｸｽﾃﾝｼｮﾝﾊｳｼﾞﾝｸﾞ	1	1	1	for Transom "L"
8-12		3AB-60003-0	DRIVE SHAFT BUSHING ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾌﾞｯｼﾝｸﾞ (ﾀﾞｰｸﾌﾞﾗｳﾝ)	1	1	1	for Transom "L"
8-13		3AB-64332-0	STOPPER ｽﾄｯﾊﾟ ﾌﾞｯｼﾝｸﾞ	1	1	1	for Transom "L"
8-14		172-36008-0	GROMMET 13-2 ｸﾞﾛﾒｯﾄ 13-2	1	1	1	for Transom "L"
8-15		9101E3-5612	BOLT ﾎﾞﾙﾄ	2	2	2	for Transom "L"
8-16		3AB-01111-0	DOWEL PIN 6-12 ﾀﾞｳｪﾙﾋﾟﾝ 6-12	1	1	1	for Transom "L"
8-17		3GU-60001-0	BOLT 6-30 ﾎﾞﾙﾄ	1	1	1	for Transom "L"
8-18		3F0-61101-1	STUD 6-171 ｽﾀｯﾄﾞ 6-171	1	1	1	for Transom "L"
8-19		9301E3-0600	NUT ﾅｯﾄ	1	1	1	for Transom "L"
8-20		9401E3-0600	WASHER ﾜｯｼｬ	1	1	1	for Transom "L"
8-21		3GR-76191-0	HIGH TEMPERATURE CAUTION DECAL ｺｰｼｮﾝﾃﾞｶｰﾙ	1	1	1	

Fig. 9 SHIFT
シフト

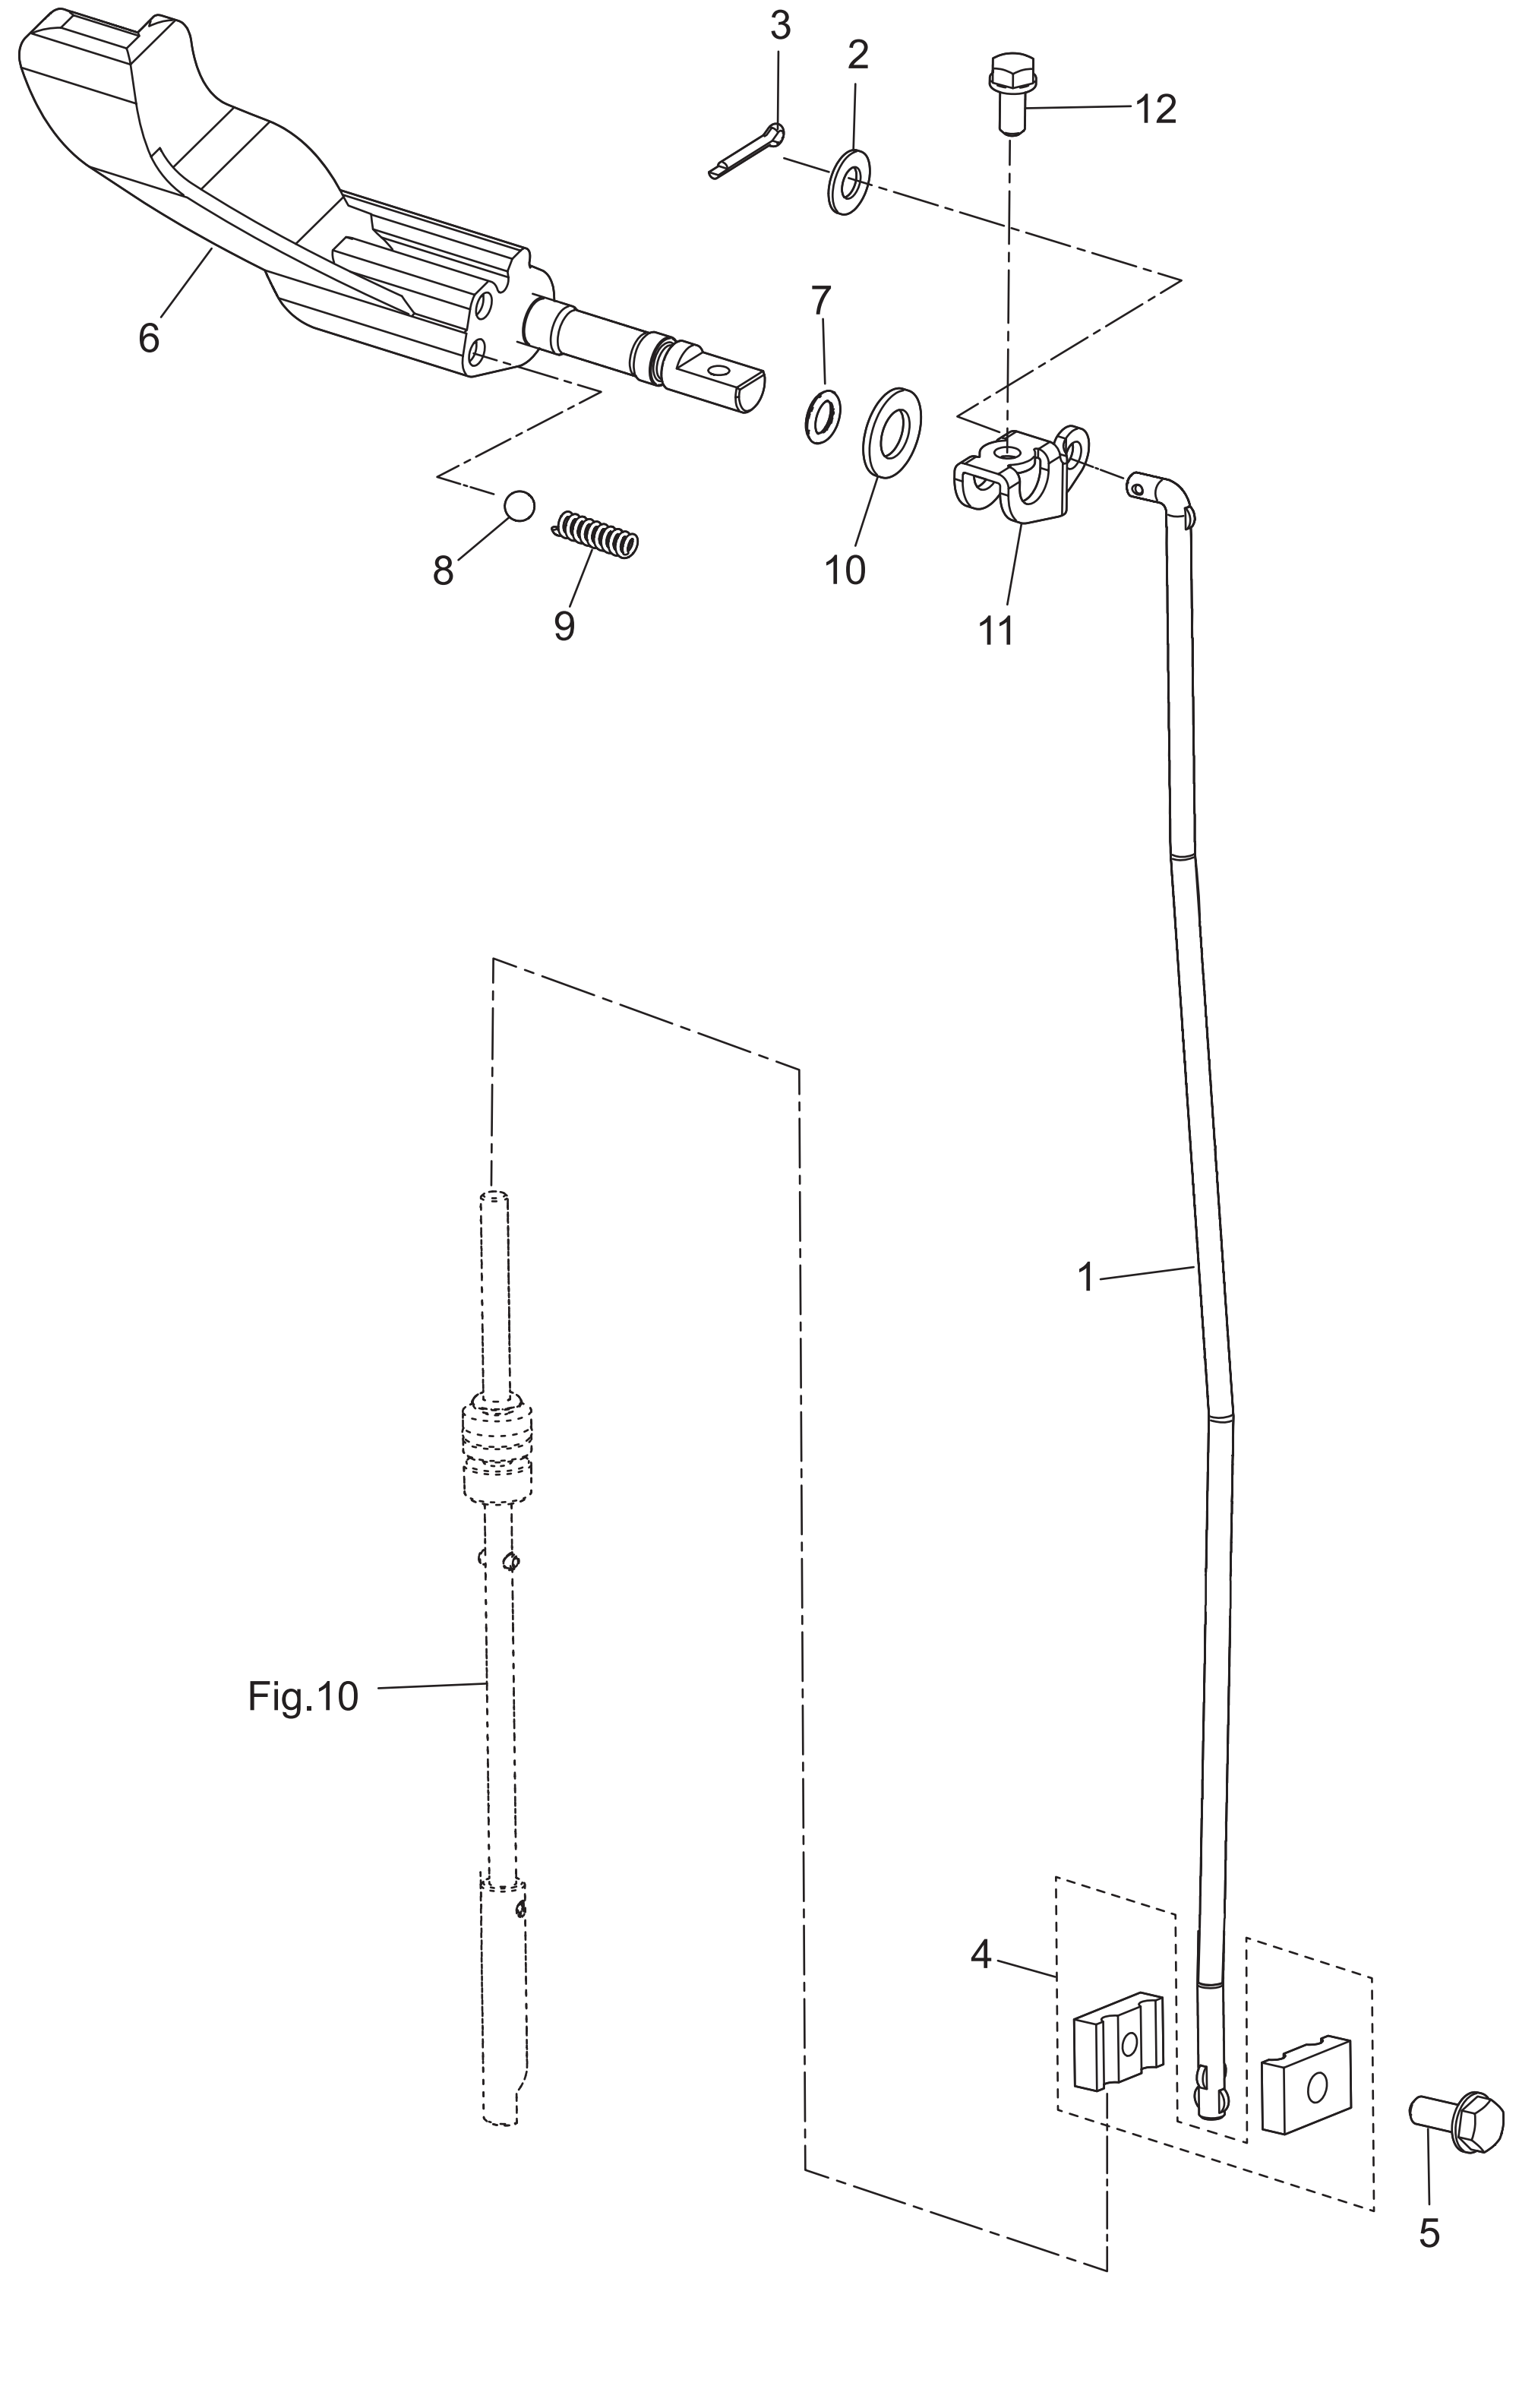

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
9-1		3AB-66214-0	SHIFT ROD (S) ｼﾌﾄﾛｯﾄﾞ (S)	1	1	1	
9-2		940103-0600	WASHER ﾜｯｼｬ	1	1	1	
9-3		951503-0212	SPLIT PIN 2-12 ｽﾌﾟﾘｯﾄﾋﾟﾝ 2-12	1	1	1	
9-4		369-66241-0	SHIFT ROD JOINT ASSY ｼﾌﾄﾛｯﾄﾞｼﾞｮｲﾝﾄｱｯｼ	1	1	1	
9-5		910103-5616	BOLT ﾎﾞﾙﾄ	1	1	1	
9-6		3AB-66130-1	SHIFT LEVER SHAFT ASSY ｼﾌﾄﾚﾊﾞｰｼｬﾌﾄｱｯｼ	1	1	1	
9-7		345-66021-0	O-RING 1.9-6.8 Oﾘﾝｸﾞ 1.9-6.8	1	1	1	
9-8		369-66116-0	CERAMIC BALL 7.7 ｾﾗﾐｯｸﾎﾞｰﾙ 7.7	1	1	1	
9-9		369-66112-1	SPRING ｽﾌﾟﾘﾝｸﾞ ｼﾌﾄﾚﾊﾞｰｽﾄｯﾊﾟ	1	1	1	
9-10		332-61315-0	WASHER 10.5-18-1.5 ﾜｯｼｬ 10.5-18-1.5	1	1	1	
9-11		3AB-66225-0	SHIFT ROD LEVER ｼﾌﾄﾛｯﾄﾞﾚﾊﾞｰ	1	1	1	
9-12		910903-6512	BOLT ﾎﾞﾙﾄ	1	1	1	

Fig. 10 GEAR CASE
ギヤケース

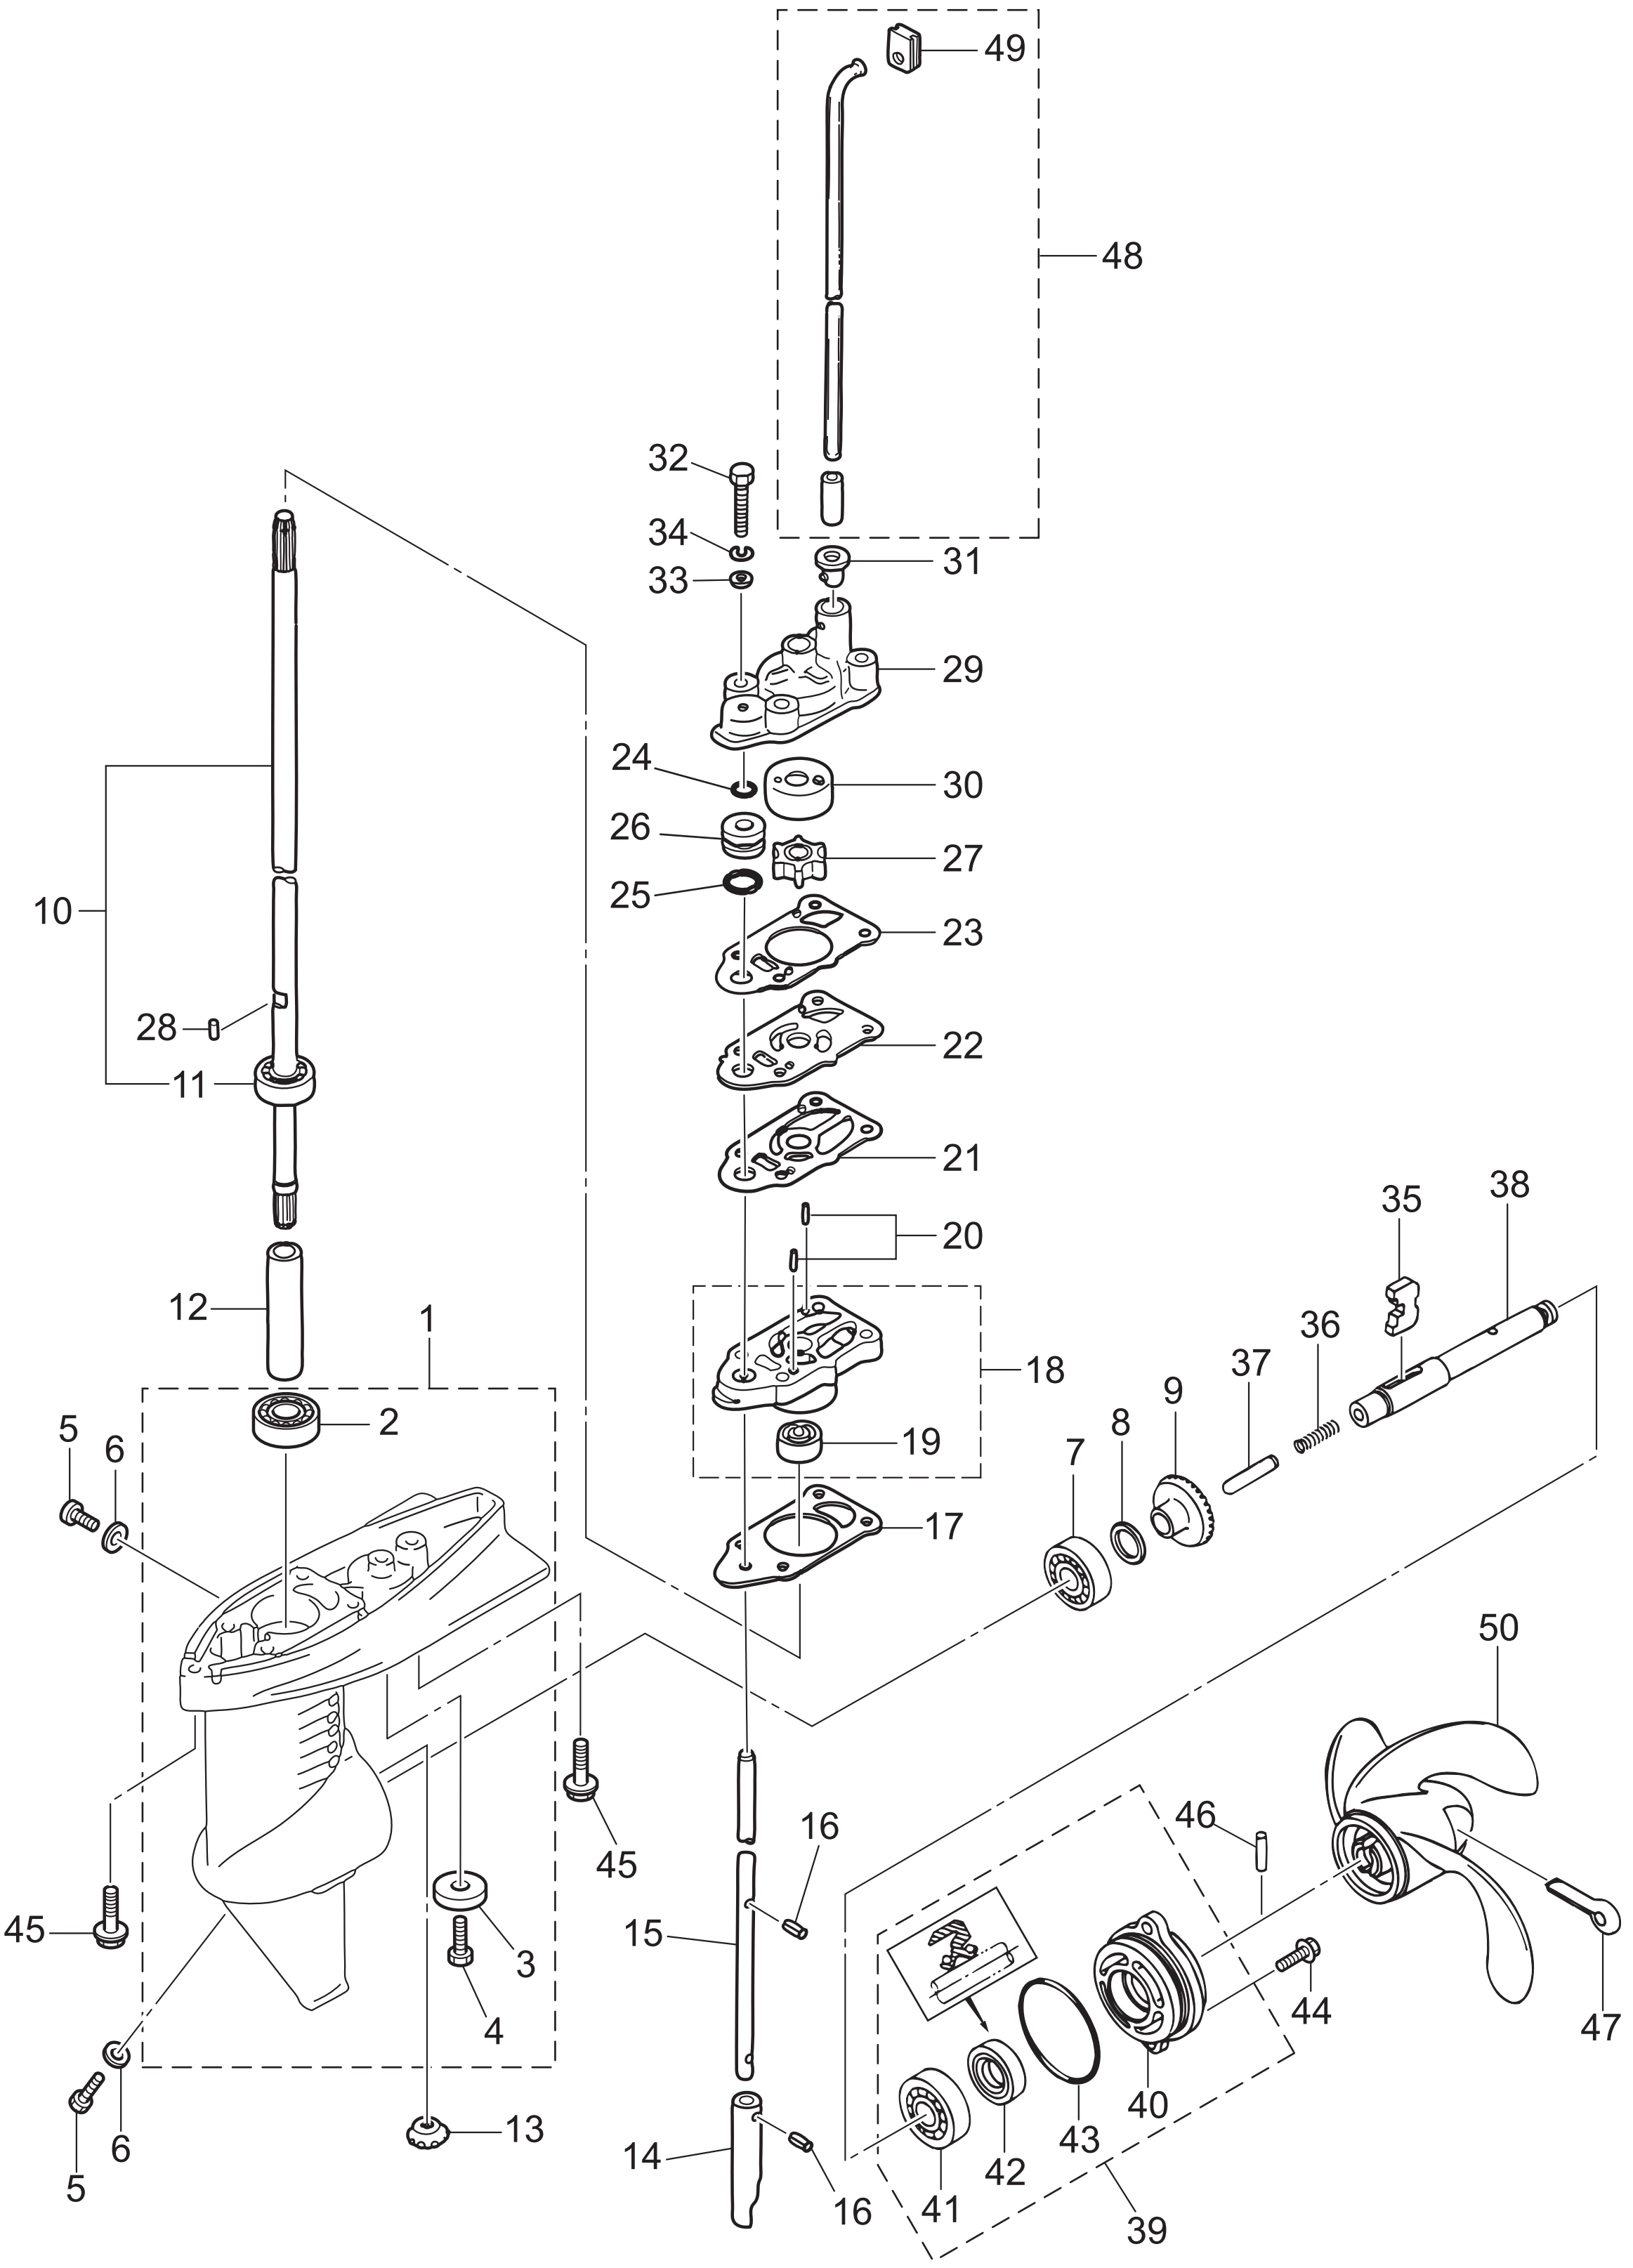

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
10-1		3BMQ60000-2	GEAR CASE ASSY ｷﾞﾔｹｰｽｱｯｼ	1	1	1	
10-2		9601-0-6000	* BALL BEARING 6000 * ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6000	1	1	1	
10-3		338-60218-2	* ANODE * ｱﾉｰﾄﾞ	1	1	1	
10-4		910103-0616	* BOLT * ﾎﾞﾙﾄ	1	1	1	
10-5		332-60005-2	PLUG 8-8 ﾌﾟﾗｸﾞ 8-8	2	2	2	
10-6		332-60006-1	GASKET ｶﾞｽｹｯﾄ 8.1-15-1	2	2	2	
10-7		9601-0-6004	BALL BEARING 6004 ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6004	1	1	1	
10-8	1	369-64014-0	SHIM 21-28-0.1 ｼﾑ 21-28-0.1	1	1	1	
10-8	2	369-64015-0	SHIM 21-28-0.15 ｼﾑ 21-28-0.15	1	1	1	
10-9		3GR-64010-0	BEVEL GEAR ASSY (A) ﾍﾞﾍﾞﾙｷﾞﾔｱｯｼ (A)	1	1	1	
10-10	1	3F0-64301-0	DRIVE SHAFT ASSY (S) ﾄﾞﾗｲﾌﾞｼﾔﾌﾄｱｯｼ (S)	1	1	1	for Transom "S"
10-10	2	3F0-64302-0	DRIVE SHAFT ASSY (L) ﾄﾞﾗｲﾌﾞｼﾔﾌﾄｱｯｼ (L)	1	1	1	for Transom "L"
10-11		9601-0-6000	* BALL BEARING 6000 * ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6000	1	1	1	
10-12		3F0-64321-0	SPACER 10.1-15-72 ｽﾍﾟｰｻ 10.1-15-72	1	1	1	
10-13		3GR-64020-0	BEVEL GEAR B ﾍﾞﾍﾞﾙｷﾞﾔ B	1	1	1	
10-14		3F0-66011-0	CLUTCH CAM ｸﾗｯﾁｶﾑ	1	1	1	
10-15	1	3F0-66012-0	CAM ROD (S) ｶﾑﾛｯﾄﾞ (S)	1	1	1	for Transom "S"
10-15	2	3F0-66013-0	CAM ROD (L) ｶﾑﾛｯﾄﾞ (L)	1	1	1	for Transom "L"
10-16		951407-0308	SPRING PIN 3-8 ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ 3-8	2	2	2	
10-17		3F0-65020-0	PUMP CASE GASKET (LOWER) ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ (ﾛﾜ)	1	1	1	
10-18		3H2-65040-1	PUMP CASE ASSY (LOWER) ﾎﾟﾝﾌﾟｹｰｽｱｯｼ (ﾛﾜ)	1	1	1	
10-19		3F0-60223-0	* OIL SEAL 10-22-8 * ｵｲﾙｼｰﾙ 10-22-8	1	1	1	
10-20		3B2-65022-0	KEY ϕ3-11 ｷｰ ﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ ϕ3-11	2	2	2	Dowel Pin
10-21		3F0-65029-0	GUIDE PLATE GASKET ｶﾞｲﾄﾞﾌﾟﾚｰﾄｶﾞｽｹｯﾄ	1	1	1	
10-22		3AB-65025-0	WATER PUMP GUIDE PLATE ｳｫｰﾀﾎﾟﾝﾌﾟｶﾞｲﾄﾞﾌﾟﾚｰﾄ	1	1	1	
10-23		3F0-65018-0	PUMP CASE GASKET ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ	1	1	1	
10-24		369-66021-1	O-RING 2.5-4.9 Oﾘﾝｸﾞ A 2.5-4.9	1	1	1	
10-25		301-66023-0	O-RING 2.4-9.5 Oﾘﾝｸﾞ 2.4-9.5	1	1	1	
10-26		3F0-66031-0	CAM ROD BUSHING ｶﾑﾛｯﾄﾞﾌﾞｯｼﾝｸﾞ	1	1	1	

Fig. 10 GEAR CASE
ギヤケース

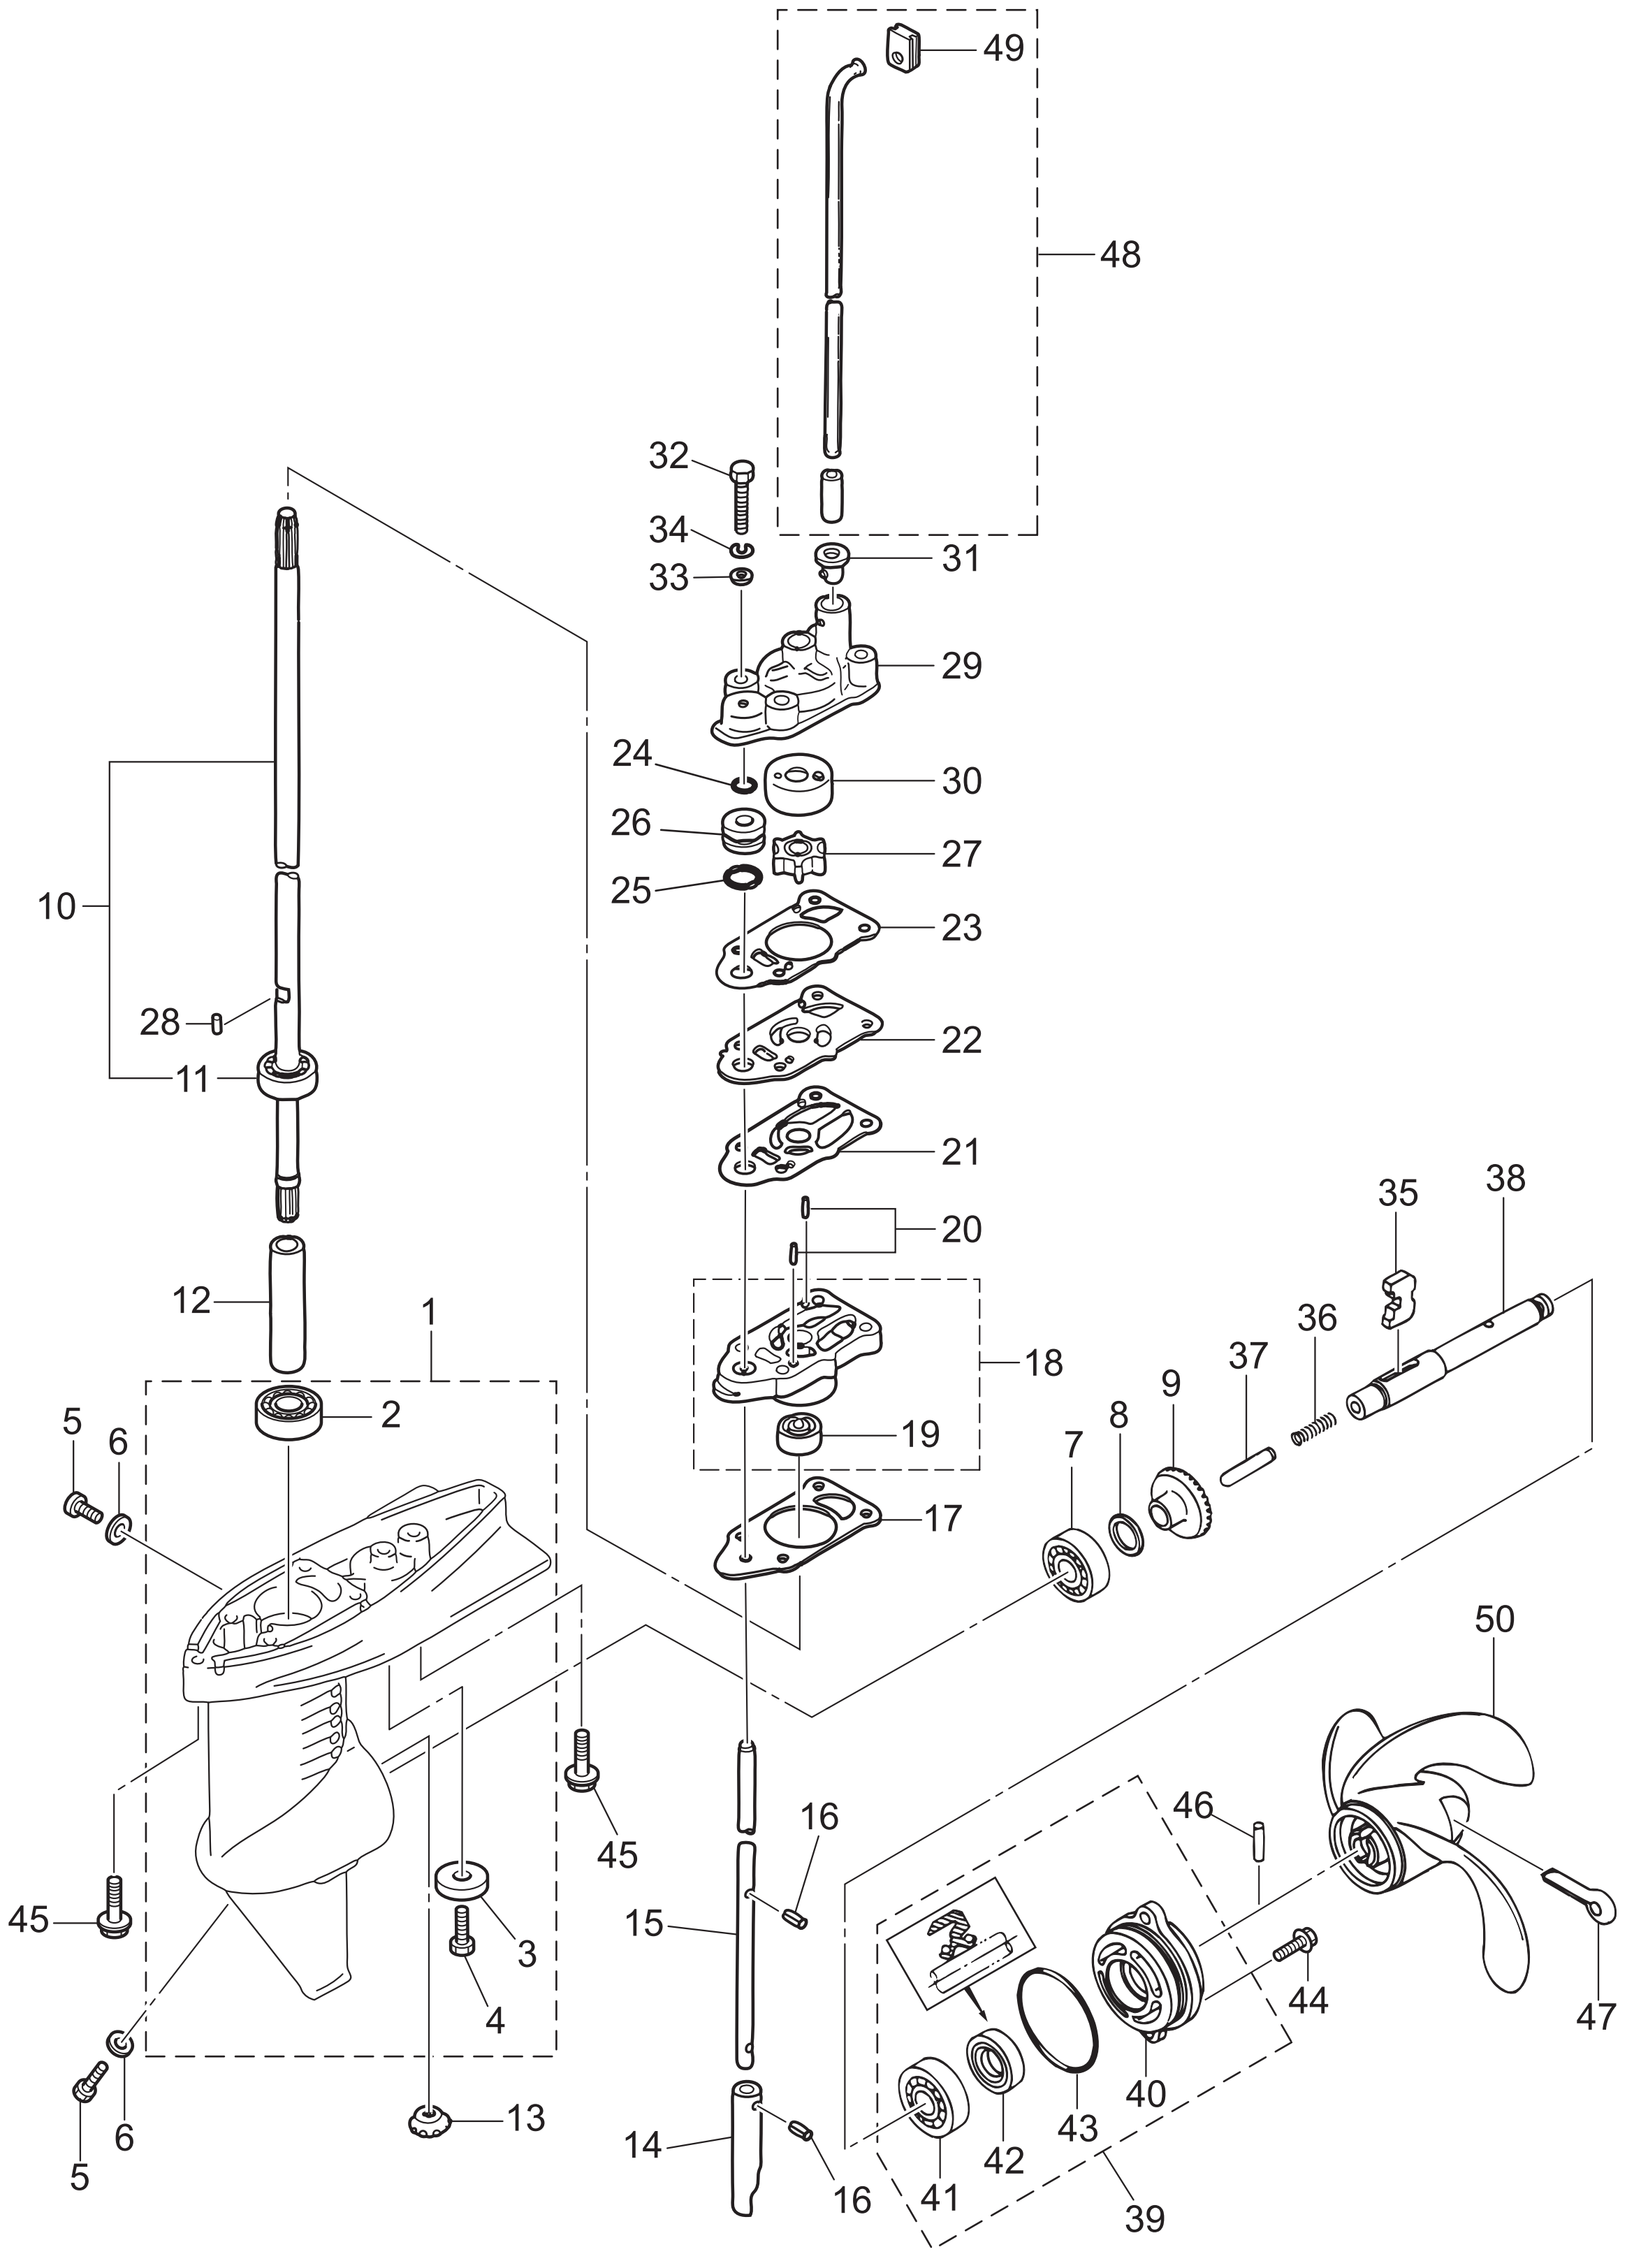

Ref.No. 見出番号		Part No. 部品番号	Description 部　品　名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備　考
10-27		369-65021-1	WATER PUMP IMPELLER ｳｫｰﾀﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ	1	1	1	
10-28		369-65022-0	KEY φ2-11 ｷｰ ﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ φ2-11	1	1	1	
10-29		3F0-65016-0	PUMP CASE (UPPER) ﾎﾟﾝﾌﾟｹｰｽ (ｱｯﾊﾟ)	1	1	1	
10-30		3F0-65011-0	PUMP CASE LINER ﾎﾟﾝﾌﾟｹｰｽﾗｲﾅ	1	1	1	
10-31		3F0-65032-0	GROMMET ｸﾞﾛﾒｯﾄ ｳｫｰﾀﾊﾟｲﾌﾟ (ﾛﾜ)	1	1	1	
10-32		9161E3-0645	BOLT ﾎﾞﾙﾄ	4	4	4	
10-33		940103-0600	WASHER ﾜｯｼｬ	4	4	4	
10-34		941303-0600	SPRING WASHER ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	4	4	4	
10-35		3F0-64215-0	CLUTCH ｸﾗｯﾁ	1	1	1	
10-36		3F0-64221-0	SPRING ｽﾌﾟﾘﾝｸﾞ ｸﾗｯﾁ	1	1	1	
10-37		3F0-64223-0	PUSH ROD ﾌﾟｯｼｭﾛｯﾄﾞ ｸﾗｯﾁ	1	1	1	
10-38		3F0-64211-0	PROPELLER SHAFT ﾌﾟﾛﾍﾟﾗｼｬﾌﾄ	1	1	1	
10-39		3F0Q87323-1	PROPELLER SHAFT HOUSING ASSY ﾌﾟﾛﾍﾟﾗｼｬﾌﾄﾊｳｼﾞﾝｸﾞｱｯｼ	1	1	1	
10-40		3F0Q60101-1	* PROPELLER SHAFT HOUSING * ﾌﾟﾛﾍﾟﾗｼｬﾌﾄﾊｳｼﾞﾝｸﾞ	1	1	1	
10-41		9601-0-6001	* BALL BEARING 6001 * ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6001	1	1	1	
10-42		309-60111-0	* OIL SEAL 12-24-8 * ｵｲﾙｼｰﾙ 12-24-8	1	1	1	
10-43		345-65015-0	* O-RING 3.2-47 * Oﾘﾝｸﾞ 3.2-47	1	1	1	
10-44		9101E3-5620	BOLT ﾎﾞﾙﾄ	2	2	2	
10-45		3GU-60001-0	BOLT 6-30 ﾎﾞﾙﾄ	2	2	2	
10-46		309-64126-1	SHEAR PIN 4-24 ｼｬｰﾋﾟﾝ 4-24	1	1	1	
10-47		951503-0435	SPLIT PIN 4-35 ｽﾌﾟﾘｯﾄﾋﾟﾝ 4-35	1	1	1	
10-48	1	3AB-65191-0	WATER PIPE ASSY (S) ｳｫｰﾀﾊﾟｲﾌﾟｱｯｼ (S)	1	1	1	for Transom "S"
10-48	2	3AB-65192-0	WATER PIPE ASSY (L) ｳｫｰﾀﾊﾟｲﾌﾟｱｯｼ (L)	1	1	1	for Transom "L"
10-49		3AB-65031-0	* GROMMET * ｸﾞﾛﾒｯﾄ ｳｫｰﾀﾊﾟｲﾌﾟ (ｱｯﾊﾟ)	1	1	1	
10-50	1	314-64103-0	PROPELLER ASSY (4.5") ﾌﾟﾛﾍﾟﾗｱｯｼ (4.5") (ﾌﾟﾗｽﾁｯｸ)	1	1	1	Plastic OPT 3 x 188 x 110
10-50	2	309-64106-0	PROPELLER ASSY (6") ﾌﾟﾛﾍﾟﾗｱｯｼ (6") (ﾌﾟﾗｽﾁｯｸ)	1	1	1	Plastic OPT 3 x 188 x 145
10-50	3	3F0-64101-0	PROPELLER ASSY (7") ﾌﾟﾛﾍﾟﾗｱｯｼ (7") (ﾌﾟﾗｽﾁｯｸ)	1	1	1	Plastic STD 3 x 188 x 178
10-50	4	3F0B64512-0	PROPELLER ASSY (6") ﾌﾟﾛﾍﾟﾗｱｯｼ (6") (ｱﾙﾐ)	1	1	1	Aluminum W/Rubber Hub OPT 3 x 188 x 145

Fig. 11 CLAMP BRACKET・SWIVEL BRACKET
クランプブラケット・スイベルブラケット

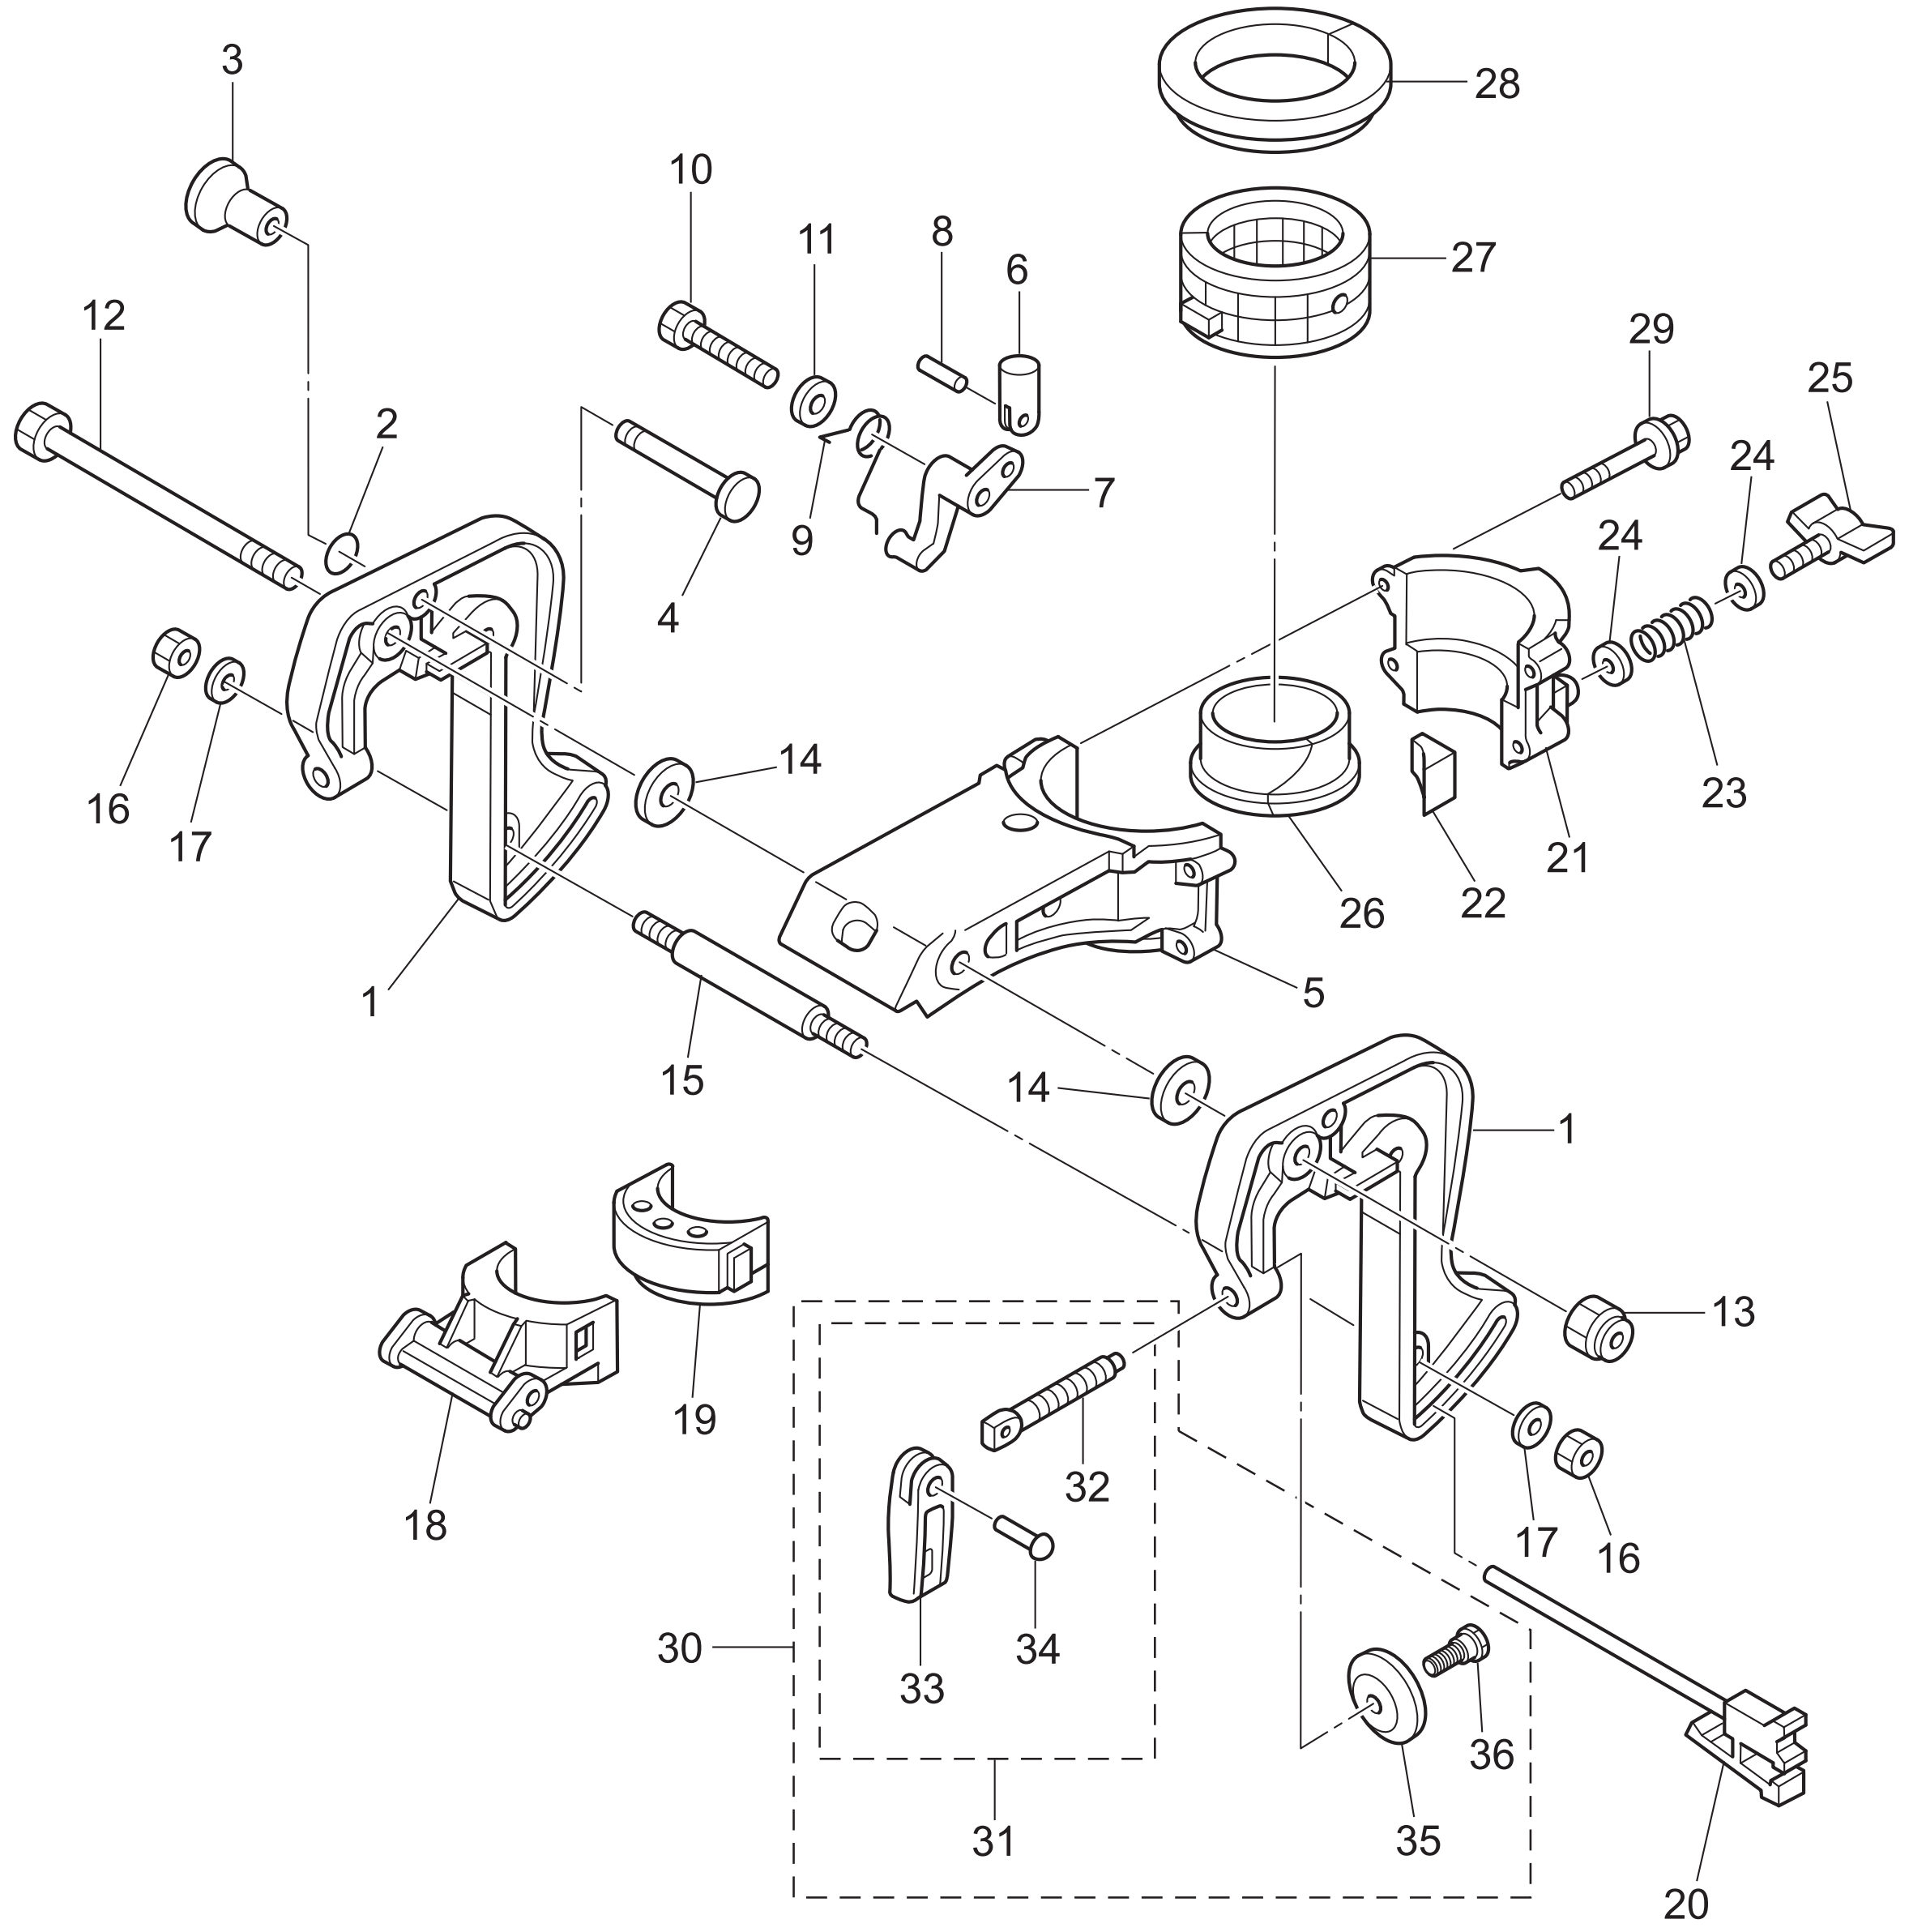

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
11-1		3ABQ62111-2	CLAMP BRACKET ｸﾗﾝﾌﾟﾌﾞﾗｹｯﾄ	1	1	1	
11-2		301-66023-0	O-RING 2.4-9.5 Oﾘﾝｸﾞ 2.4-9.5	1	1	1	
11-3		309-62463-0	KNOB ﾉﾌﾞ ﾁﾙﾄｽﾄｯﾊﾟ	1	1	1	
11-4		3AB-62464-3	TILT STOPPER ﾁﾙﾄｽﾄｯﾊﾟ	1	1	1	
11-5		3ABQ62391-1	SWIVEL BRACKET ｽｲﾍﾞﾙﾌﾞﾗｹｯﾄ A	1	1	1	
11-6		3AB-66334-1	STOPPER ｽﾄｯﾊﾟ	1	1	1	
11-7		3AB-63068-0	LEVER ﾚﾊﾞｰ	1	1	1	
11-8		951403-0212	SPRING PIN 2-12 ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ 2-12	1	1	1	
11-9		3AB-66336-0	SPRING ｽﾌﾟﾘﾝｸﾞ	1	1	1	
11-10		9161E3-0650	BOLT ﾎﾞﾙﾄ	1	1	1	
11-11		9401E3-0600	WASHER ﾜｯｼｬ	1	1	1	
11-12		309-62115-2	BOLT 8-122 ﾎﾞﾙﾄ 8-122	1	1	1	
11-13		930403-0800	NYLON NUT 8-P1.25 ﾅｲﾛﾝﾅｯﾄ 8-P1.25	1	1	1	
11-14		307-62116-1	WASHER 8.5-28-1 ﾜｯｼｬ 8.5-28-1	2	2	2	
11-15		309-62117-1	DISTANCE PIECE ﾃﾞｨｽﾀﾝｽﾋﾟｰｽ	1	1	1	
11-16		930103-0600	NUT ﾅｯﾄ	2	2	2	
11-17		9401E3-0600	WASHER ﾜｯｼｬ	2	2	2	
11-18		3AB-62212-0	THRUST SUPPORTER ｽﾗｽﾄｻﾎﾟｰﾀ	1	1	1	
11-19		3AB-61336-1	DAMPER (LOWER) ﾀﾞﾝﾊﾟ (ﾛﾜ)	1	1	1	
11-20		3F0-62160-0	THRUST ROD ASSY ｽﾗｽﾄﾛｯﾄﾞｱｯｼ	1	1	1	
11-21		3ABQ62392-1	SWIVEL BRACKET ｽｲﾍﾞﾙﾌﾞﾗｹｯﾄ B	1	1	1	
11-22		309-62441-2	FRICTION PIECE ﾌﾘｸｼｮﾝﾋﾟｰｽ	1	1	1	
11-23		309-62446-1	SPRING ｽﾌﾟﾘﾝｸﾞ ﾌﾘｸｼｮﾝﾌﾟﾚｰﾄ	1	1	1	
11-24		9401E3-0600	WASHER ﾜｯｼｬ	2	2	2	
11-25		3GT-62442-0	FRICTION KNOB ﾌﾘｸｼｮﾝﾉﾌﾞ	1	1	1	
11-26		3AB-62321-1	BUSHING ﾌﾞｯｼﾝｸﾞ ﾋﾟﾎﾞｯﾄ	1	1	1	
11-27		393-62416-1	BUSHING ﾌﾞｯｼﾝｸﾞ ｱｯﾊﾟ ｽﾃｱﾘﾝｸﾞ	1	1	1	
11-28		3H6-62325-0	THRUST BUSHING ｽﾗｽﾄﾌﾞｯｼﾝｸﾞ	1	1	1	
11-29		3V1-60001-1	BOLT 6-35 ﾎﾞﾙﾄ ﾌﾟﾚｺｰﾄ 6-35	4	4	4	

Fig. 11 CLAMP BRACKET・SWIVEL BRACKET
クランププブラケット・スイベルブラケット

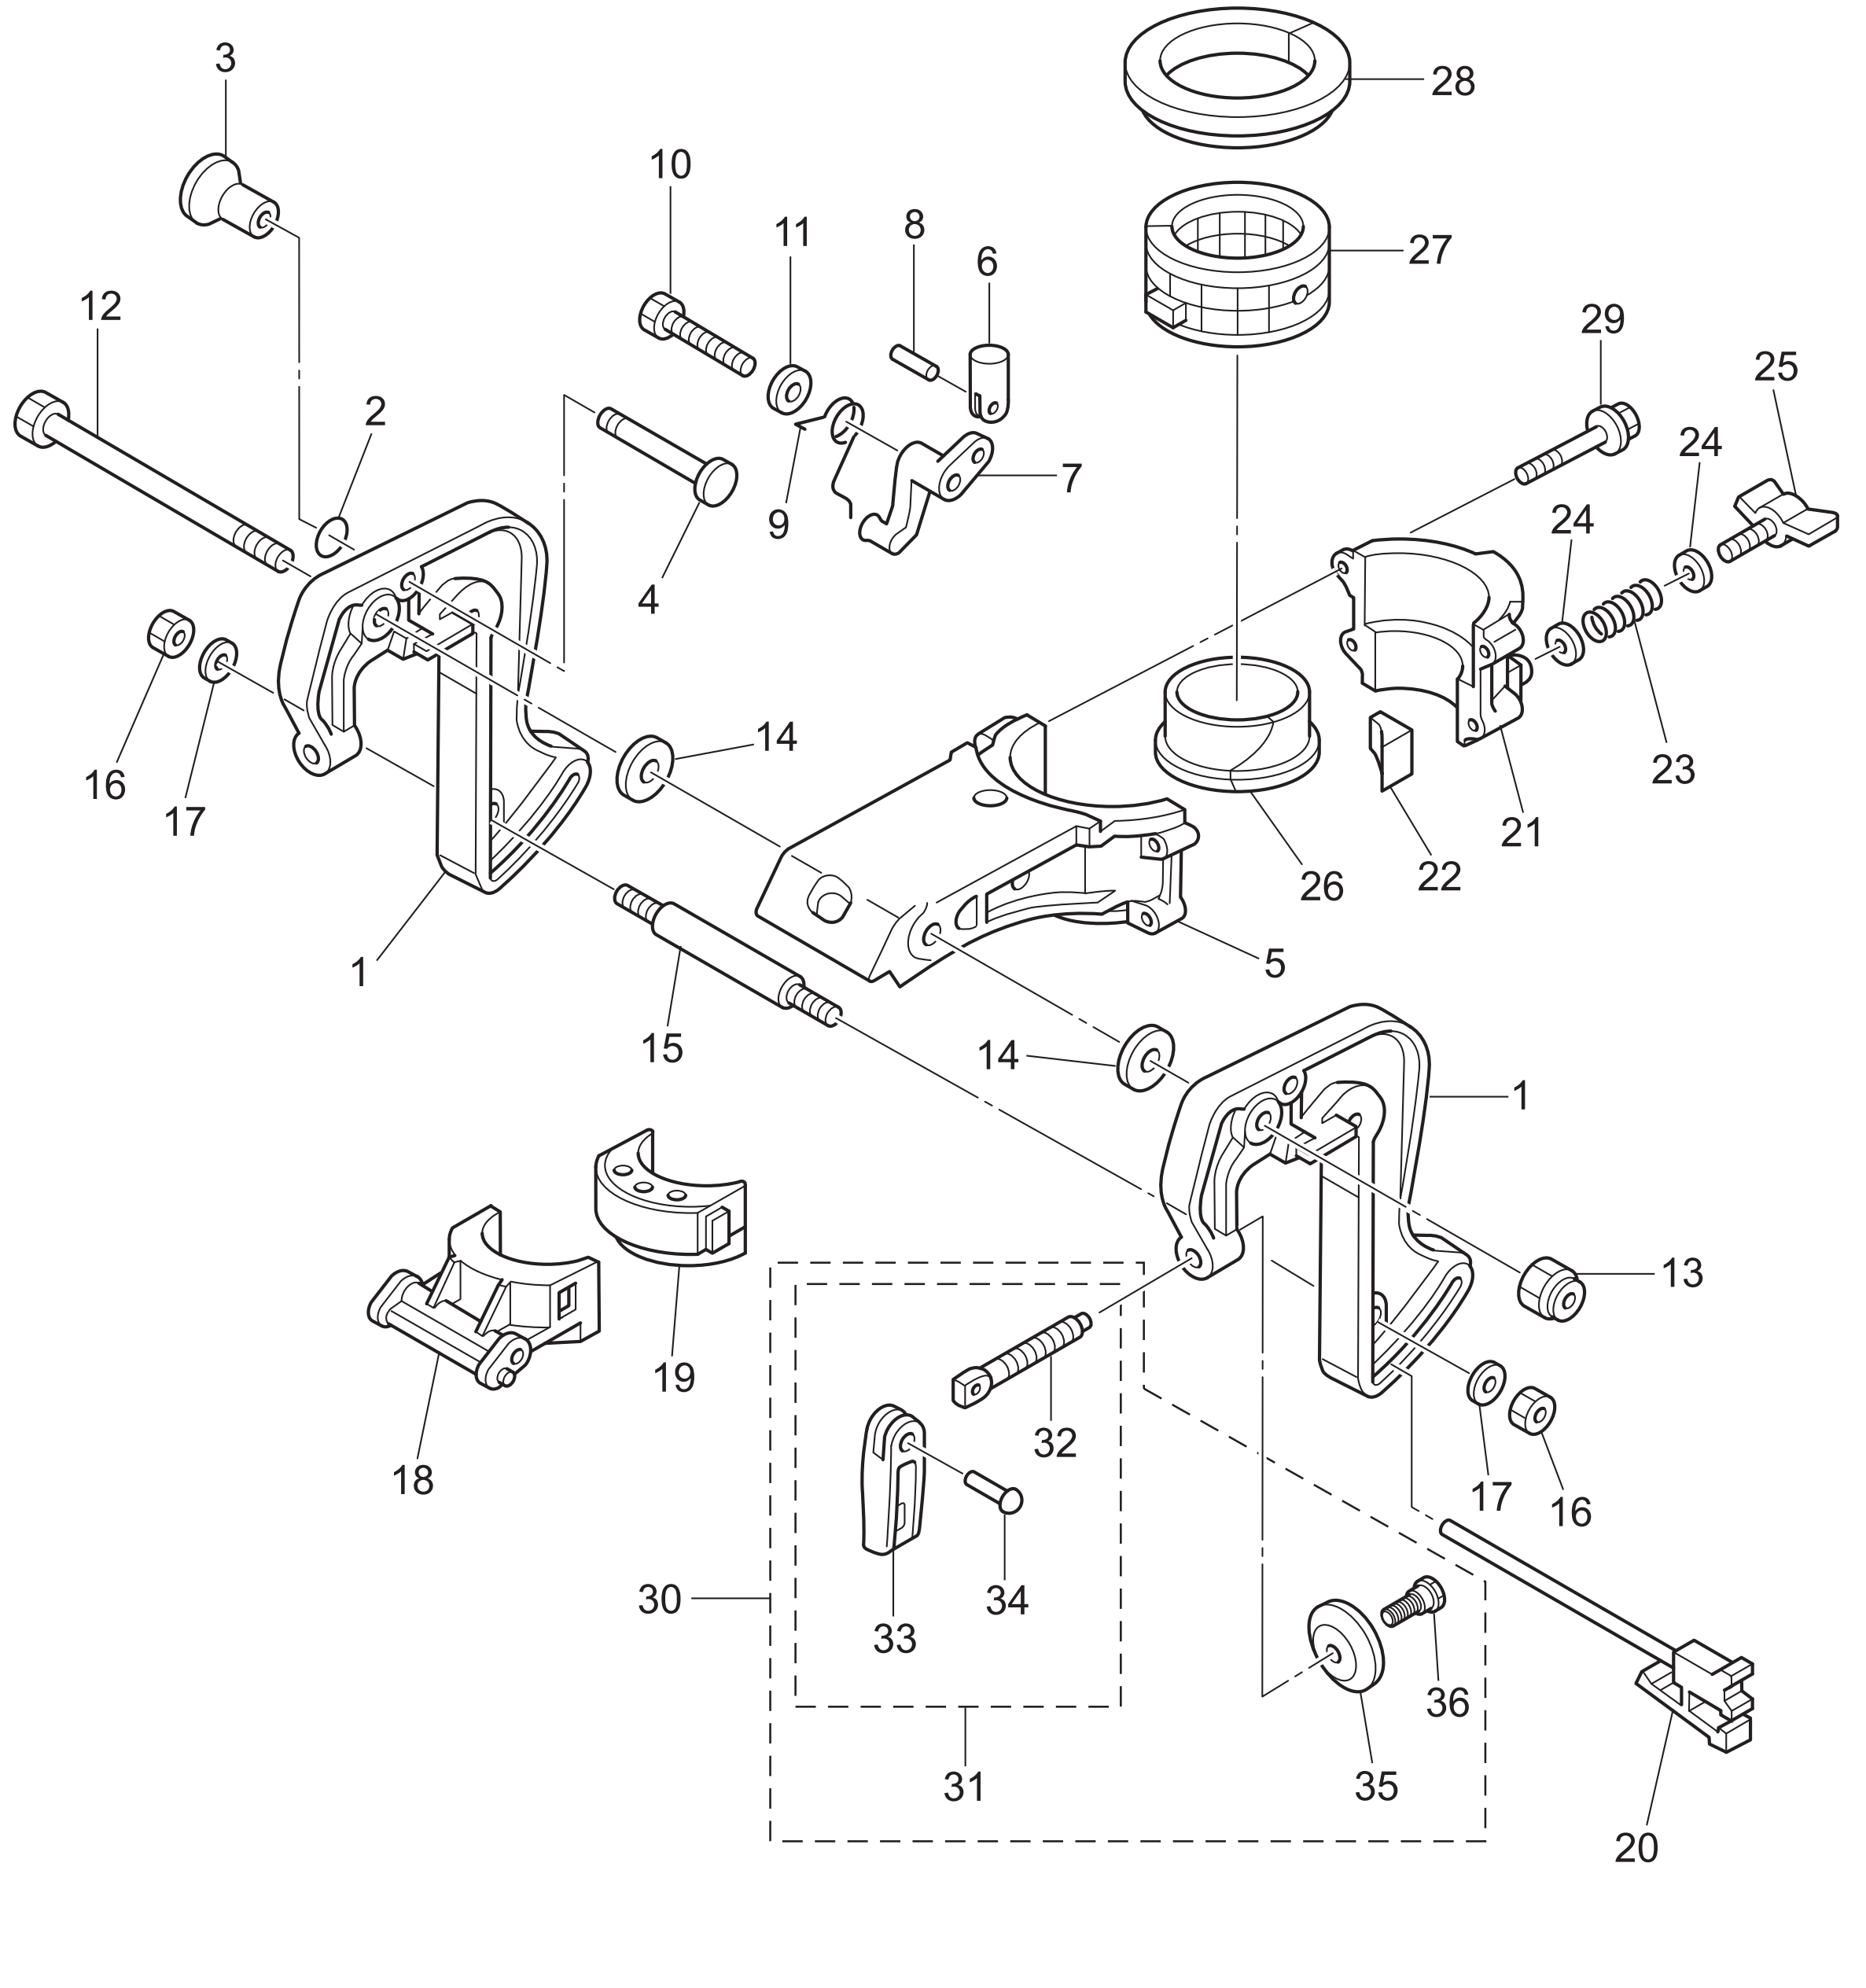

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	 MFS2.5C	 MFS3.5C	Remarks 備 考
11-30		3GTQ62105-1	CLAMP SCREW KIT ｸﾗﾝﾌﾟｽｸﾘｭｷｯﾄ	2	2	2	
11-31		3GTQ62108-1	* CLAMP SCREW ASSY * ｸﾗﾝﾌﾟｽｸﾘｭｱｯｼ	1	1	1	
11-32		369-62106-1	** CLAMP SCREW ** ｸﾗﾝﾌﾟｽｸﾘｭ	1	1	1	
11-33		3ABQ62102-0	** CLAMP SCREW HANDLE ** ｸﾗﾝﾌﾟｽｸﾘｭﾊﾝﾄﾞﾙ	1	1	1	
11-34		3C8-62104-2	** RIVET 3-22 ** ﾘﾍﾞｯﾄ 3-22	1	1	1	
11-35		332-62101-1	* CLAMP SCREW PAD * ｸﾗﾝﾌﾟｽｸﾘｭﾊﾟｯﾄﾞ	1	1	1	
11-36		3C8-62107-0	* SHOULDER BOLT * ｼｮﾙﾀﾞﾎﾞﾙﾄ	1	1	1	

Fig. 12 TILLER HANDLE
ティラハンドル

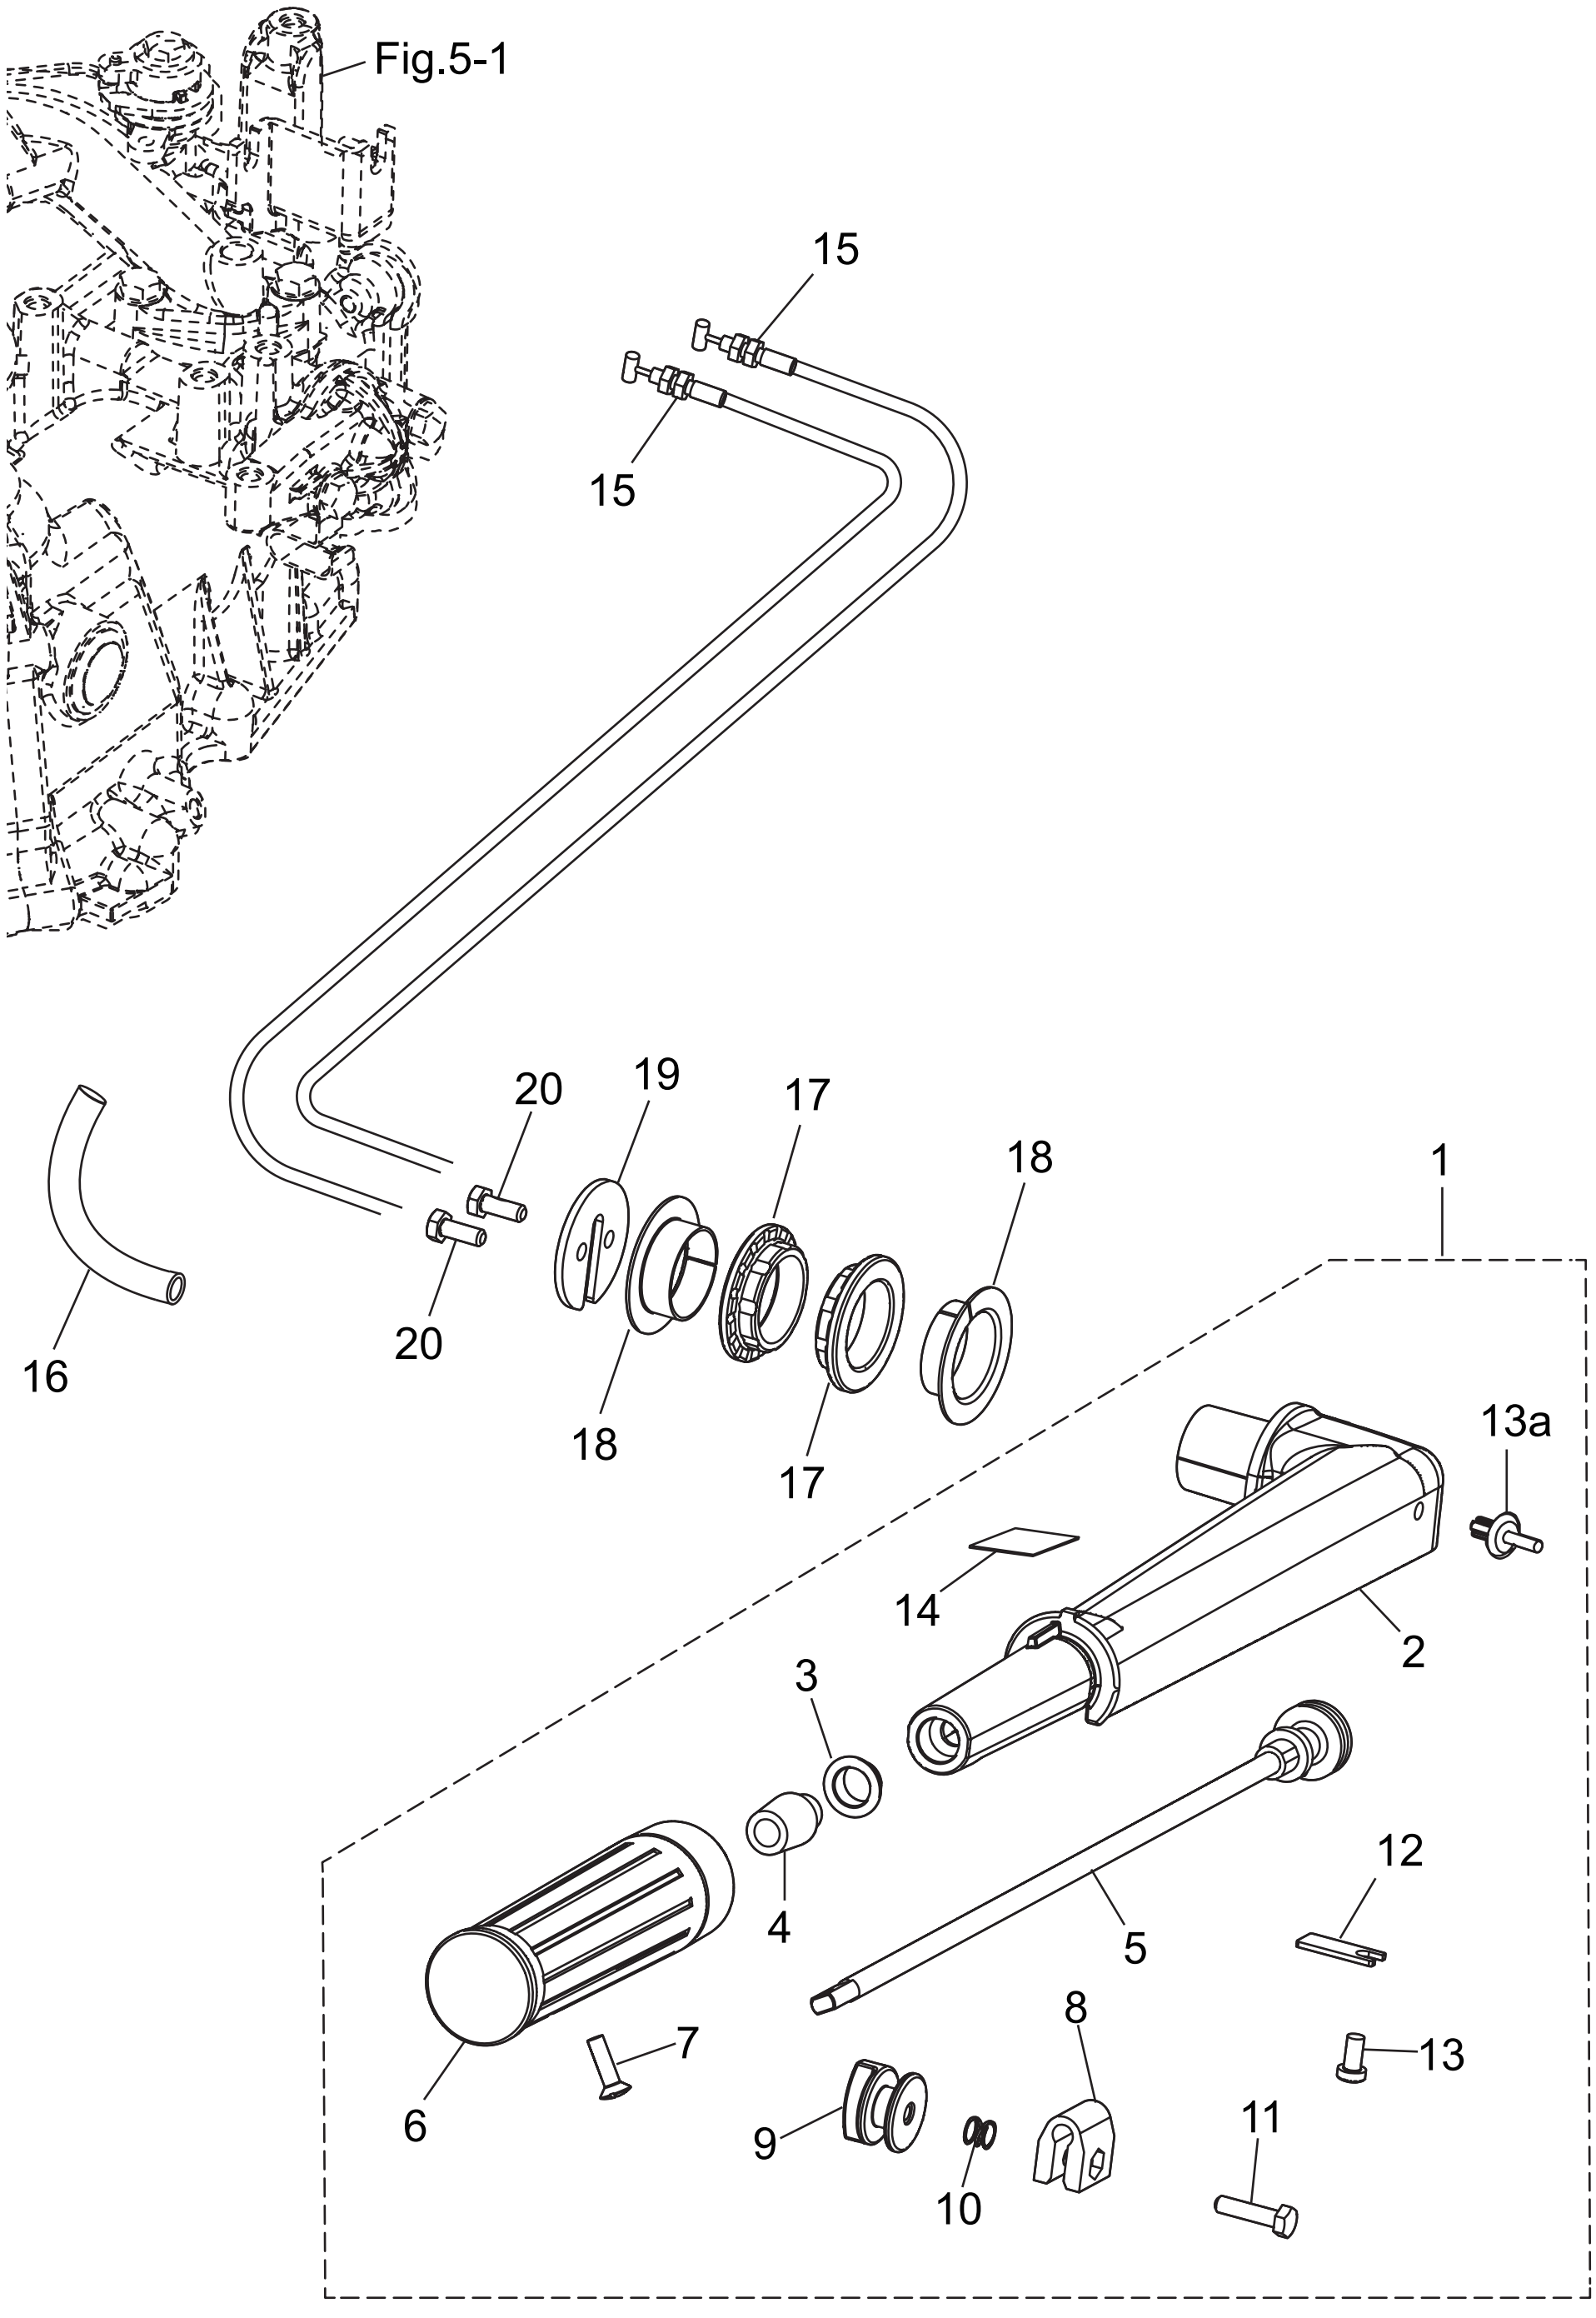

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	 MFS2.5C	 MFS3.5C	Remarks 備 考
12-1	1	3WEQ63003-0	TILLER HANDLE ASSY ﾃｨﾗﾊﾝﾄﾞﾙｱｯｼ	1	1	1	
12-2		3V1Q63011-3	* TILLER HANDLE * ﾃｨﾗﾊﾝﾄﾞﾙ	1	1	1	
12-3		3H6-63510-0	* BUSHING 14-15.8-7 * ﾌﾞｯｼﾝｸﾞ 14-15.8-7	1	1	1	
12-4		3H6-63048-0	* THROTTLE SHAFT DAMPER * ｽﾛｯﾄﾙｼｬﾌﾄﾀﾞﾝﾊﾟ	1	1	1	
12-5		3V1-63041-0	* THROTTLE SHAFT * ｽﾛｯﾄﾙｼｬﾌﾄ	1	1	1	
12-6		3R3-63012-0	* GRIP * ｸﾞﾘｯﾌﾟ	1	1	1	
12-7		9208E3-0518	* SCREW * ｽｸﾘｭ	1	1	1	
12-8		3V1-63035-1	* FRICTION PIECE * ﾌﾘｸｼｮﾝﾋﾟｰｽ	1	1	1	
12-9		3V1-63077-0	* ADJUSTING NUT * ｱｼﾞｬｽﾄﾅｯﾄ	1	1	1	
12-10		3V1-63036-0	* SPRING * ｽﾌﾟﾘﾝｸﾞ	1	1	1	
12-11		910103-0625	* BOLT * ﾎﾞﾙﾄ	1	1	1	
12-12		3B2-63063-0	* THROTTLE SHAFT SUPPORT * ｽﾛｯﾄﾙｼｬﾌﾄｻﾎﾟｰﾄ	1	1	1	
12-13		921503-0612	* SCREW * ｽｸﾘｭ	1	1	1	
12-13a		350-67154-0	* PLASTIC RIVET 6.5 * ﾌﾟﾗｽﾁｯｸﾘﾍﾞｯﾄ 6.5	1	1	1	
12-14		3V9-72019-0	* THROTTLE DECAL * ｽﾛｯﾄﾙﾃﾞｶｰﾙ	1	1	1	
12-15		3V1-63600-0	THROTTLE WIRE ｽﾛｯﾄﾙﾜｲﾔ	2	2	2	
12-16		3H9-70313-0	FUEL HOSE PROTECTOR ﾌｭｴﾙﾎｰｽﾌﾟﾛﾃｸﾀ	1	1	1	
12-17		3AB-63102-0	BUSHING ﾌﾞｯｼﾝｸﾞ ﾊﾝﾄﾞﾙ	2	2	2	
12-18		3BR-63102-1	BUSHING 32-34-11.8 ﾌﾞｯｼﾝｸﾞ ﾊﾝﾄﾞﾙ 32-34-11.8	2	2	2	
12-19		3V1-63107-0	COVER ｶﾊﾞｰ	1	1	1	
12-20		9101E3-0616	BOLT ﾎﾞﾙﾄ	2	2	2	

Fig. 13 BOTTOM COWL
ボトムカウル

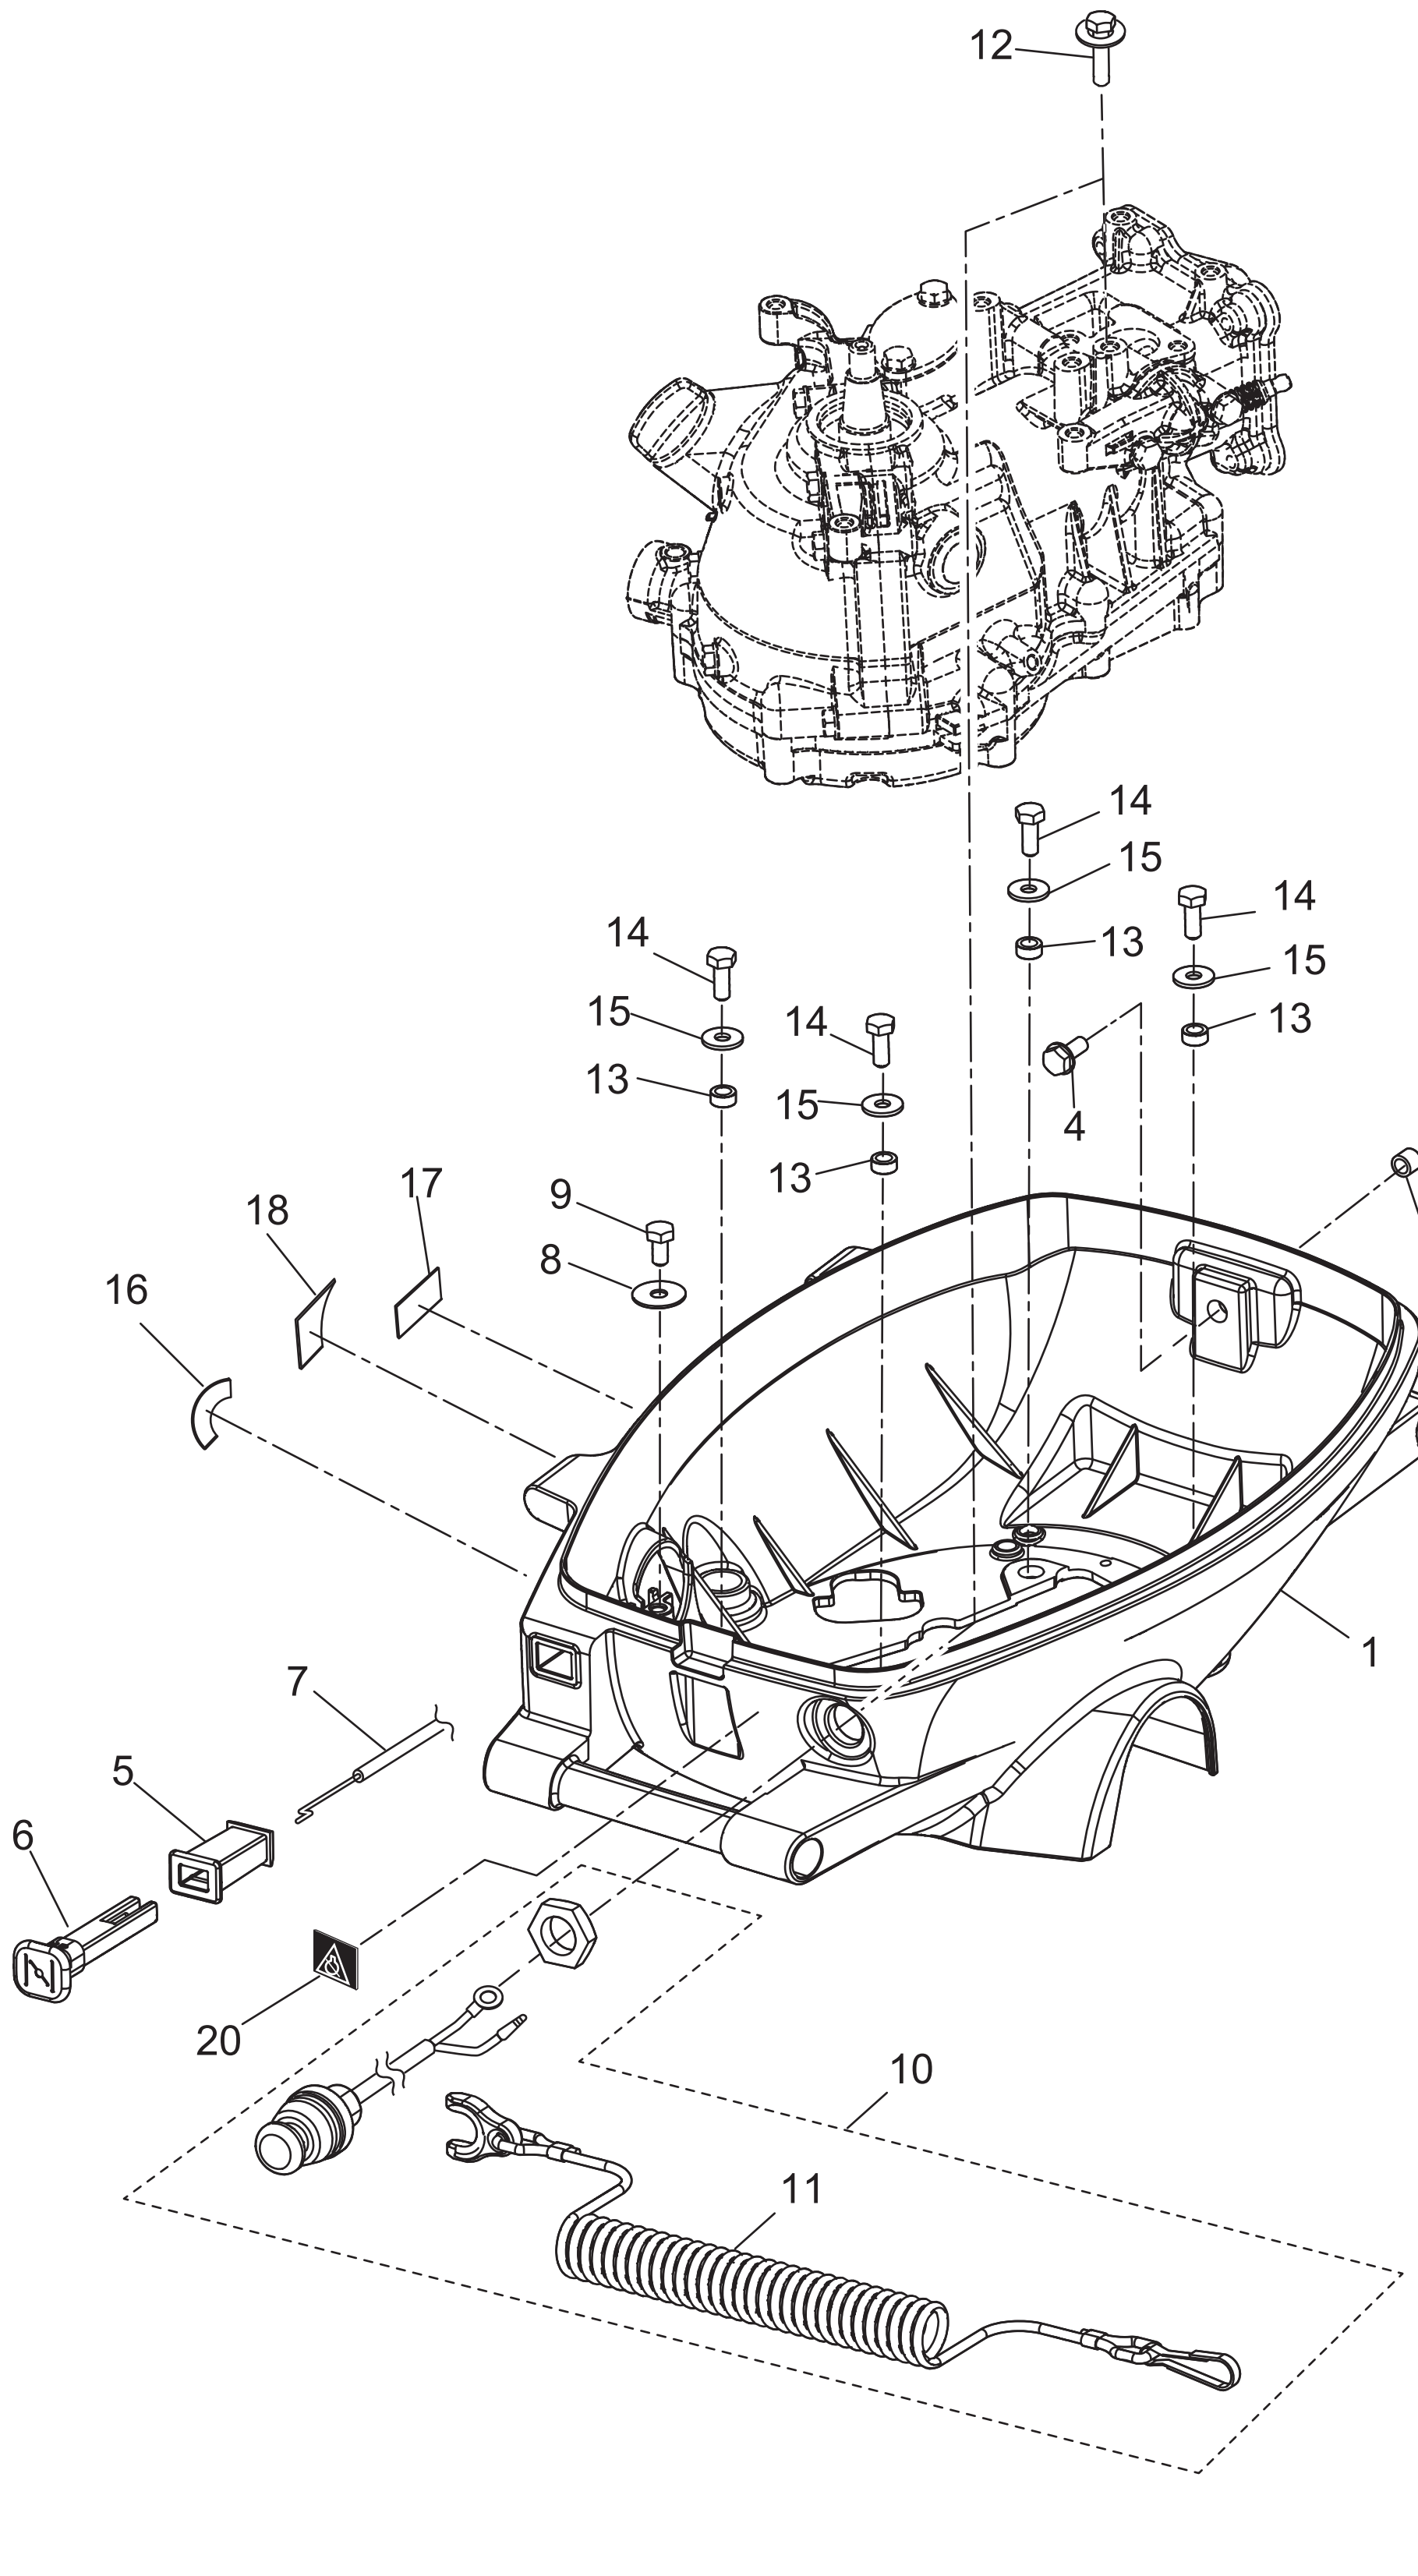

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
13-1	1	3WEQ67100-0	BOTTOM COWL ボトムカウル	1	1	1	
13-2		3GT-67120-1	COWL LATCH ASSY カウルラッチアッシ	1	1	1	
13-3		3A0-76079-0	COLLAR 6.2-9-7.4 カラー 6.2-9-7.4	1	1	1	
13-4		910103-5616	BOLT ボルト	1	1	1	
13-5		3AB-67104-0	CHOKE ROD BUSHING チョークロッドブッシング	1	1	1	
13-6		3H6-67151-1	CHOKE ROD チョークロッド	1	1	1	
13-7		3LR-67197-0	CHOKE WIRE チョークワイヤ	1	1	1	
13-8		346-67115-0	WASHER 6.5-21-1 ワッシャ 6.5-21-1	1	1	1	
13-9		910103-0612	BOLT ボルト	1	1	1	
13-10		3GR-06870-0	STOP SWITCH ASSY ストップスイッチアッシ	1	1	1	
13-11		353-06821-0	* STOP SWITCH LANYARD ASSY * ストップスイッチランヤードアッシ	1	1	1	
13-12		910103-5612	BOLT ボルト	1	1	1	Ground
13-13		353-06283-0	COLLAR 6.4-10-4.7 カラー 6.4-10-4.7	4	4	4	
13-14		9101E3-0616	BOLT ボルト	4	4	4	
13-15		3C8-66308-0	WASHER 6-16-1.5 ワッシャ 6-16-1.5	4	4	4	
13-16	1	3WE-67578-0	SHIFT DECAL シフトデカール	1	1	1	
13-17	1	3WE-72024-0	FUEL LEVER DECAL フュエルレバーデカール	1	1	1	
13-18	1	3WE-72046-0	OIL LEVEL DECAL オイルレベルデカール	1	1	1	
13-20		3AC-72200-0	STOP SWITCH DECAL ストップスイッチデカール	1	1	1	

Fig. 14 TOP COWL
トップカウル

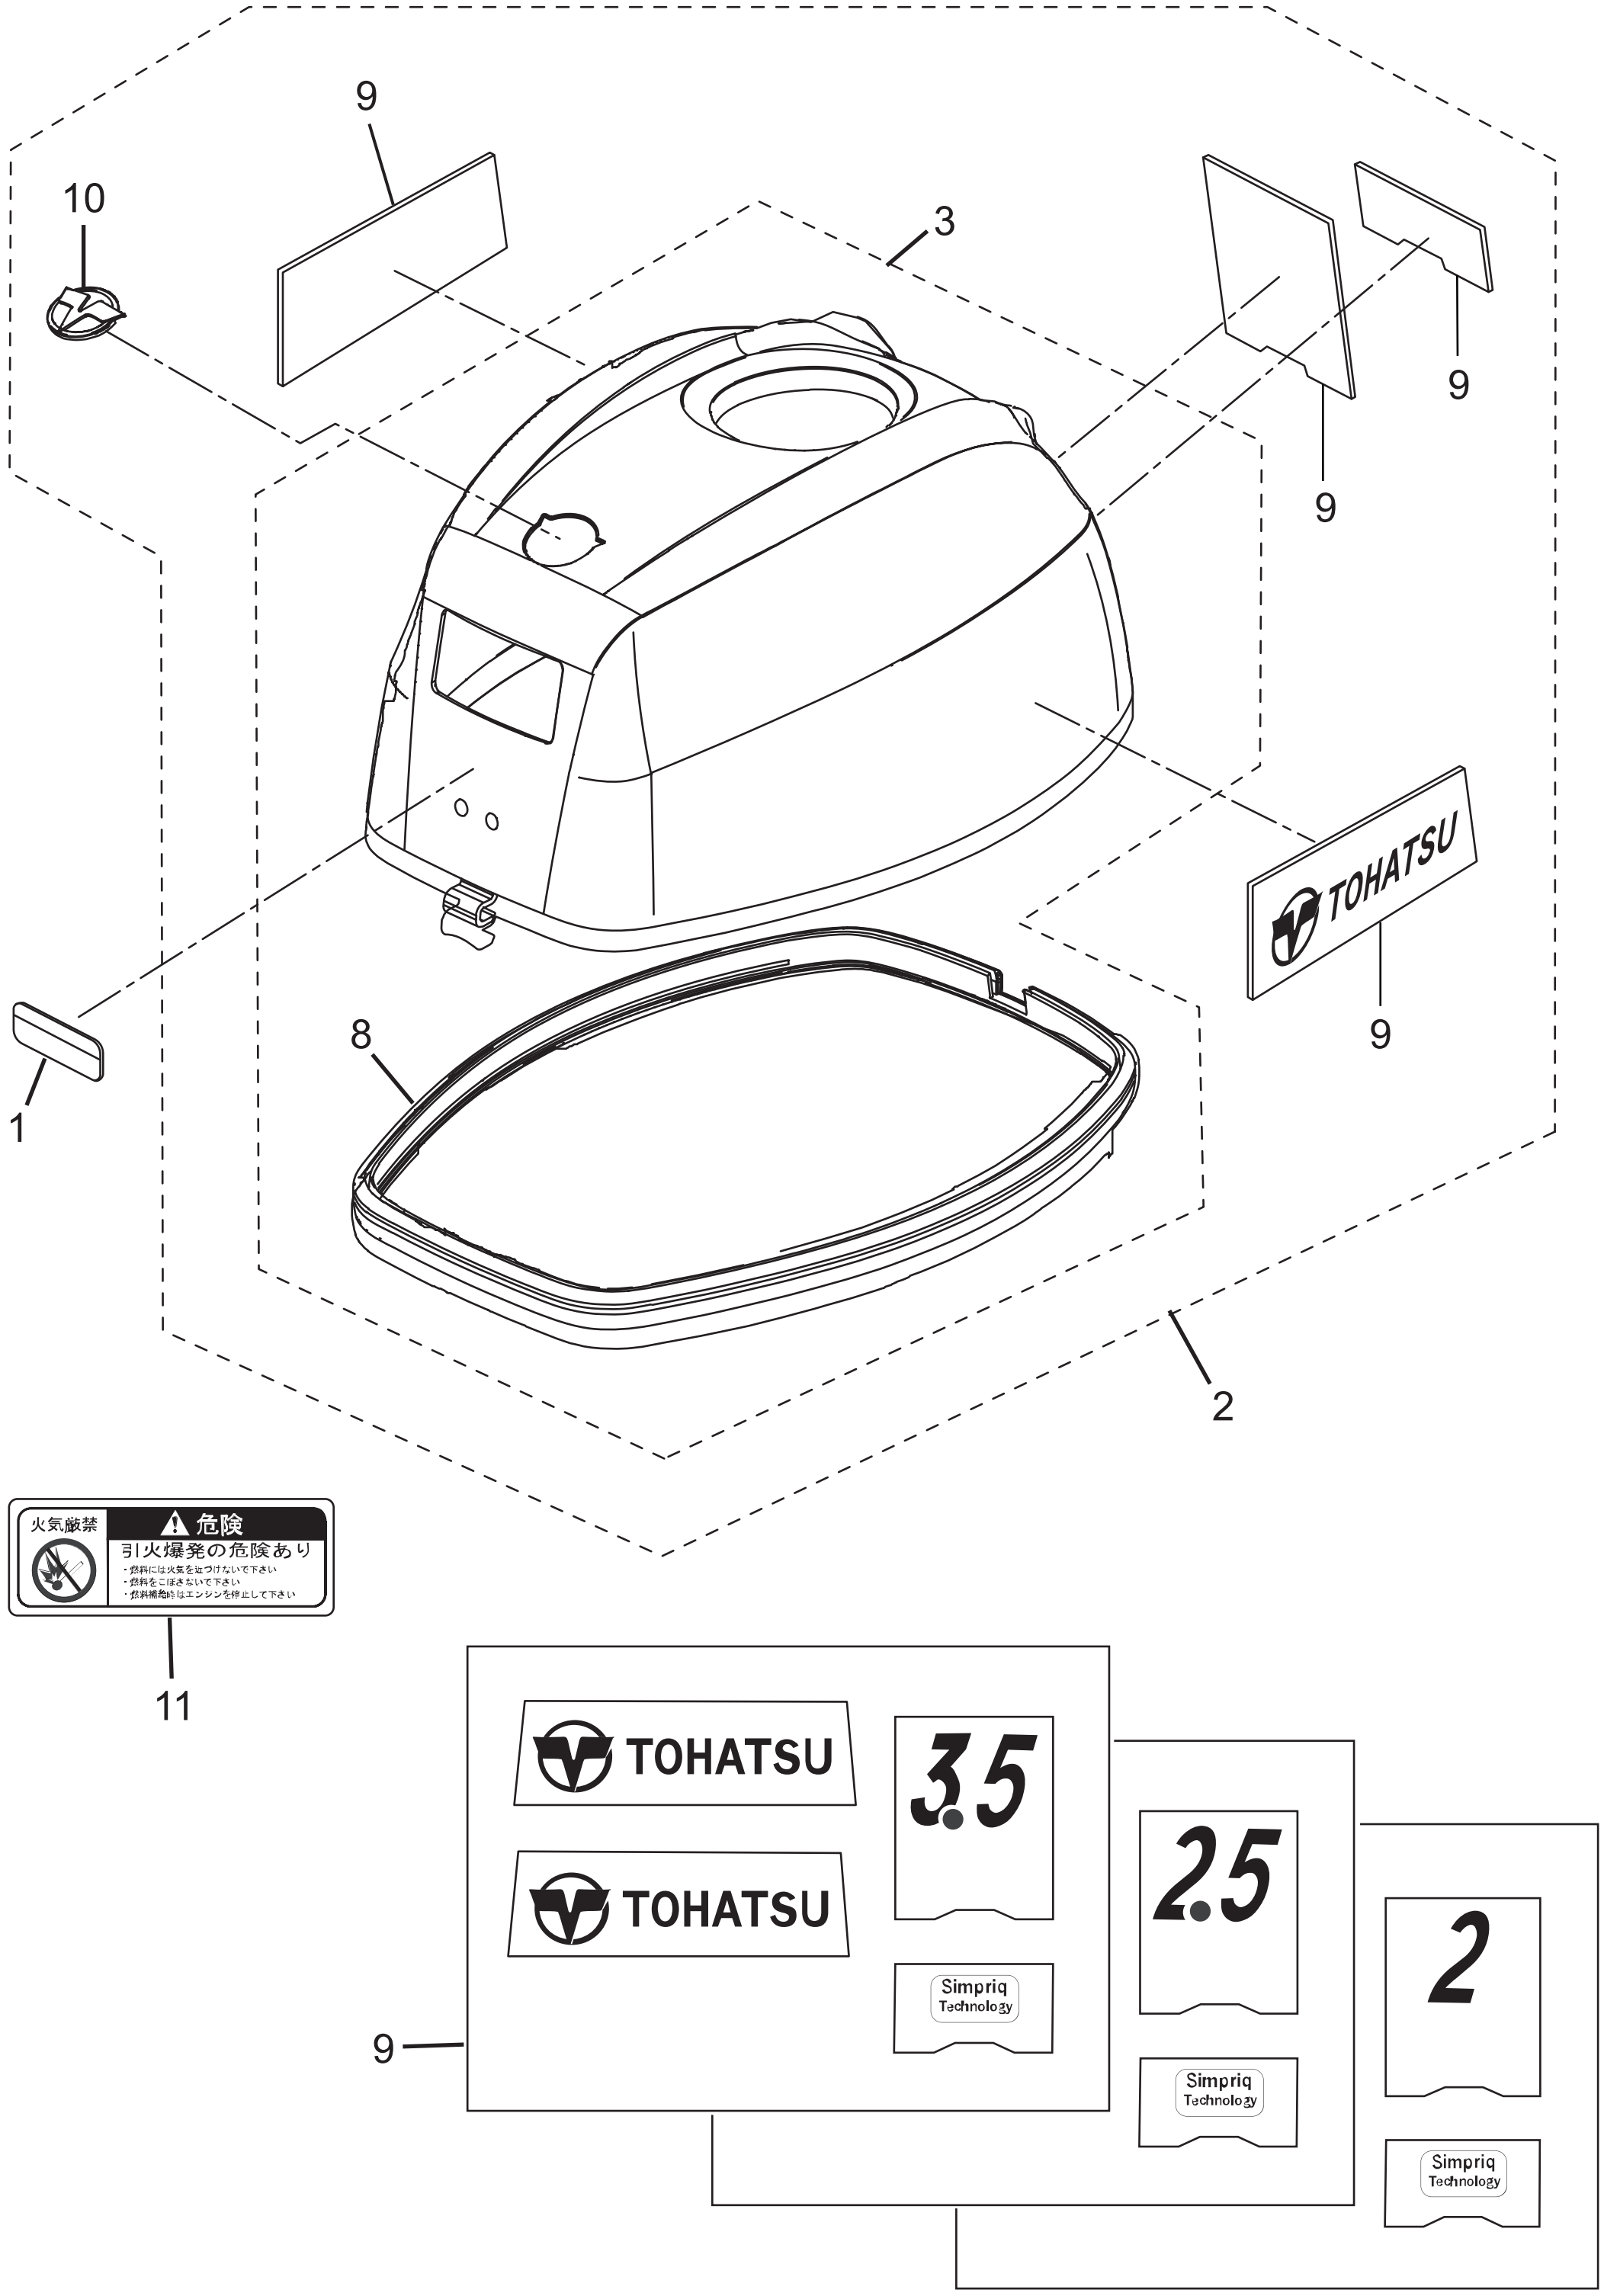

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
14-1	1	3WL-72180-0	CAUTION DECAL (A) ｺｰｼｮﾝﾃﾞｶｰﾙ (A)	1	1	1	
14-1	3	3F0-72185-0	CAUTION DECAL ｺｰｼｮﾝﾃﾞｶｰﾙ		1	1	for EU Model
14-2	1	3WEQ67645-0	TOP COWL ASSY ﾄｯﾌﾟｶｳﾙｱｯｼ	1	1	1	
14-3	1	3WEQ67640-0	* TOP COWL SUB-ASSY * ﾄｯﾌﾟｶｳﾙｻﾌﾞｱｯｼ	1	1	1	
14-8		3GT-67501-0	** TOP COWL SEAL L=1100 ** ﾄｯﾌﾟｶｳﾙｼｰﾙ L=1100	1	1	1	
14-9	1	3WH-87801-0	* DECAL SET(MFS2C) * ﾃﾞｶｰﾙｾｯﾄ(MFS2C)	1			
14-9	3	3WE-87801-0	* DECAL SET(MFS3.5C) * ﾃﾞｶｰﾙｾｯﾄ(MFS3.5C)			1	
14-9	5	3WD-87801-0	* DECAL SET(MFS2.5C) * ﾃﾞｶｰﾙｾｯﾄ(MFS2.5C)		1		
14-10		3WE-67580-0	* LOGO DECAL * ﾛｺﾞﾃﾞｶｰﾙ	1	1	1	
14-11		3C7-72191-0	CAUTION DECAL (PL-B) ｺｰｼｮﾝﾃﾞｶｰﾙ (PL-B)	1		1	for Do Model

Fig. 15 FUEL TANK
フュエルタンク

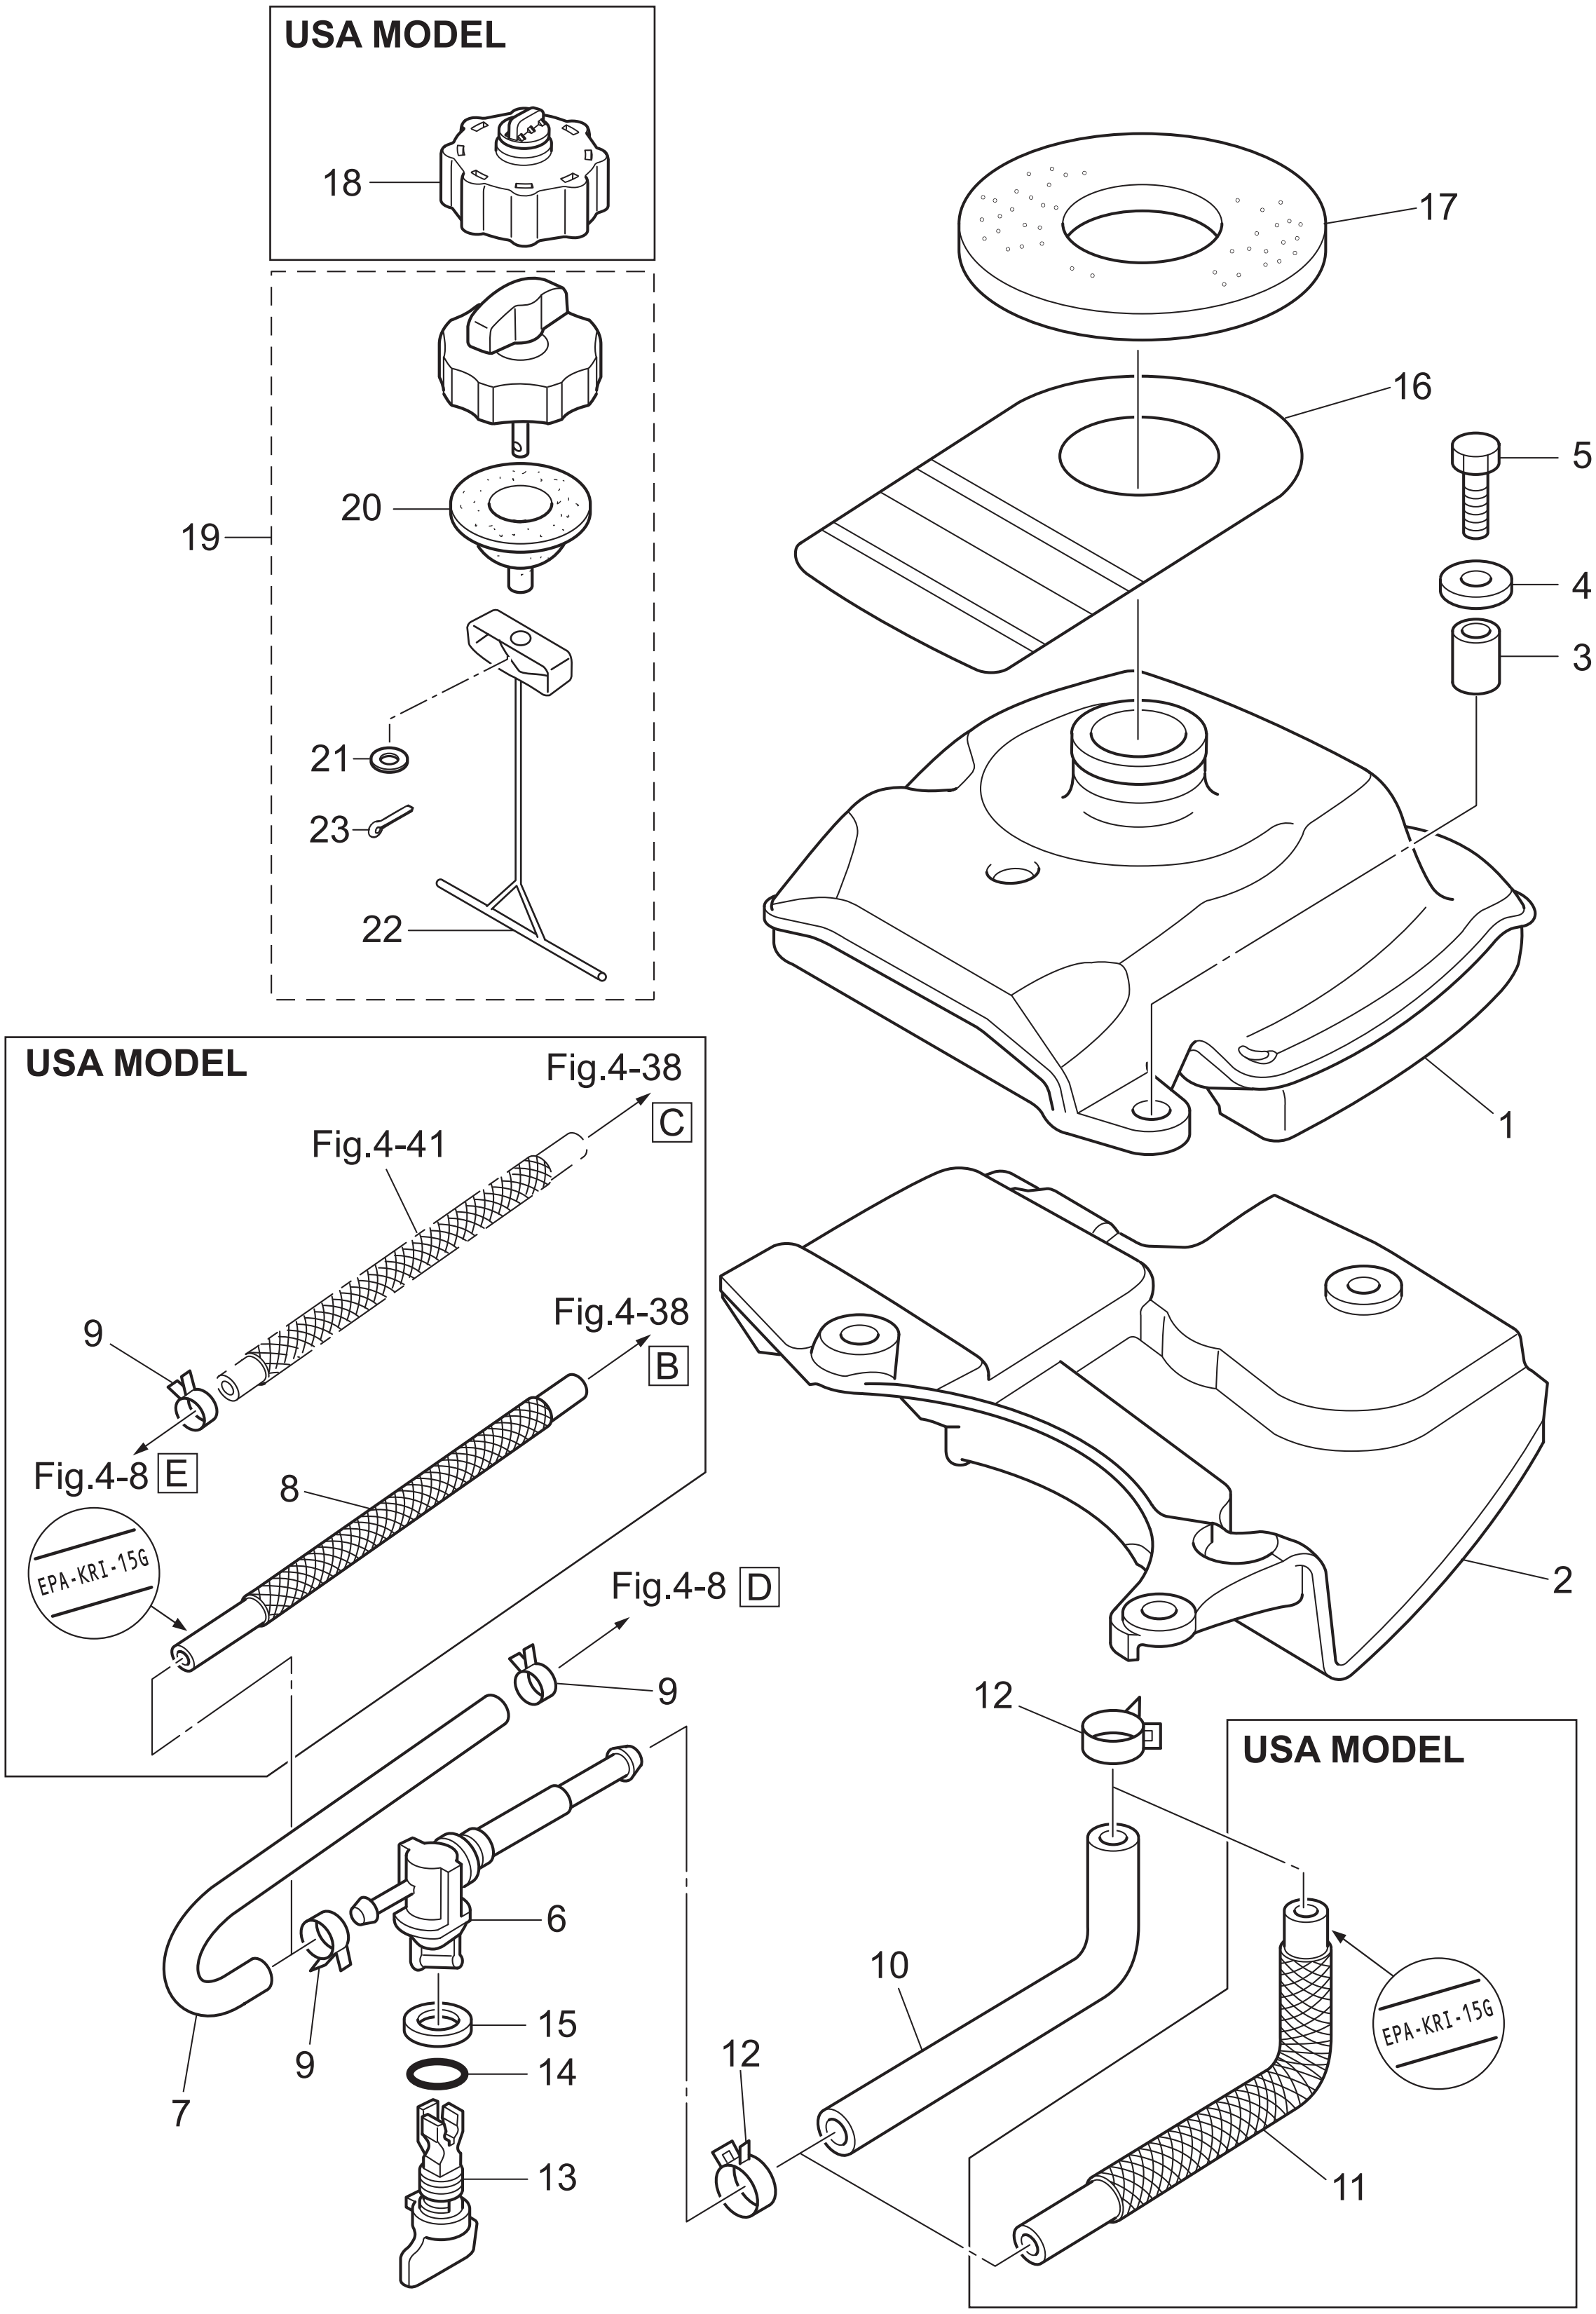

Ref.No. 見出番号		Part No. 部品番号	Description 部品名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備考
15-1	1	3GT-70310-1	FUEL TANK ASSY ﾌｭｴﾙﾀﾝｸｱｯｼ		1	1	Low Permeation Parts USA EPA-YZK-YK4
15-1	2	3AB-70310-3	FUEL TANK ASSY ﾌｭｴﾙﾀﾝｸｱｯｼ	1	1	1	STD
15-2		3AB-06846-1	COVER ｶﾊﾞｰ ﾌｭｴﾙﾀﾝｸ	1	1	1	
15-3		3T5-76079-0	COLLAR 6.2-9-10.7 ｶﾗｰ 6.2-9-10.7	3	3	3	
15-4		3C8-66308-0	WASHER 6-16-1.5 ﾜｯｼｬ 6-16-1.5	3	3	3	
15-5		910103-0625	BOLT ﾎﾞﾙﾄ	3	3	3	
15-6		369-70311-0	FUEL COCK ASSY ﾌｭｴﾙﾊﾞﾙﾌﾞｱｯｼ	1	1	1	
15-7		3GT-70326-0	FUEL HOSE 155-20-20 ﾌｭｴﾙﾎｰｽ 155-20-20	1	1	1	Fuel Valve-Carburetor STD
15-8		3GT-02165-0	FUEL HOSE W/PROTECTOR L=340 ﾌｭｴﾙﾎｰｽ W/ﾌﾟﾛﾃｸﾀ L=340		1	1	Low Permeation Parts USA EPA-KRI-15G
15-9		3GT-35143-0	CLIP φ9.4 ｸﾘｯﾌﾟ	2	2	2	
15-10		3GT-70325-0	FUEL HOSE L=215 ﾌｭｴﾙﾎｰｽ L=215	1	1	1	STD
15-11		3GT-02175-0	FUEL HOSE W/PROTECTOR L=215 ﾌｭｴﾙﾎｰｽ W/ﾌﾟﾛﾃｸﾀ L=215		1	1	Low Permeation Parts USA EPA-KRI-15G
15-12		3AB-02215-1	CLIP φ15 ｸﾘｯﾌﾟ φ15	2	2	2	
15-13		3GT-70062-0	FUEL COCK KNOB ﾌｭｴﾙﾊﾞﾙﾌﾞﾉﾌﾞ	1	1	1	Fuel Valve
15-14		3G9-66136-0	O-RING 2-10 Oﾘﾝｸﾞ 2-10	1	1	1	Fuel Valve
15-15		369-70063-0	SEAL RING ｼｰﾙﾘﾝｸﾞ ﾌｭｴﾙﾊﾞﾙﾌﾞﾛｯﾄﾞﾉﾌﾞ	1	1	1	Fuel Valve
15-16		3GT-72183-0	CAUTION TAG (B) ｺｰｼｮﾝﾀｸﾞ (B)	1	1	1	for Do & USA Model
15-17		3AB-70036-1	FUEL TANK SEAL ﾌｭｴﾙﾀﾝｸｼｰﾙ	1	1	1	
15-18		3GT-70321-0	FUEL TANK CAP ASSY ﾌｭｴﾙﾀﾝｸｷｬｯﾌﾟｱｯｼ		1	1	Low Permeation Parts USA EPA-ITX-DRN
15-19		3GP-70020-0	FUEL TANK CAP ASSY ﾌｭｴﾙﾀﾝｸｷｬｯﾌﾟｱｯｼ	1	1	1	
15-20		3GR-70021-0	* TANK FILLER CAP GASKET * ﾀﾝｸﾌｨﾗｷｬｯﾌﾟｶﾞｽｹｯﾄ	1	1	1	
15-21		940103-0400	* WASHER * ﾜｯｼｬ	1	1	1	
15-22		3H9-70095-0	* HOOK * ﾌｯｸ	1	1	1	
15-23		951503-1610	* SPLIT PIN 1.6-10 * ｽﾌﾟﾘｯﾄﾋﾟﾝ 1.6-10	1	1	1	

Fig. 16 OPTIONAL PARTS (ACCESSORIES)
オプショナルパーツ（アクセサリ）

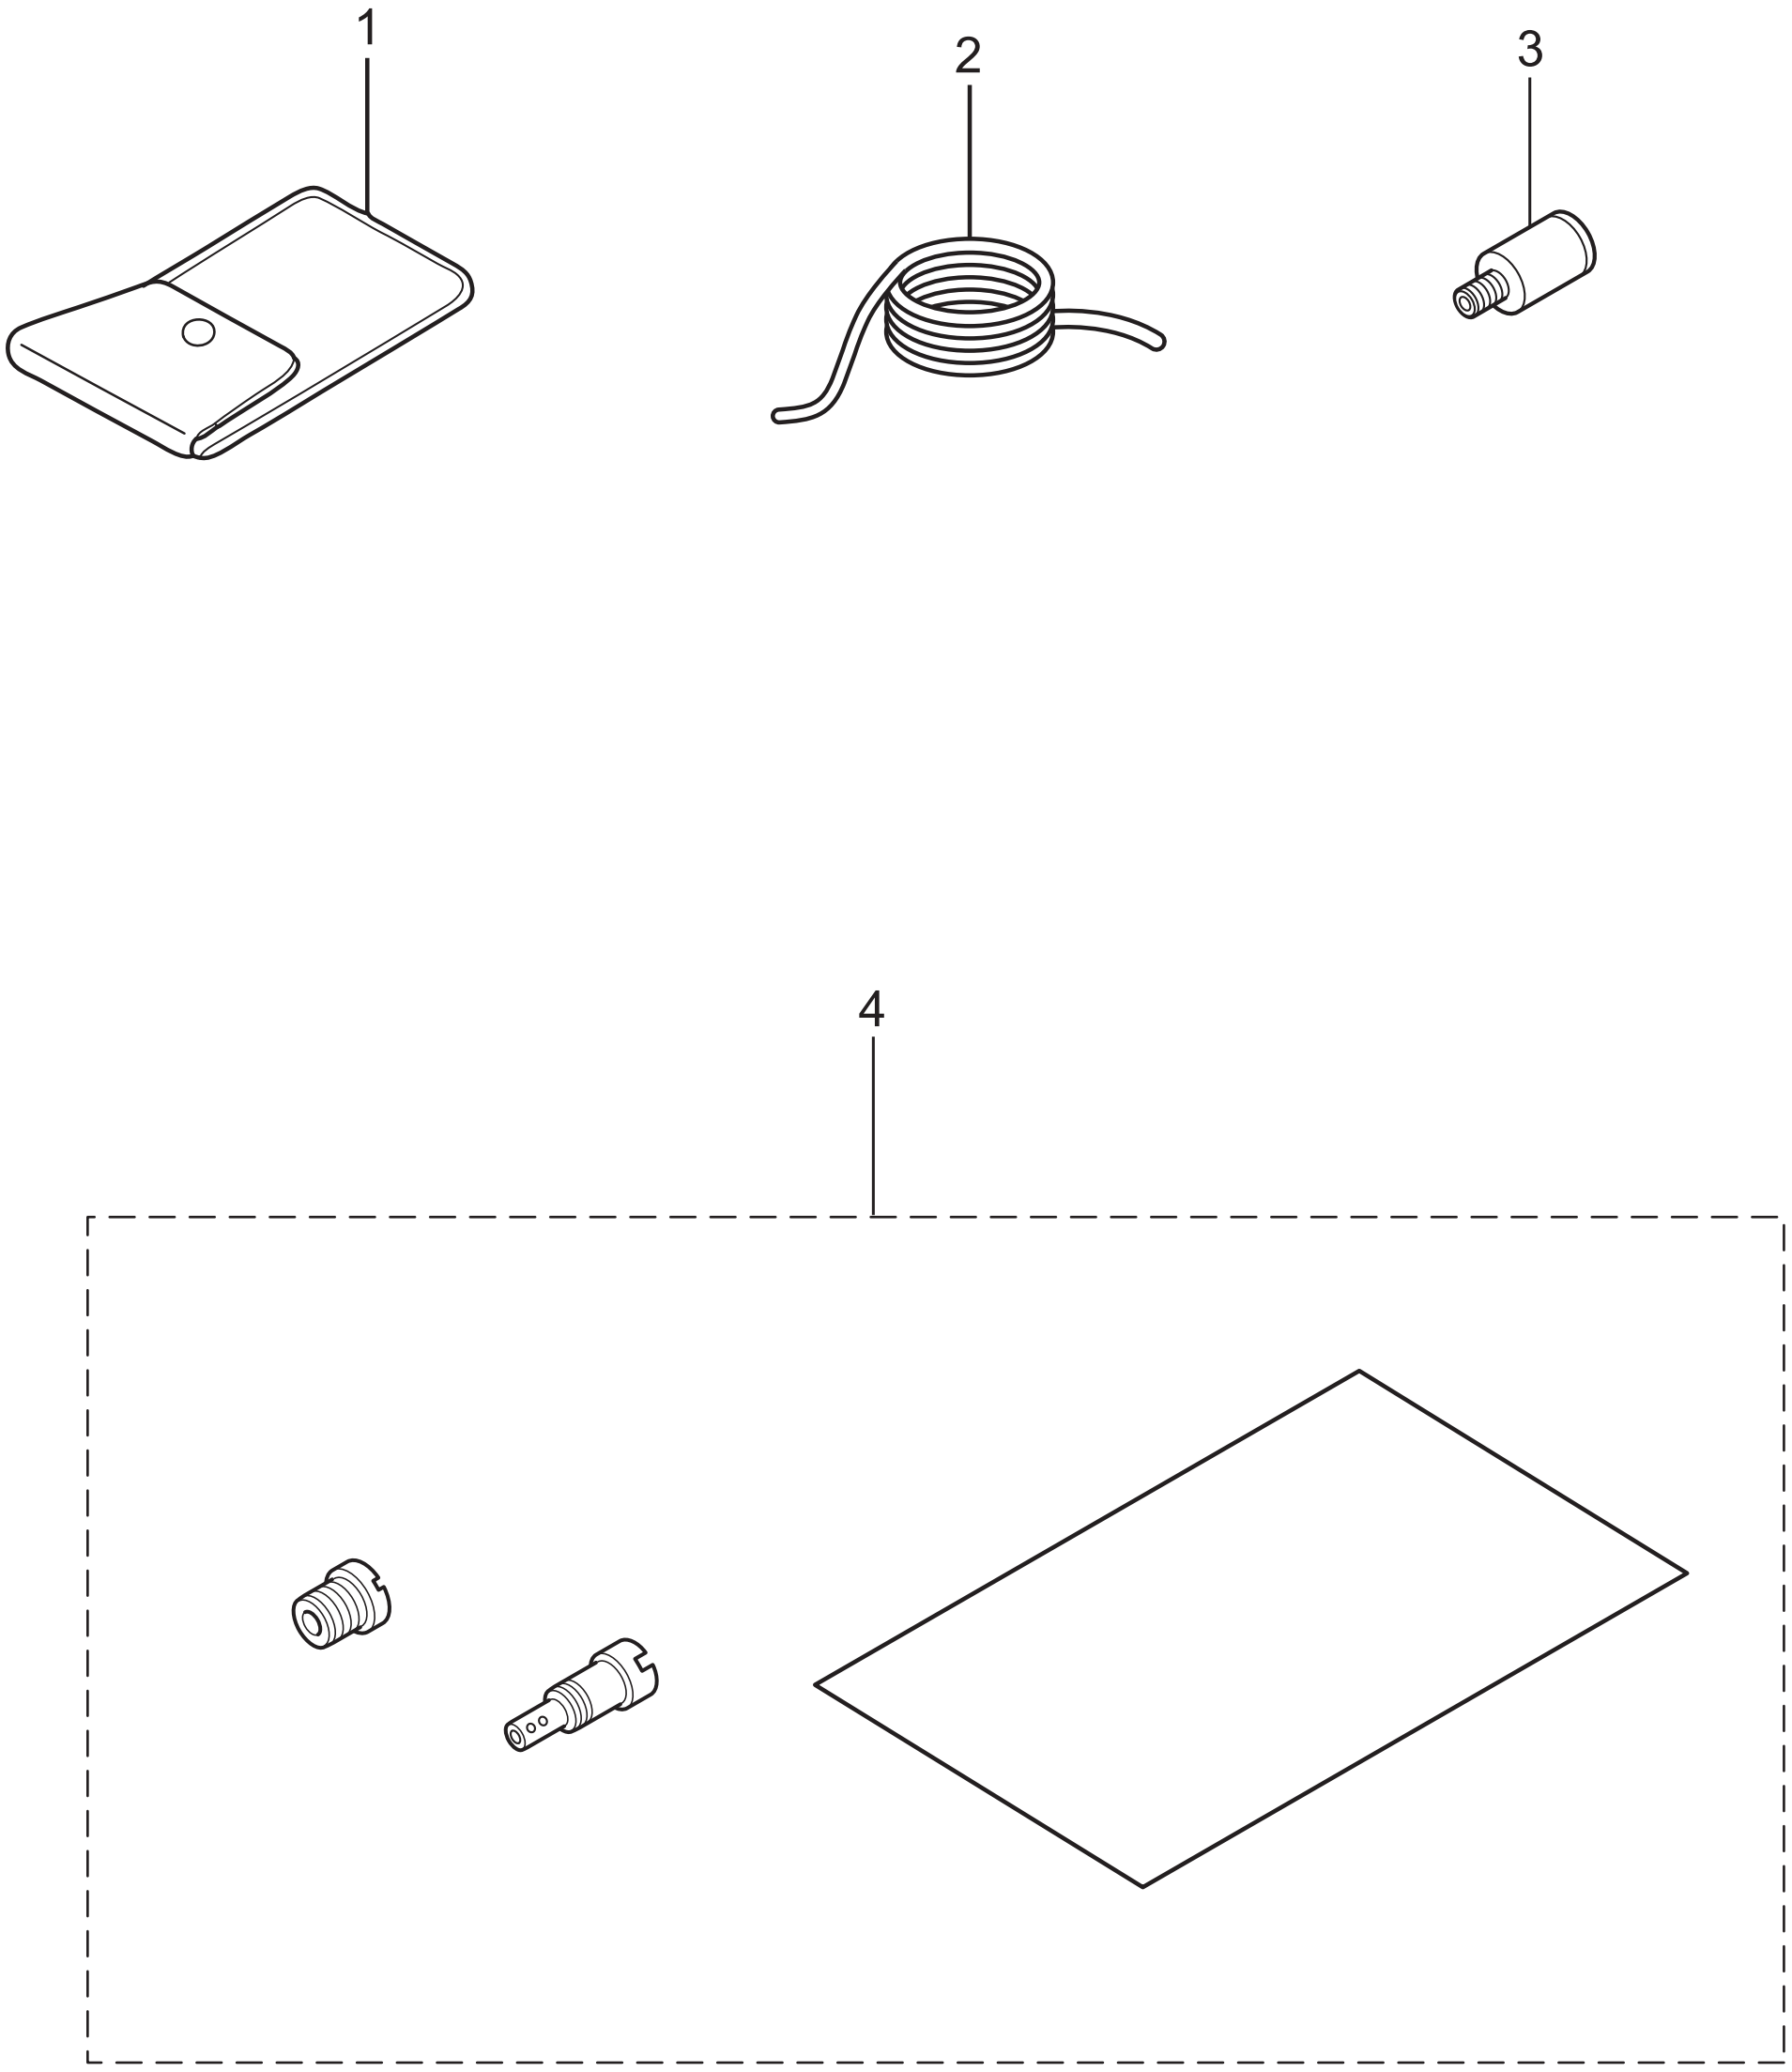

Ref.No. 見出番号		Part No. 部品番号	Description 部品名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備考
16-1		3BJ-72100-0	TOOL KIT ﾂｰﾙｷｯﾄ	1	1	1	
16-2		312-72201-0	SAFETY ROPE φ4-1000 ｾｰﾌﾃｨﾛｰﾌﾟ φ4-1000	1	1	1	
16-3		336-60007-0	FLUSHING PLUG ﾌﾗｯｼﾝｸﾞﾌﾟﾗｸﾞ	1	1	1	
16-4	1	3GU-10230-0	ALTITUDE ADJUSTMENT KIT 高地補正ｷｯﾄ		1		2.5ps
16-4	2	3LR-10230-0	ALTITUDE ADJUSTMENT KIT 高地補正ｷｯﾄ			1	3.5ps

Fig. 17 ASSEMBLY・KIT PARTS
アッセンブリ・キットパーツ

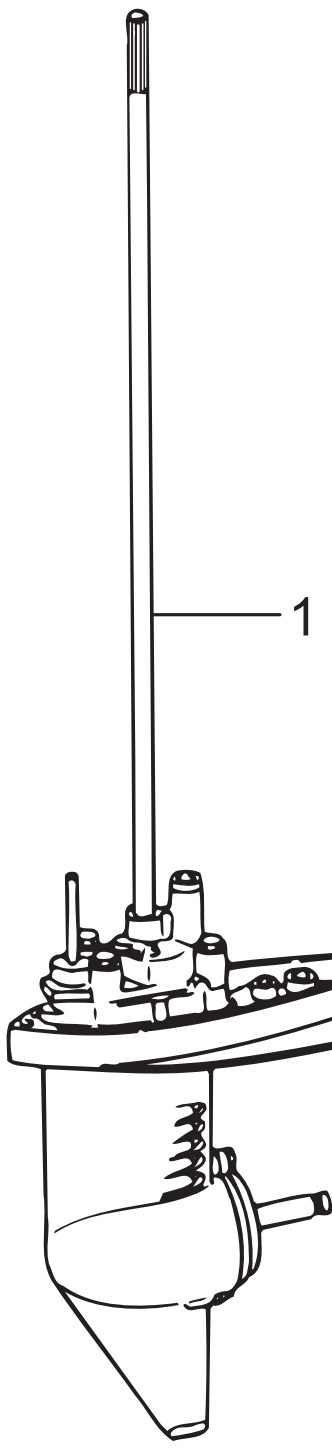

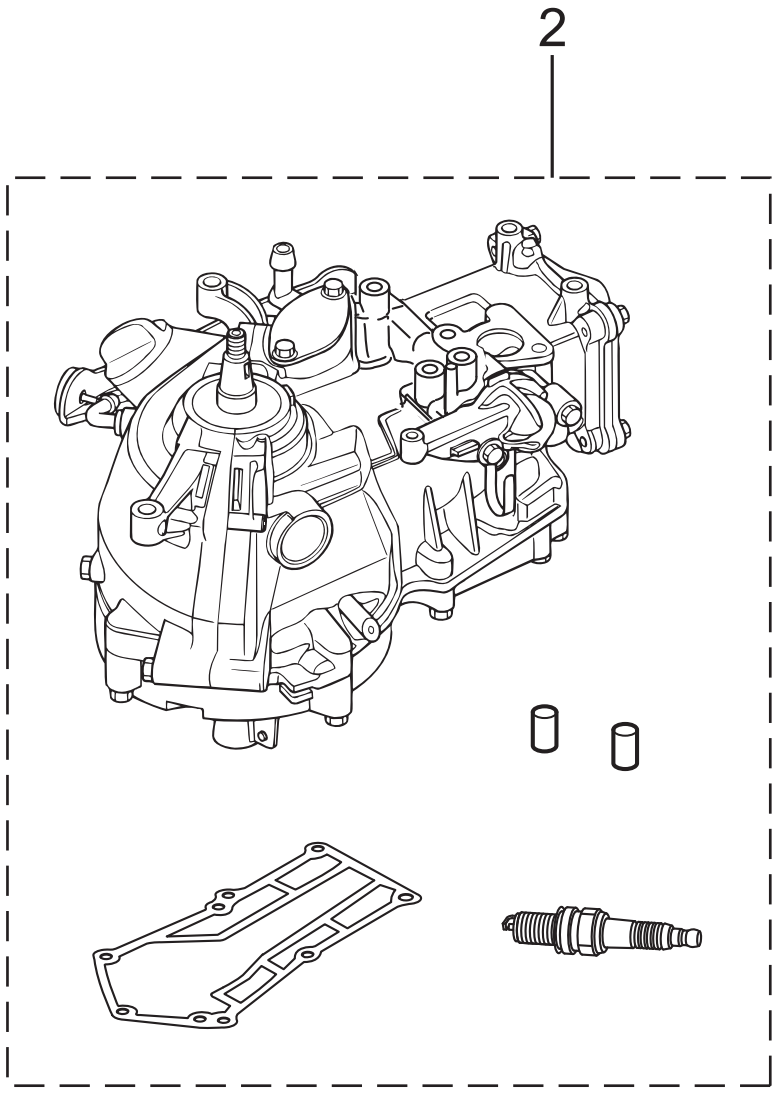

CARBURETOR REPAIR KIT
キャブレタリペアキット — 3

POWER HEAD GASKET SET
パワーヘッドガスケットセット — 4

WATER PUMP REPAIR KIT
ウォータポンプリペアキット — 5

LOWER UNIT GASKET SET
ロワユニットガスケットセット — 6

MAINTENACE KIT
メンテナンスキット — 8

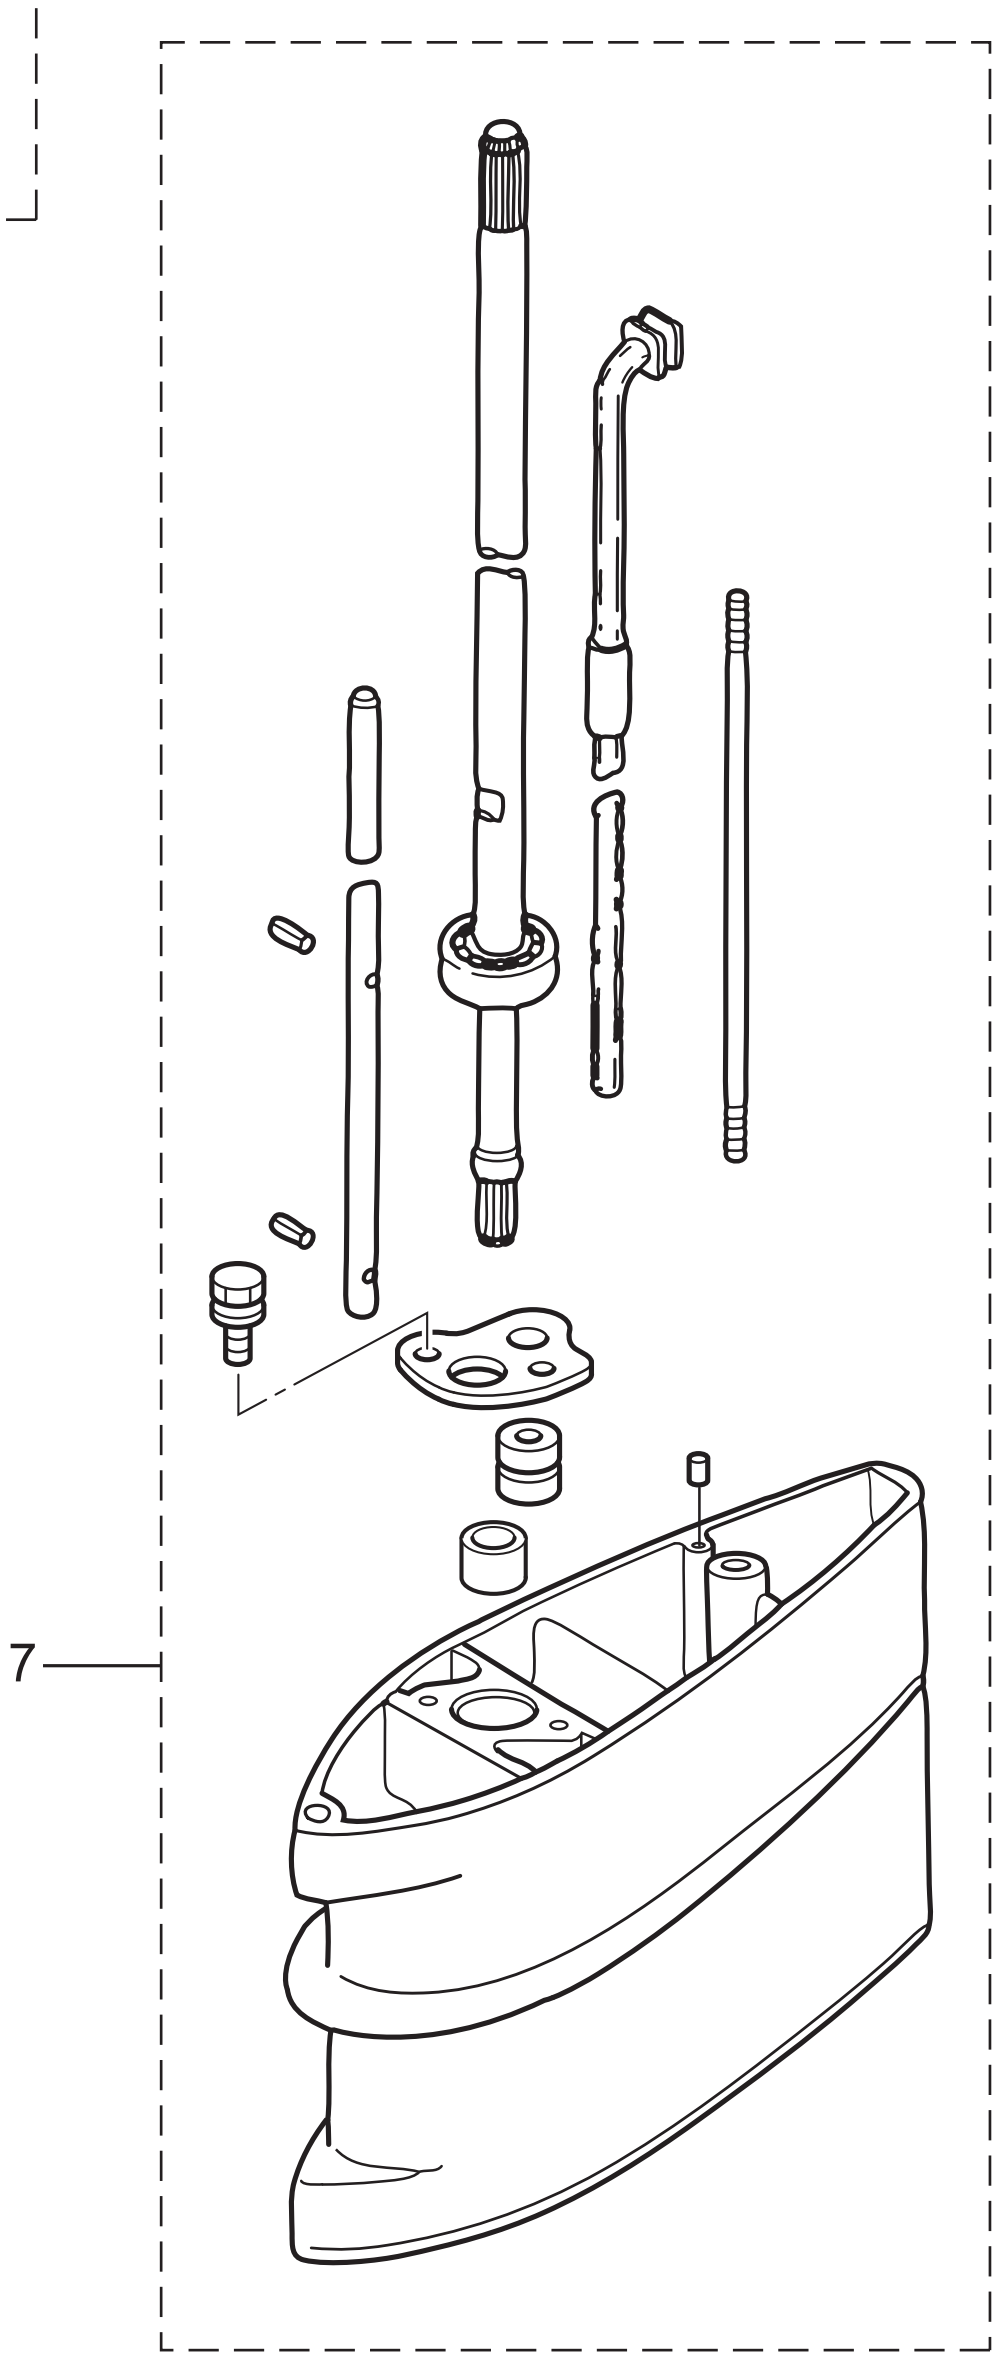

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
17-1	1	3BMQ87301-3	LOWER UNIT ASSY (S) ﾛﾜﾕﾆｯﾄｱｯｼ (S)	1	1	1	for Transom "S"
17-1	2	3BMQ87302-3	LOWER UNIT ASSY (L) ﾛﾜﾕﾆｯﾄｱｯｼ (L)	1	1	1	for Transom "L"
17-2	1	3GTB87090-5	ENGINE SHORT BLOCK KIT ｴﾝｼﾞﾝｼｮｰﾄﾌﾞﾛｯｸｷｯﾄ	1	1	1	
17-2	2	3GUB87090-0	ENGINE SHORT BLOCK KIT ｴﾝｼﾞﾝｼｮｰﾄﾌﾞﾛｯｸｷｯﾄ		1	1	for USA Model
17-3	1	3GT-87122-1	CARBURETOR REPAIR KIT ｷｬﾌﾞﾚﾀﾘﾍﾟｱｷｯﾄ	1	1	1	
17-3	2	3GT-03231-0	* FLOAT * ﾌﾛｰﾄ	1	1	1	
17-3	3	3H6-03240-0	* FLOAT VALVE * ﾌﾛｰﾄﾊﾞﾙﾌﾞ	1	1	1	
17-3	4	3H6-03244-0	* CLIP * ｸﾘｯﾌﾟ	1	1	1	
17-3	5	3H6-03232-0	* FLOAT ARM PIN * ﾌﾛｰﾄｱｰﾑﾋﾟﾝ	1	1	1	
17-3	6	3H6-03222-0	* FLOAT CHAMBER O-RING * ﾌﾛｰﾄﾁｬﾝﾊﾞOﾘﾝｸﾞ	1	1	1	
17-3	7	922503-6412	* SCREW * ｽｸﾘｭ	2	2	2	
17-3	8	3H6-03293-0	* O-RING * Oﾘﾝｸﾞ ﾄﾞﾚﾝｽｸﾘｭ	1	1	1	
17-3	9	3H6-02011-0	* CARBURETOR GASKET * ｷｬﾌﾞﾚﾀｶﾞｽｹｯﾄ	2	2	2	
17-4	1	3AB-87121-0	POWER HEAD GASKET SET ﾊﾟﾜｰﾍｯﾄﾞｶﾞｽｹｯﾄｾｯﾄ	1	1	1	
17-4	2	3AB-01024-1	* CYLINDER HEAD COVER GASKET * ｼﾘﾝﾀﾞﾍｯﾄﾞｶﾊﾞｰｶﾞｽｹｯﾄ	1	1	1	
17-4	3	3AB-01032-0	* THERMOSTAT CAP GASKET * ｻｰﾓｽﾀｯﾄｷｬｯﾌﾟｶﾞｽｹｯﾄ	1	1	1	
17-4	4	3AB-07432-0	* GASKET * ｶﾞｽｹｯﾄ ﾌﾞﾘｰｻﾞﾁｬﾝﾊﾞｶﾊﾞｰ	1	1	1	
17-4	5	3AB-00121-0	* OIL SEAL 20-35-7 * ｵｲﾙｼｰﾙ 20-35-7	2	2	2	Crankshaft
17-4	6	3H6-03293-0	* O-RING * Oﾘﾝｸﾞ ﾄﾞﾚﾝｽｸﾘｭ	1	1	1	Carburetor
17-4	7	3H6-02011-0	* CARBURETOR GASKET * ｷｬﾌﾞﾚﾀｶﾞｽｹｯﾄ	2	2	2	
17-4	8	3AB-02104-0	* INTAKE MANIFOLD GASKET * ｲﾝﾃｰｸﾏﾆﾎｰﾙﾄﾞｶﾞｽｹｯﾄ	1	1	1	
17-4	9	3AB-07402-0	* OILPAN GASKET * ｵｲﾙﾊﾟﾝｶﾞｽｹｯﾄ	1	1	1	
17-4	10	3R0-07422-0	* O-RING 3.1-24.4 * Oﾘﾝｸﾞ 3.1-24.4	1	1	1	Oil Filler Cap
17-4	11	3AB-01215-0	* OIL SEAL 10.1-20-7 * ｵｲﾙｼｰﾙ 10.1-20-7	2	2	2	Driveshaft
17-4	12	3V1-02012-0	* O-RING 2.4-35.2 * Oﾘﾝｸﾞ 2.4-35.2	1	1	1	Crankcase Head
17-4	13	3AB-61012-0	* DRIVE SHAFT HOUSING GASKET * ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞｶﾞｽｹｯﾄ	1	1	1	

Fig. 17 ASSEMBLY・KIT PARTS
アッセンブリ・キットパーツ

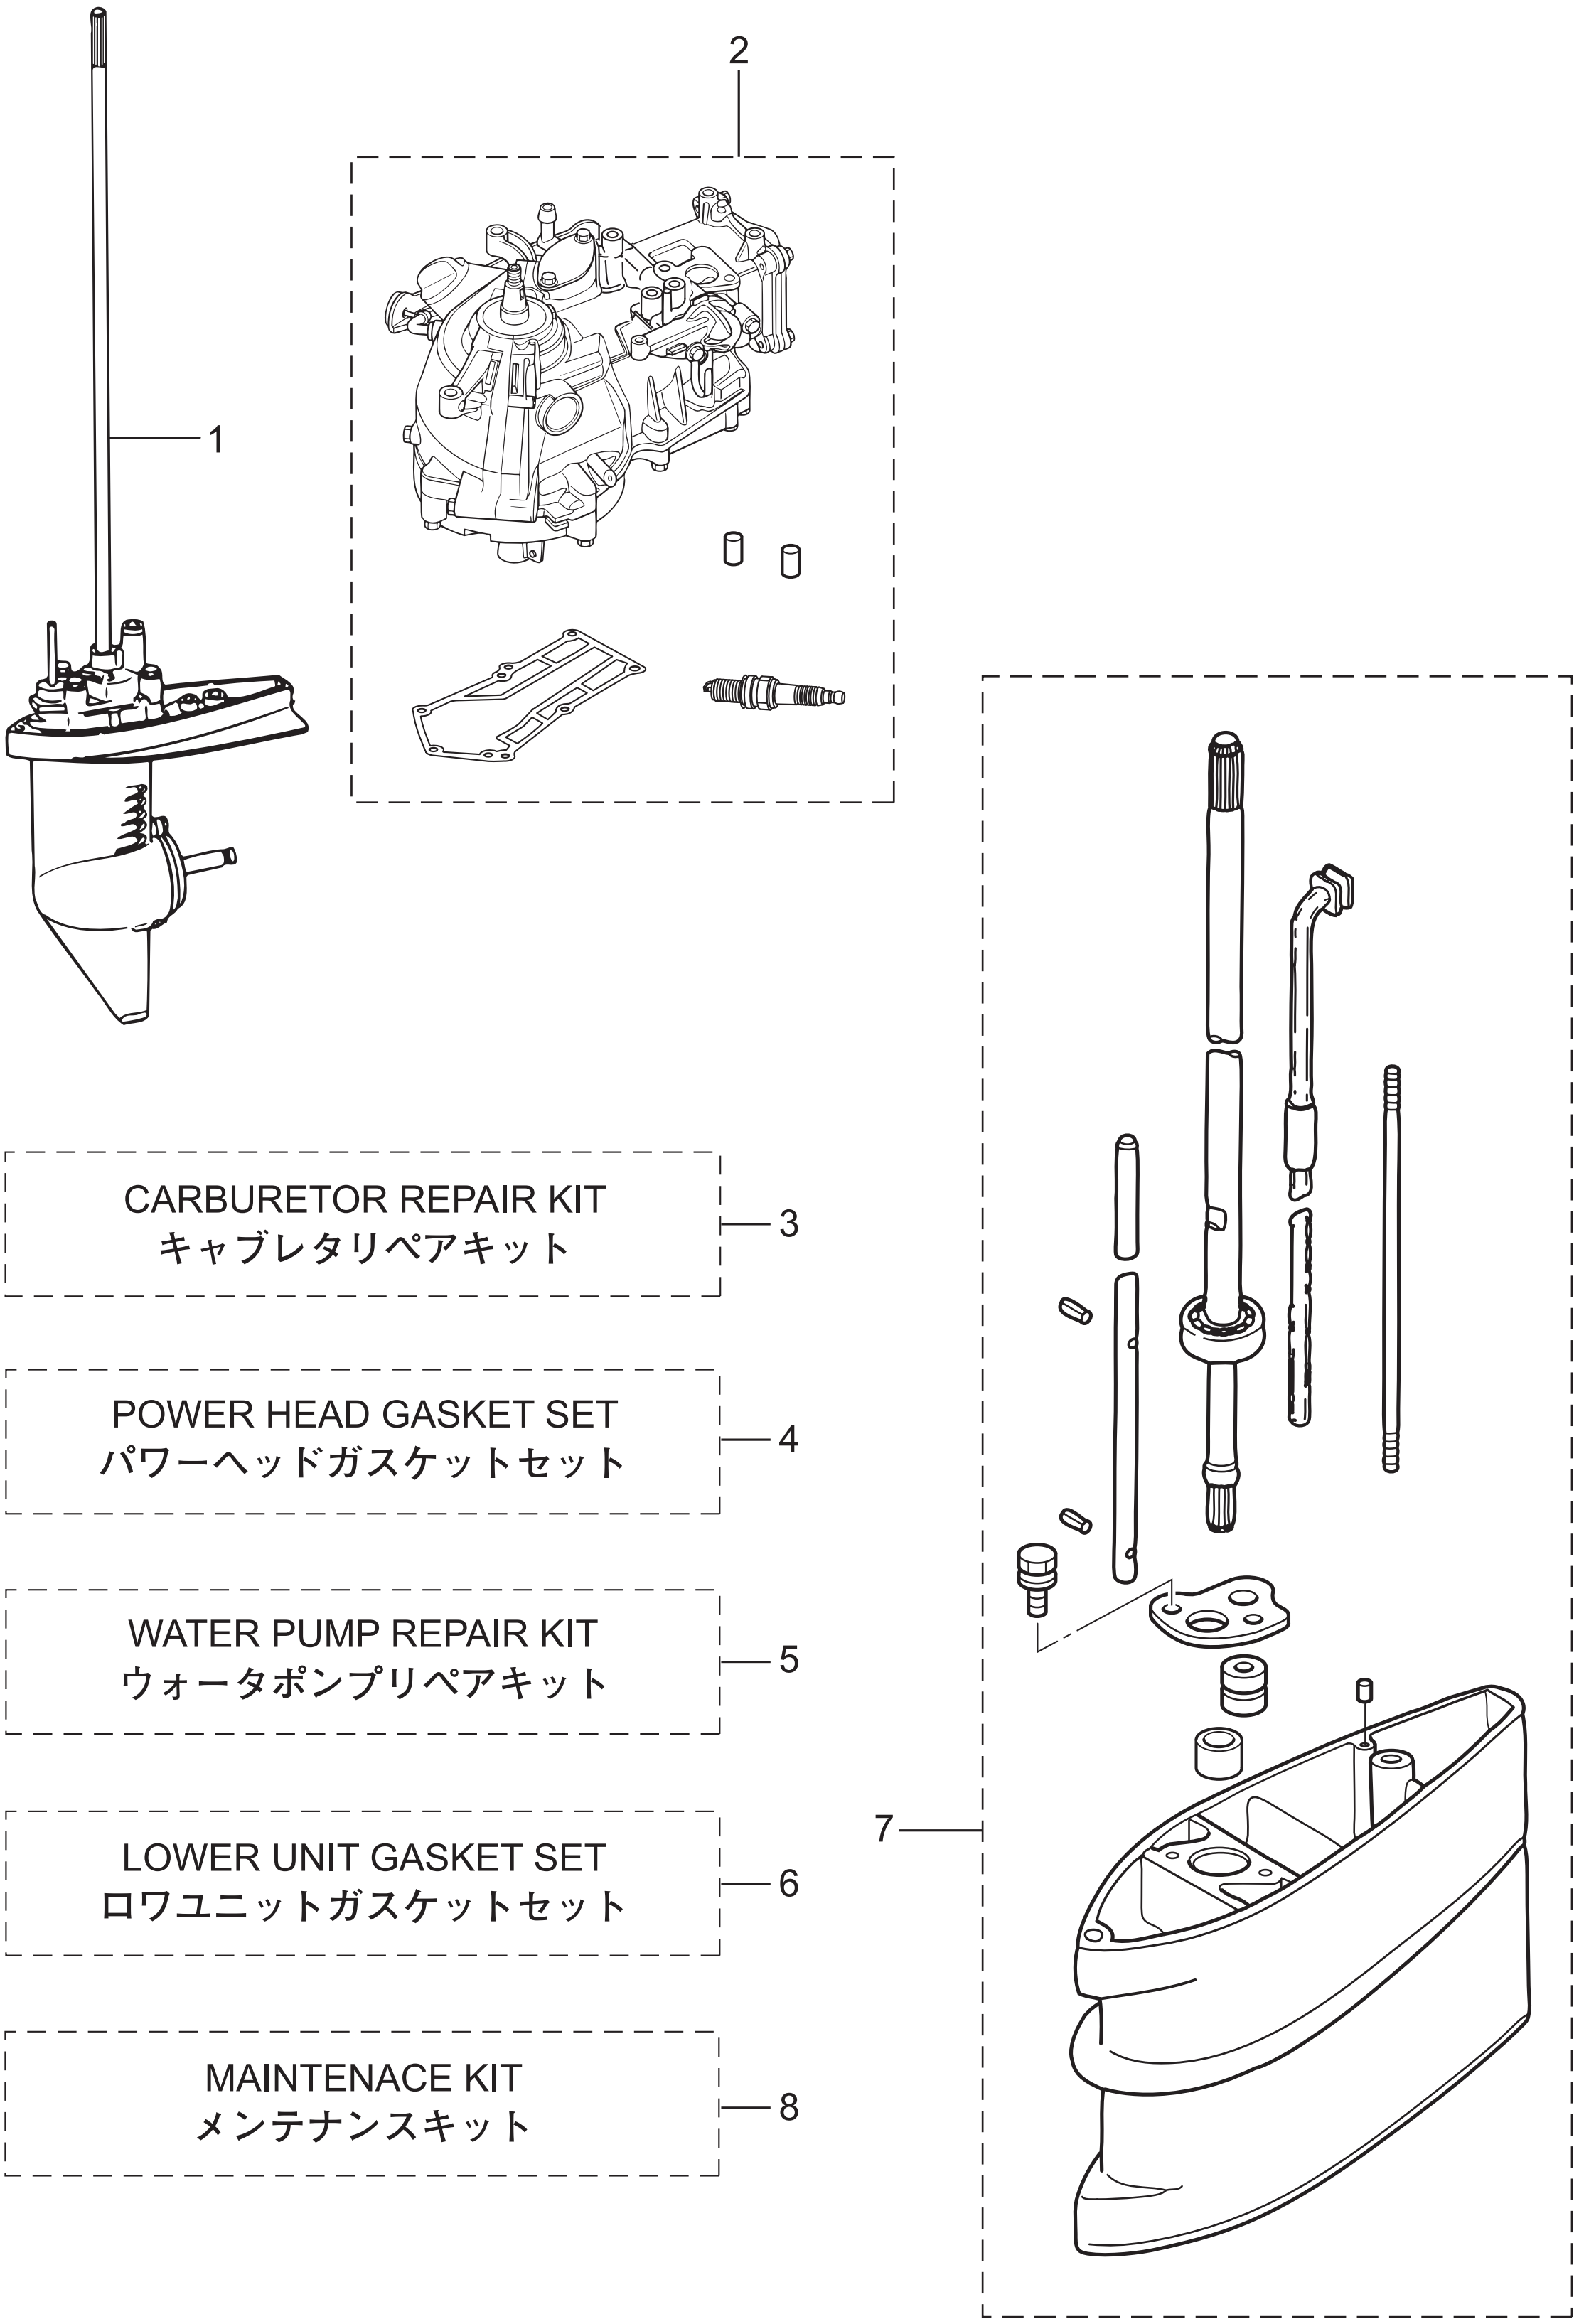

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
17-5	1	3AB-87322-0	WATER PUMP REPAIR KIT ｳｫｰﾀﾎﾟﾝﾌﾟﾘﾍﾟｱｷｯﾄ	1	1	1	
17-5	2	369-65021-1	* WATER PUMP IMPELLER * ｳｫｰﾀﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ	1	1	1	
17-5	3	369-65022-0	* KEY φ2-11 * ｷｰ ﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ φ2-11	1	1	1	
17-5	4	3F0-65011-0	* PUMP CASE LINER * ﾎﾟﾝﾌﾟｹｰｽﾗｲﾅ	1	1	1	
17-5	5	3F0-65018-0	* PUMP CASE GASKET * ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ	1	1	1	
17-5	6	3AB-65025-0	* WATER PUMP GUIDE PLATE * ｳｫｰﾀﾎﾟﾝﾌﾟｶﾞｲﾄﾞﾌﾟﾚｰﾄ	1	1	1	
17-5	7	3F0-65029-0	* GUIDE PLATE GASKET * ｶﾞｲﾄﾞﾌﾟﾚｰﾄｶﾞｽｹｯﾄ	1	1	1	
17-6	1	3F0-87321-0	LOWER UNIT GASKET SET ﾛﾜﾕﾆｯﾄｶﾞｽｹｯﾄｾｯﾄ	1	1	1	
17-6	2	332-60006-1	* GASKET * ｶﾞｽｹｯﾄ 8.1-15-1	2	2	2	
17-6	3	369-65021-1	* WATER PUMP IMPELLER * ｳｫｰﾀﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ	1	1	1	
17-6	4	369-65022-0	* KEY φ2-11 * ｷｰ ﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ φ2-11	1	1	1	
17-6	5	3F0-65018-0	* PUMP CASE GASKET * ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ	1	1	1	
17-6	6	3F0-65029-0	* GUIDE PLATE GASKET * ｶﾞｲﾄﾞﾌﾟﾚｰﾄｶﾞｽｹｯﾄ	1	1	1	
17-6	7	3F0-60223-0	* OIL SEAL 10-22-8 * ｵｲﾙｼｰﾙ 10-22-8	1	1	1	Pump Case Lower
17-6	8	3F0-65020-0	* PUMP CASE GASKET (LOWER) * ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ (ﾛﾜ)	1	1	1	
17-6	9	309-60111-0	* OIL SEAL 12-24-8 * ｵｲﾙｼｰﾙ 12-24-8	1	1	1	Propeller Shaft
17-6	10	345-65015-0	* O-RING 3.2-47 * Oﾘﾝｸﾞ 3.2-47	1	1	1	Propeller Shaft Housing
17-6	11	369-66021-1	* O-RING 2.5-4.9 * Oﾘﾝｸﾞ A 2.5-4.9	1	1	1	Cam Rod
17-6	12	301-66023-0	* O-RING 2.4-9.5 * Oﾘﾝｸﾞ 2.4-9.5	1	1	1	Bushing
17-7	1	3ABQ87312-3	EXTENSION HOUSING KIT (L) ｴｸｽﾃﾝｼｮﾝﾊｳｼﾞﾝｸﾞｷｯﾄ (L)	1	1	1	for Transom"S"⇒"L"
17-7	2	3ABQ61100-0	* EXTENSION HOUSING * ｴｸｽﾃﾝｼｮﾝﾊｳｼﾞﾝｸﾞ	1	1	1	
17-7	3	3AB-60003-0	* DRIVE SHAFT BUSHING * ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾌﾞｯｼﾝｸﾞ (ﾀﾞｰｸﾌﾞﾗｳﾝ)	1	1	1	
17-7	4	3AB-64332-0	* STOPPER * ｽﾄｯﾊﾟ ﾌﾞｯｼﾝｸﾞ	1	1	1	
17-7	5	172-36008-0	* GROMMET 13-2 * ｸﾞﾛﾒｯﾄ 13-2	1	1	1	
17-7	6	9101E3-5612	* BOLT * ﾎﾞﾙﾄ	2	2	2	
17-7	7	3F0-61101-1	* STUD 6-171 * ｽﾀｯﾄﾞ 6-171	1	1	1	
17-7	8	3GU-60001-0	* BOLT 6-30 * ﾎﾞﾙﾄ	1	1	1	

Fig. 17　ASSEMBLY・KIT PARTS
アッセンブリ・キットパーツ

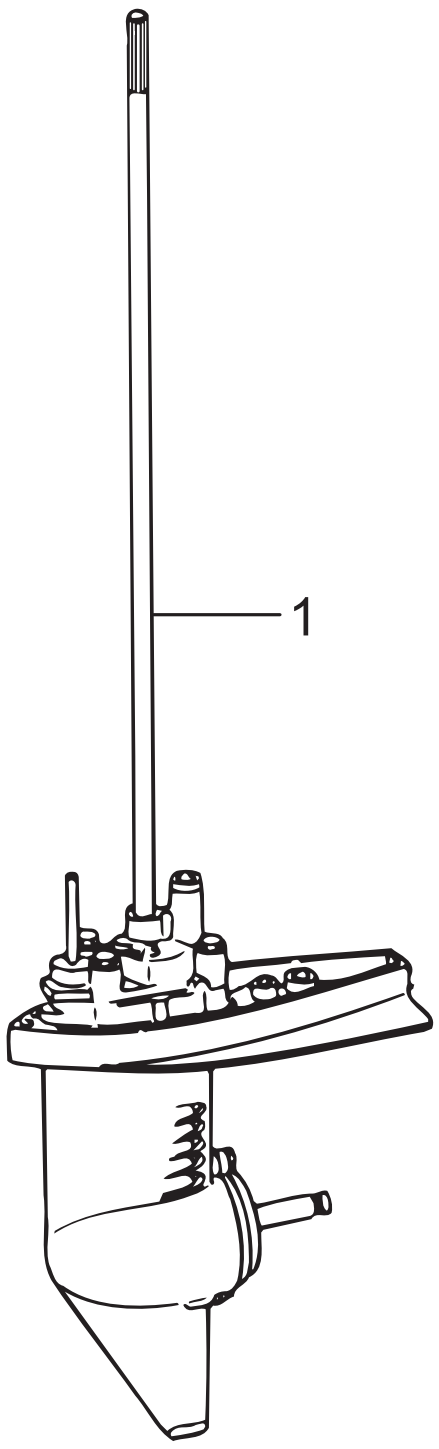

1

2

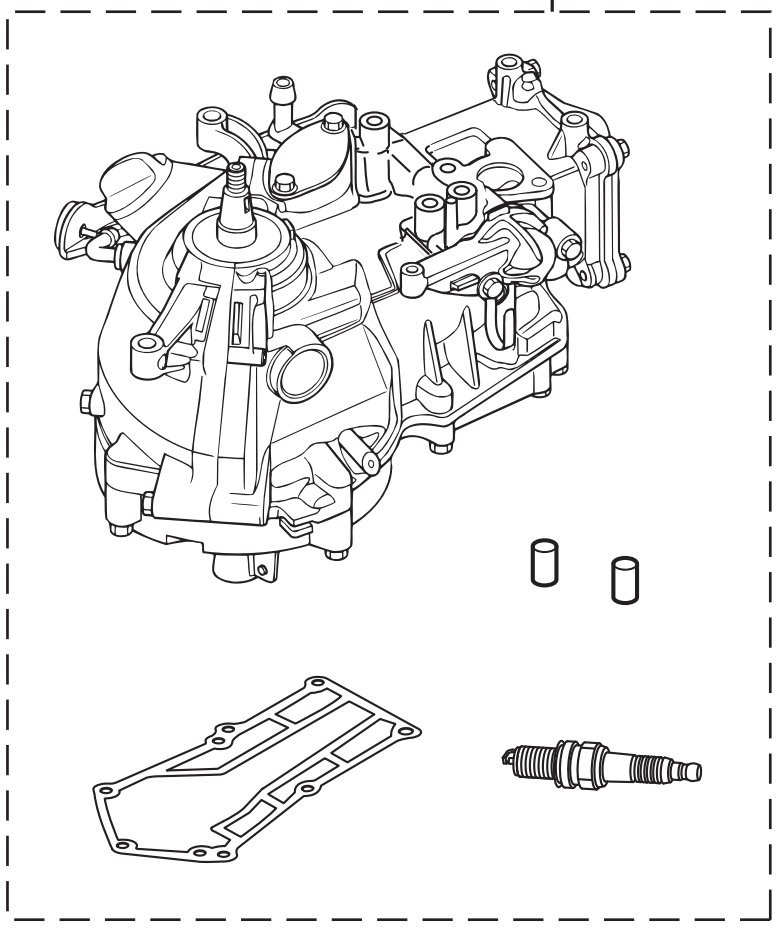

CARBURETOR REPAIR KIT
キャブレタリペアキット — 3

POWER HEAD GASKET SET
パワーヘッドガスケットセット — 4

WATER PUMP REPAIR KIT
ウォータポンプリペアキット — 5

LOWER UNIT GASKET SET
ロワユニットガスケットセット — 6

MAINTENACE KIT
メンテナンスキット — 8

7

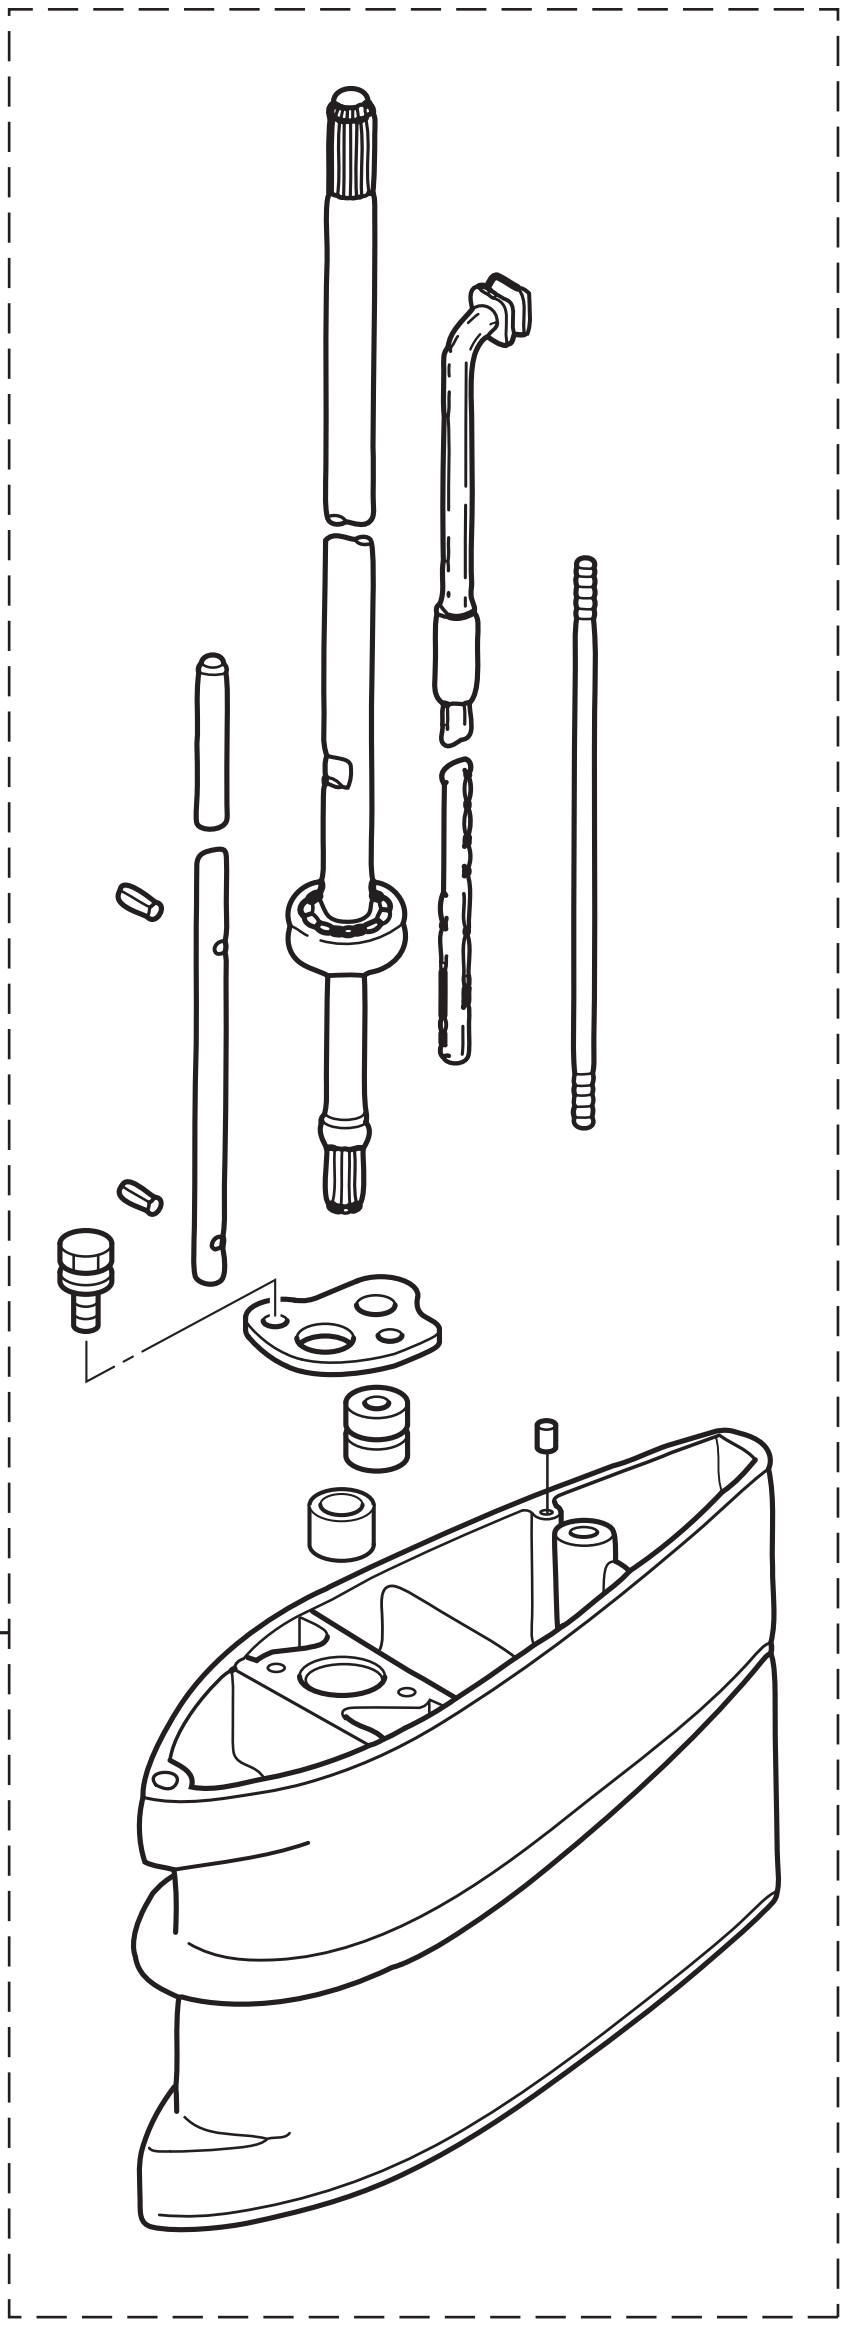

Ref.No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty/個数 MFS2C	MFS2.5C	MFS3.5C	Remarks 備 考
17-7	9	930103-0600	NUT ﾅｯﾄ	1	1	1	
17-7	10	9401E3-0600	* WASHER * ﾜｯｼｬ	1	1	1	
17-7	11	3F0-64302-0	* DRIVE SHAFT ASSY (L) * ﾄﾞﾗｲﾌﾞｼｬﾌﾄｱｯｼ (L)	1	1	1	
17-7	12	3F0-66013-0	* CAM ROD (L) * ｶﾑﾛｯﾄﾞ (L)	1	1	1	
17-7	13	951407-0308	* SPRING PIN 3-8 * ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ 3-8	2	2	2	
17-7	14	3AB-65192-0	* WATER PIPE ASSY (L) * ｳｫｰﾀﾊﾟｲﾌﾟｱｯｼ (L)	1	1	1	
17-7	15	3AB-01111-0	* DOWEL PIN 6-12 * ﾀﾞｳｪﾙﾋﾟﾝ 6-12	1	1	1	
17-8	1	3GT-87500-0	MAINTENANCE KIT FOR MFS2/2.5/3.5B ﾒﾝﾃﾅﾝｽｷｯﾄ	1	1	1	
17-8	2	309-64126-1	* SHEAR PIN 4-24 * ｼｬｰﾋﾟﾝ 4-24	1	1	1	
17-8	3	332-60006-1	* GASKET * ｶﾞｽｹｯﾄ 8.1-15-1	2	2	2	
17-8	4	338-60218-2	* ANODE * ｱﾉｰﾄﾞ	1	1	1	
17-8	5	369-65021-1	* WATER PUMP IMPELLER * ｳｫｰﾀﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ	1	1	1	
17-8	6	369-65022-0	* KEY φ2-11 * ｷｰ ﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ φ2-11	1	1	1	
17-8	7	3AB-65025-0	* WATER PUMP GUIDE PLATE * ｳｫｰﾀﾎﾟﾝﾌﾟｶﾞｲﾄﾞﾌﾟﾚｰﾄ	1	1	1	
17-8	8	3F0-65011-0	* PUMP CASE LINER * ﾎﾟﾝﾌﾟｹｰｽﾗｲﾅ	1	1	1	
17-8	9	3F0-65018-0	* PUMP CASE GASKET * ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ	1	1	1	
17-8	10	3F0-65029-0	* GUIDE PLATE GASKET * ｶﾞｲﾄﾞﾌﾟﾚｰﾄｶﾞｽｹｯﾄ	1	1	1	
17-8	11	3H6-07406-0	* WASHER 10.2-19-1 * ﾜｯｼｬ 10.2-19-1	1	1	1	
17-8	12	951503-0435	* SPLIT PIN 4-35 * ｽﾌﾟﾘｯﾄﾋﾟﾝ 4-35	1	1	1	
17-8	13	9701-1-1103	* SPARK PLUG(DCPR6E) * ｽﾊﾟｰｸﾌﾟﾗｸﾞ (DCPR6E)	1	1	1	

索引

<O>
Oリング 1.9-6.8 . . . 9-7
Oリング 2.4-35.2. . . . 3-16
Oリング 2.4-35.2. . . . 17-4-12
Oリング 2.4-9.5 . . . 10-25
Oリング 2.4-9.5 . . . 11-2
Oリング 2.4-9.5 . . . 17-6-12
Oリング 2-10 . . . 15-14
Oリング 3.1-24.4. . . . 1-9
Oリング 3.1-24.4. . . . 17-4-10
Oリング 3.2-47 . . . 10-43
Oリング 3.2-47 . . . 17-6-10
Oリング A 2.5-4.9 . . . 10-24
Oリング A 2.5-4.9 . . . 17-6-11
Oリング ドレンスクリュ . . . 4-20
Oリング ドレンスクリュ . . . 17-3-8
Oリング ドレンスクリュ . . . 17-4-6
<ア>
アジャストナット . . . 1-23
アジャストナット . . . 12-9
アノード . . . 10-3
アノード . . . 17-8-4
<イ>
イグナイタ W/R-キャップ . . . 7-4
インシュレータ . . . 4-26
インテークサイレンサアッシ . . . 4-27
インテークバルブ . . . 1-11
インテークバルブステムシール . . . 1-2
インテークマニホールド . . . 4-1
インテークマニホールドアッシ . . . 4-2
インテークマニホールドガスケット . . . 4-6
インテークマニホールドガスケット . . . 17-4-8
<ウ>
ウォータパイプアッシ (L) . . . 10-48-2
ウォータパイプアッシ (L) . . . 17-7-14
ウォータパイプアッシ (S) . . . 10-48-1
ウォータポンプインペラ . . . 10-27
ウォータポンプインペラ . . . 17-5-2
ウォータポンプインペラ . . . 17-6-3
ウォータポンプインペラ . . . 17-8-5
ウォータポンプガイドプレート . . . 10-22
ウォータポンプガイドプレート . . . 17-5-6
ウォータポンプガイドプレート . . . 17-8-7
ウォータポンプリペアキット . . . 17-5-1
<エ>
エキゾーストバルブ . . . 1-12
エキゾーストバルブステムシール . . . 1-3
エクステンションハウジング . . . 8-11
エクステンションハウジング . . . 17-7-2
エクステンションハウジングキット (L) . . . 17-7-1
エンジンショートブロックキット . . . 17-2-1
エンジンショートブロックキット . . . 17-2-2
<オ>
オイルサイトゲージ . . . 3-2
オイルシール 10.1-20-7 . . . 3-15
オイルシール 10.1-20-7 . . . 17-4-11
オイルシール 10-22-8 . . . 10-19
オイルシール 10-22-8 . . . 17-6-7
オイルシール 12-24-8 . . . 10-42
オイルシール 12-24-8 . . . 17-6-9
オイルシール 20-35-7 . . . 2-4
オイルシール 20-35-7 . . . 17-4-5
オイルパンアッシ . . . 3-1
オイルパンガスケット . . . 3-6
オイルパンガスケット . . . 17-4-9
オイルフィラキャップ . . . 1-8
オイルレベルデカール . . . 13-18-1
<カ>
ガイドプレートガスケット . . . 10-21
ガイドプレートガスケット . . . 17-5-7
ガイドプレートガスケット . . . 17-6-6
ガイドプレートガスケット . . . 17-8-10
カウルラッチアッシ . . . 13-2
ガスケット 8.1-15-1. . . . 8-8
ガスケット 8.1-15-1. . . . 10-6
ガスケット 8.1-15-1. . . . 17-6-2
ガスケット 8.1-15-1. . . . 17-8-3
ガスケット ブリーザチャンバカバー . . . 1-35
ガスケット ブリーザチャンバカバー . . . 17-4-4
カバー . . . 12-19
カバー フュエルタンク . . . 15-2
カムシャフトアッシ . . . 1-10
カムロッド (L) . . . 10-15-2
カムロッド (L) . . . 17-7-12
カムロッド (S) . . . 10-15-1
カムロッドブッシング . . . 10-26
カラー 6.2-9-10.7 . . . 15-3
カラー 6.2-9-35 . . . 7-8
カラー 6.2-9-7.4 . . . 3-9
カラー 6.2-9-7.4 . . . 4-29
カラー 6.2-9-7.4 . . . 13-3
カラー 6.4-10-4.7 . . . 13-13
カラー ドラム . . . 5-6
<キ>
キー 10-3.7-3 . . . 2-7
キー ポンプインペラ φ2-11 . . . 10-28
キー ポンプインペラ φ2-11 . . . 17-5-3
キー ポンプインペラ φ2-11 . . . 17-6-4
キー ポンプインペラ φ2-11 . . . 17-8-6
キー ポンプインペラ φ3-11 . . . 10-20
ギヤケースアッシ . . . 10-1
キャブレタアッシ . . . 4-8-1
キャブレタアッシ . . . 4-8-2
キャブレタアッシ . . . 4-8-3
キャブレタガスケット . . . 4-25
キャブレタガスケット . . . 17-3-9
キャブレタガスケット . . . 17-4-7
キャブレタリペアキット . . . 17-3-1
<ク>
クラッチ . . . 10-35
クラッチカム . . . 10-14
クランクケースヘッド . . . 3-14
クランクシャフトアッシ W/ギヤ . . . 2-1
クランプ 6.5-67P . . . 1-32
クランプ 6.5-67P . . . 5-2
クランプ 6.5-67P . . . 6-16
クランプスクリュ . . . 11-32
クランプスクリュアッシ . . . 11-31
クランプスクリュキット . . . 11-30
クランプスクリュパッド . . . 11-35
クランプスクリュハンドル . . . 11-33
クランプブラケット . . . 11-1
グリスフィッティング . . . 8-1a
クリップ . . . 4-14
クリップ . . . 15-9
クリップ . . . 17-3-4
グリップ . . . 12-6
クリップ φ10 . . . 3-12
クリップ φ10 . . . 4-40
クリップ φ12 . . . 4-5
クリップ φ15 . . . 15-12
グロメット 13-2 . . . 8-14
グロメット 13-2 . . . 17-7-5
グロメット 29-3 . . . 8-9
グロメット ウォータパイプ (アッパ) . . . 10-49
グロメット ウォータパイプ (ロワ) . . . 10-31
<コ>
高地補正キット . . . 16-4-1
高地補正キット . . . 16-4-2
コーションタグ (B) . . . 15-16
コーションデカール . . . 8-21
コーションデカール . . . 14-1-3
コーションデカール (A) . . . 14-1-1
コーションデカール (PL-B) . . . 14-11
コーションデカール（B). . . . 6-17
コッタ . . . 1-15
コンロッドアッシ . . . 2-5
コンロッドボルト . . . 2-6
<サ>
サーモスタット . . . 1-28
サーモスタットキャップ . . . 1-29
サーモスタットキャップ . . . 1-30
サーモスタットキャップガスケット . . . 1-31
サーモスタットキャップガスケット . . . 17-4-3
<シ>
シールリング フュエルバルブロッドノブ . . . 15-15
シフトデカール . . . 13-16-1
シフトレバーシャフトアッシ . . . 9-6

シフトロッド (S) . . . 9-1
シフトロッドジョイントアッシ . . . 9-4
シフトロッドレバー . . . 9-11
シム 21-28-0.1 . . . 10-8-1
シム 21-28-0.15 . . . 10-8-2
シャーピン 4-24 . . . 10-46
シャーピン 4-24 . . . 17-8-2
ショルダボルト . . . 11-36
シリンダブロック&クランクケースアッシ . . . 1-1
シリンダヘッドカバー . . . 1-24
シリンダヘッドカバーガスケット . . . 1-25
シリンダヘッドカバーガスケット . . . 17-4-2
<ス>
スイベルブラケット A . . . 11-5
スイベルブラケット B . . . 11-21
スクリュ . . . 4-18
スクリュ . . . 12-7
スクリュ . . . 12-13
スクリュ . . . 17-3-7
スタータシール . . . 6-2
スタータスプリング . . . 6-3
スタータハンドル . . . 6-11
スタータロープ φ3.5-1200 . . . 6-5
スタッド 6-171 . . . 8-18
スタッド 6-171 . . . 17-7-7
ステアリングブラケット . . . 8-2
ストッパ . . . 11-6
ストッパ ブッシング . . . 8-13
ストッパ ブッシング . . . 17-7-4
ストップスイッチアッシ . . . 13-10
ストップスイッチデカ-ル . . . 13-20
ストップスイッチランヤードアッシ . . . 13-11
ストップスクリュ . . . 4-21
スパークプラグ (DCPR6E) . . . 1-38
スパークプラグ (DCPR6E) . . . 17-8-13
スパイラルチューブプロテクタ φ10-100 . . . 4-4
スプリットピン 1.6-10 . . . 15-23
スプリットピン 2-12 . . . 9-3
スプリットピン 4-35 . . . 10-47
スプリットピン 4-35 . . . 17-8-12
スプリング . . . 11-9
スプリング . . . 12-10
スプリング クラッチ . . . 10-36
スプリング シフトレバーストッパ . . . 9-9
スプリング ストップスクリュ . . . 4-22
スプリング フリクションプレート . . . 11-23
スプリングピン 2-12 . . . 11-8
スプリングピン 3-8 . . . 10-16
スプリングピン 3-8 . . . 17-7-13
スプリングワッシャ . . . 10-34
スペーサ 10.1-15-72 . . . 10-12
スラストサポータ . . . 11-18
スラストブッシング . . . 11-28
スラストプレート 20.2-32-1 . . . 2-3
スラストロッドアッシ . . . 11-20
スリンガ . . . 1-37
スローエアジェット (#115) . . . 4-11-1
スローエアジェット (#125) . . . 4-11-2
スローエアジェット (#130) . . . 4-11-3
スロットルオープナ . . . 5-5
スロットルシャフト . . . 12-5
スロットルシャフトサポート . . . 12-12
スロットルシャフトダンパ . . . 12-4
スロットルデカール . . . 12-14
スロットルドラム . . . 5-4
スロットルロッド . . . 5-9
スロットルワイヤ . . . 12-15
スロットルワイヤブラケット . . . 5-1
<セ>
セーフティロープ φ4-1000 . . . 16-2
セラミックボール 7.7 . . . 9-8
<タ>
ダウェルピン 6-12 . . . 1-4
ダウェルピン 6-12 . . . 3-3
ダウェルピン 6-12 . . . 8-4
ダウェルピン 6-12 . . . 8-5
ダウェルピン 6-12 . . . 8-16
ダウェルピン 6-12 . . . 17-7-15
タンクフィラキャップガスケット . . . 15-20
ダンパ (ロワ) . . . 11-19
<チ>
チョークロッド . . . 13-6
チョークロッドブッシング . . . 13-5
チョークワイヤ . . . 13-7
チルトストッパ . . . 11-4
<ツ>
ツールキット . . . 16-1
<テ>
ディスタンスピース . . . 11-15
ティラハンドル . . . 12-2
ティラハンドルアッシ . . . 12-1-1
デカールセット(MFS2.5C) . . . 14-9-5
デカールセット(MFS2C) . . . 14-9-1
デカールセット(MFS3.5C) . . . 14-9-3
<ト>
トップカウルアッシ . . . 14-2-1
トップカウルサブアッシ . . . 14-3-1
トップカウルシール L=1100 . . . 14-8
ドライブシャフトアッシ (L) . . . 10-10-2
ドライブシャフトアッシ (L) . . . 17-7-11
ドライブシャフトアッシ (S) . . . 10-10-1
ドライブシャフトハウジングアッシ(S) . . . 8-1
ドライブシャフトハウジングガスケット . . . 3-13
ドライブシャフトハウジングガスケット . . . 17-4-13
ドライブシャフトブッシング (ダークブラウン) . . . 8-12
ドライブシャフトブッシング (ダークブラウン) . . . 17-7-3
ドレンスクリュ . . . 4-19
ドレンボルト 10-14 P1.25 . . . 3-4
<ナ>
ナイロンナット 8-P1.25 . . . 11-13
ナット . . . 8-19
ナット . . . 11-16
ナット . . . 17-7-9
ナット 10-P1.25 . . . 7-3
<ノ>
ノブ チルトストッパ . . . 11-3
<ハ>
パイロットスクリュ . . . 4-24-1
パイロットスクリュ . . . 4-24-2
バルブスプリング L=35 . . . 1-13
バルブスプリングシート . . . 1-16
パワーヘッドガスケットセット . . . 17-4-1
<ヒ>
ピストン . . . 2-9
ピストンピン . . . 2-10
ピストンピンクリップ . . . 2-11
ピストンリペアキット . . . 2-8
ピストンリング . . . 2-13
ピストンリング . . . 2-14
ピストンリング オイル . . . 2-15
ピストンリングセット . . . 2-12
ピボット ロッカアーム . . . 1-22
ピボットボルト . . . 1-20
<フ>
フック . . . 15-22
プッシュロッド . . . 1-18
プッシュロッド クラッチ . . . 10-37
ブッシング 14-15.8-7 . . . 12-3
ブッシング アッパ ステアリング . . . 11-27
ブッシング ハンドル . . . 12-17
ブッシング ハンドル 32-34-11.8 . . . 12-18
ブッシング ピボット . . . 11-26
フュエルタンクアッシ . . . 15-1-1
フュエルタンクアッシ . . . 15-1-2
フュエルタンクキャップアッシ . . . 15-18
フュエルタンクキャップアッシ . . . 15-19
フュエルタンクシール . . . 15-17
フュエルバルブアッシ . . . 15-6
フュエルバルブノブ . . . 15-13
フュエルホース 155-20-20 . . . 15-7
フュエルホース L=215 . . . 15-10
フュエルホース W/プロテクタ L=215 . . . 15-11
フュエルホース W/プロテクタ L=340 . . . 15-8
フュエルホース W/プロテクタ L=390 . . . 4-41
フュエルホースプロテクタ . . . 12-16
フュエルポンプアッシ . . . 4-38
フュエルレバーデカール . . . 13-17-1
フライホイール . . . 7-1
プラグ 8-8 . . . 10-5
プラグキャップ W/レジスタンス . . . 7-5
ブラケット ストッパ . . . 3-8
プラスチックリベット 6.5 . . . 12-13a
フラッシングプラグ . . . 16-3
ブリーザチャンバカバー . . . 1-34
ブリーザホース . . . 4-37
フリクションスプリング . . . 6-10

フリクションノブ 11-25
フリクションピース 11-22
フリクションピース 12-8
フリクションプレート 6-8
プレート プッシュロッド 1-19
プレコートボルト 6-60. 6-14
フロート 4-12
フロート 17-3-2
フロートアームピン 4-15
フロートアームピン 17-3-5
フロートチャンバ 4-16
フロートチャンバOリング 4-17
フロートチャンバOリング 17-3-6
フロートバルブ 4-13
フロートバルブ 17-3-3
"プロペラアッシ (4.5"") (プラスチック)" 10-50-1
"プロペラアッシ (6"") (アルミ)" 10-50-4
"プロペラアッシ (6"") (プラスチック)" 10-50-2
"プロペラアッシ (7"") (プラスチック)" 10-50-3
プロペラシャフト 10-38
プロペラシャフトハウジング 10-40
プロペラシャフトハウジングアッシ 10-39
<ヘ>
ベベルギャ B 10-13
ベベルギャアッシ (A) 10-9
<ホ>
ホース 3-11
ホース 4-3
ホース 4-36
ホース 8-10
ボールベアリング 6000 10-2
ボールベアリング 6000 10-11
ボールベアリング 6001 10-41
ボールベアリング 6004 10-7
ボールベアリング 6204 2-2
ボールベアリング 6204 2-2a
ボトムカウル 13-1-1
ボルト 1-5
ボルト 1-6
ボルト 1-26
ボルト 1-33
ボルト 1-36
ボルト 3-7
ボルト 3-10
ボルト 3-17
ボルト 4-7
ボルト 4-31
ボルト 4-39
ボルト 5-3
ボルト 5-7
ボルト 6-9
ボルト 7-6
ボルト 8-3
ボルト 8-6
ボルト 8-7
ボルト 8-15
ボルト 8-17
ボルト 9-5
ボルト 9-12
ボルト 10-4
ボルト 10-32
ボルト 10-44
ボルト 10-45
ボルト 11-10
ボルト 12-11
ボルト 12-20
ボルト 13-4
ボルト 13-9
ボルト 13-12
ボルト 13-14
ボルト 15-5
ボルト 17-7-6
ボルト 17-7-8
ボルト 8-122 11-12
ボルト プレコート 6-35 11-29
ポンプケース (アッパ) 10-29
ポンプケースアッシ (ロワ) 10-18
ポンプケースガスケット 10-23
ポンプケースガスケット 17-5-5
ポンプケースガスケット 17-6-5
ポンプケースガスケット 17-8-9
ポンプケースガスケット (ロワ) 10-17
ポンプケースガスケット (ロワ) 17-6-8
ポンプケースライナ 10-30
ポンプケースライナ 17-5-4
ポンプケースライナ 17-8-8
<メ>
メインジェット (#58) 4-10-1
メインジェット (#65) 4-10-2
メインジェット (#68) 4-10-3
メインノズル 4-9-1
メインノズル 4-9-2
メインノズル 4-9-3
メンテナンスキット 17-8-1
<ラ>
ラチェット 6-6
ラバーキャップ 4-23
<リ>
リール 6-4
リコイルスタータアッシ 6-1
リターンスプリング 6-7
リテーナ 1-14
リフタ 1-17
リベット 3-22 11-34
リングギヤカバーアッシ 7-7
<レ>
レバー 11-7
<ロ>
ロープアンカ 6-12
ロープアンカプレート 6-13
ロゴデカール 14-10
ロッカアーム 1-21
ロワユニットアッシ (L) 17-1-2
ロワユニットアッシ (S) 17-1-1
ロワユニットガスケットセット 17-6-1
<ワ>
ワッシャ 1-7
ワッシャ 4-32
ワッシャ 7-2
ワッシャ 8-20
ワッシャ 9-2
ワッシャ 10-33
ワッシャ 11-11
ワッシャ 11-17
ワッシャ 11-24
ワッシャ 15-21
ワッシャ 17-7-10
ワッシャ 10.2-19-1 3-5
ワッシャ 10.2-19-1 17-8-11
ワッシャ 10.5-18-1.5 9-10
ワッシャ 6.5-21-1 13-8
ワッシャ 6-16-1.5 1-27
ワッシャ 6-16-1.5 5-8
ワッシャ 6-16-1.5 6-15
ワッシャ 6-16-1.5 13-15
ワッシャ 6-16-1.5 15-4
ワッシャ 8.5-28-1 11-14

INDEX

<A>
ADJUSTING NUT 1-23
ADJUSTING NUT 12-9
ALTITUDE ADJUSTMENT KIT 16-4-1
ALTITUDE ADJUSTMENT KIT 16-4-2
ANODE 10-3
ANODE 17-8-4
<B>
BALL BEARING 6000 10-2
BALL BEARING 6000 10-11
BALL BEARING 6001 10-41
BALL BEARING 6004 10-7
BALL BEARING 6204 2-2
BALL BEARING 6204 2-2a
BEVEL GEAR ASSY (A) 10-9
BEVEL GEAR B 10-13
BOLT 1-5
BOLT 1-6
BOLT 1-26
BOLT 1-33
BOLT 1-36
BOLT 3-7
BOLT 3-10
BOLT 3-17
BOLT 4-7
BOLT 4-31
BOLT 4-39
BOLT 5-3
BOLT 5-7
BOLT 6-9
BOLT 7-6
BOLT 8-3
BOLT 8-6
BOLT 8-7
BOLT 8-15
BOLT 9-5
BOLT 9-12
BOLT 10-4
BOLT 10-32
BOLT 10-44
BOLT 11-10
BOLT 12-11
BOLT 12-20
BOLT 13-4
BOLT 13-9
BOLT 13-12
BOLT 13-14
BOLT 15-5
BOLT 17-7-6
BOLT 6-30 8-17
BOLT 6-30 10-45
BOLT 6-30 17-7-8
BOLT 6-35 11-29
BOLT 8-122 11-12
BOTTOM COWL 13-1-1
BRACKET 3-8
BREATHER CHAMBER COVER 1-34
BREATHER HOSE 4-37
BUSHING 11-26
BUSHING 11-27
BUSHING 12-17
BUSHING 14-15.8-7 12-3
BUSHING 32-34-11.8 12-18
<C>
CAM ROD (L) 10-15-2
CAM ROD (L) 17-7-12
CAM ROD (S) 10-15-1
CAM ROD BUSHING 10-26
CAMSHAFT ASSY 1-10
CARBURETOR ASSY 4-8-1
CARBURETOR ASSY 4-8-2
CARBURETOR ASSY 4-8-3
CARBURETOR GASKET 4-25
CARBURETOR GASKET 17-3-9
CARBURETOR GASKET 17-4-7
CARBURETOR REPAIR KIT 17-3-1
CAUTION DECAL 14-1-3
CAUTION DECAL (A) 14-1-1
CAUTION DECAL (B) 6-17
CAUTION DECAL (PL-B) 14-11
CAUTION TAG (B) 15-16
CERAMIC BALL 7.7 9-8
CHOKE ROD 13-6
CHOKE ROD BUSHING 13-5
CHOKE WIRE 13-7
CLAMP 6.5-67P 1-32
CLAMP 6.5-67P 5-2
CLAMP 6.5-67P 6-16
CLAMP BRACKET 11-1
CLAMP SCREW 11-32
CLAMP SCREW ASSY 11-31
CLAMP SCREW HANDLE 11-33
CLAMP SCREW KIT 11-30
CLAMP SCREW PAD 11-35
CLIP 4-14
CLIP 17-3-4
CLIP φ10 3-12
CLIP φ10 4-40
CLIP φ12 4-5
CLIP φ15 15-12
CLIP φ9.4 15-9
CLUTCH 10-35
CLUTCH CAM 10-14
COLLAR 6.2-9-10.7 15-3
COLLAR 6.2-9-35 7-8
COLLAR 6.2-9-7.4 3-9
COLLAR 6.2-9-7.4 4-29
COLLAR 6.2-9-7.4 13-3
COLLAR 6.4-10-4.7 13-13
COLLAR 6.5-10.5-22.6 5-6
CONNECTING ROD ASSY 2-5
CONNECTING ROD BOLT 2-6
COTTER 1-15
COVER 12-19
COVER 15-2
COWL LATCH ASSY 13-2
CRANKCASE HEAD 3-14
CRANKSHAFT ASSY W/GEAR 2-1
CYL BLOCK & CRANKCASE ASSY 1-1
CYLINDER HEAD COVER 1-24
CYLINDER HEAD COVER GASKET 1-25
CYLINDER HEAD COVER GASKET 17-4-2
<D>
DAMPER (LOWER) 11-19
DECAL SET(MFS2.5C) 14-9-5
DECAL SET(MFS2C) 14-9-1
DECAL SET(MFS3.5C) 14-9-3
DISTANCE PIECE 11-15
DOWEL PIN 6-12 1-4
DOWEL PIN 6-12 3-3
DOWEL PIN 6-12 8-4
DOWEL PIN 6-12 8-5
DOWEL PIN 6-12 8-16
DOWEL PIN 6-12 17-7-15
DRAIN BOLT 10-14 P1.25 3-4
DRAIN SCREW 4-19
DRIVE SHAFT ASSY (L) 10-10-2
DRIVE SHAFT ASSY (L) 17-7-11
DRIVE SHAFT ASSY (S) 10-10-1
DRIVE SHAFT BUSHING 8-12
DRIVE SHAFT BUSHING 17-7-3
DRIVE SHAFT HOUSING ASSY (S) 8-1
DRIVE SHAFT HOUSING GASKET 3-13
DRIVE SHAFT HOUSING GASKET 17-4-13
<E>
ENGINE SHORT BLOCK KIT 17-2-1
ENGINE SHORT BLOCK KIT 17-2-2
EXHAUST VALVE 1-12
EXHAUST VALVE STEM SEAL 1-3
EXTENSION HOUSING 8-11
EXTENSION HOUSING 17-7-2
EXTENSION HOUSING KIT (L) 17-7-1
<F>
FLOAT 4-12
FLOAT 17-3-2
FLOAT ARM PIN 4-15
FLOAT ARM PIN 17-3-5
FLOAT CHAMBER 4-16
FLOAT CHAMBER O-RING 4-17
FLOAT CHAMBER O-RING 17-3-6
FLOAT VALVE 4-13
FLOAT VALVE 17-3-3
FLUSHING PLUG 16-3
FLYWHEEL 7-1
FRICTION KNOB 11-25
FRICTION PIECE 11-22
FRICTION PIECE 12-8
FRICTION PLATE 6-8
FRICTION SPRING 6-10
FUEL COCK ASSY 15-6
FUEL COCK KNOB 15-13
FUEL HOSE 155-20-20 15-7
FUEL HOSE L=215 15-10
FUEL HOSE PROTECTOR 12-16
FUEL HOSE W/PROTECTOR L=215 15-11
FUEL HOSE W/PROTECTOR L=340 15-8
FUEL HOSE W/PROTECTOR L=390 4-41
FUEL LEVER DECAL 13-17-1
FUEL PUMP ASSY 4-38
FUEL TANK ASSY 15-1-1
FUEL TANK ASSY 15-1-2
FUEL TANK CAP ASSY 15-18
FUEL TANK CAP ASSY 15-19
FUEL TANK SEAL 15-17
<G>
GASKET 1-35
GASKET 8-8
GASKET 10-6
GASKET 17-4-4
GASKET 17-6-2
GASKET 17-8-3
GEAR CASE ASSY 10-1
GREASE FITTING 8-1a
GRIP 12-6
GROMMET 10-31
GROMMET 10-49
GROMMET 13-2 8-14
GROMMET 13-2 17-7-5
GROMMET 29-3 8-9
GUIDE PLATE GASKET 10-21
GUIDE PLATE GASKET 17-5-7
GUIDE PLATE GASKET 17-6-6
GUIDE PLATE GASKET 17-8-10
<H>
HIGH TEMPERATURE CAUTION DECAL 8-21
HOOK 15-22
HOSE 3-11
HOSE 4-3
HOSE 4-36
HOSE 8-10
<I>
IGNITER W/R-CAP 7-4
INSULATOR 4-26
INTAKE MANIFOLD 4-1
INTAKE MANIFOLD ASSY 4-2
INTAKE MANIFOLD GASKET 4-6
INTAKE MANIFOLD GASKET 17-4-8
INTAKE SILENCER ASSY 4-27
INTAKE VALVE 1-11
INTAKE VALVE STEM SEAL 1-2
<K>
KEY 10-3.7-3 2-7
KEY φ2-11 10-28
KEY φ2-11 17-5-3
KEY φ2-11 17-6-4
KEY φ2-11 17-8-6
KEY φ3-11 10-20
KNOB 11-3
<L>
LEVER 11-7
LIFTER 1-17
LOGO DECAL 14-10
LOWER UNIT ASSY (L) 17-1-2
LOWER UNIT ASSY (S) 17-1-1

LOWER UNIT GASKET SET 17-6-1
<M>
MAIN JET (#58) 4-10-1
MAIN JET (#65) 4-10-2
MAIN JET (#68) 4-10-3
MAIN NOZZLE....................... 4-9-1
MAIN NOZZLE....................... 4-9-2
MAIN NOZZLE....................... 4-9-3
MAINTENANCE KIT FOR MFS2/2.5/3.5B 17-8-1
<N>
NUT................................ 8-19
NUT................................ 11-16
NUT................................ 17-7-9
NUT 10-P1.25........................ 7-3
NYLON NUT 8-P1.25 11-13
<O>
OIL FILLER CAP 1-8
OIL LEVEL DECAL 13-18-1
OIL SEAL 10.1-20-7 3-15
OIL SEAL 10.1-20-7 17-4-11
OIL SEAL 10-22-8 10-19
OIL SEAL 10-22-8 17-6-7
OIL SEAL 12-24-8 10-42
OIL SEAL 12-24-8 17-6-9
OIL SEAL 20-35-7 2-4
OIL SEAL 20-35-7 17-4-5
OIL SIGHT GAUGE 3-2
OILPAN ASSY........................ 3-1
OILPAN GASKET 3-6
OILPAN GASKET 17-4-9
O-RING............................. 4-20
O-RING............................. 17-3-8
O-RING............................. 17-4-6
O-RING 1.9-6.8....................... 9-7
O-RING 2.4-35.2 3-16
O-RING 2.4-35.2 17-4-12
O-RING 2.4-9.5....................... 10-25
O-RING 2.4-9.5....................... 11-2
O-RING 2.4-9.5....................... 17-6-12
O-RING 2.5-4.9....................... 10-24
O-RING 2.5-4.9....................... 17-6-11
O-RING 2-10......................... 15-14
O-RING 3.1-24.4 1-9
O-RING 3.1-24.4 17-4-10
O-RING 3.2-47 10-43
O-RING 3.2-47 17-6-10
<P>
PILOT SCREW........................ 4-24-1
PILOT SCREW........................ 4-24-2
PISTON............................. 2-9
PISTON PIN.......................... 2-10
PISTON PIN CLIP..................... 2-11
PISTON REPAIR KIT................... 2-8
PISTON RING 2-13
PISTON RING 2-14
PISTON RING SET 2-12
PISTON RING-OIL 2-15
PIVOT 1-22
PIVOT BOLT 1-20
PLASTIC RIVET 6.5 .... 12-13a
PLATE.............................. 1-19
PLUG 8-8........................... 10-5
PLUG CAP W/RESISTANCE............. 7-5
POWER HEAD GASKET SET 17-4-1
PRE-COATED BOLT 6-60.............. 6-14
“PROPELLER ASSY (4.5””)” 10-50-1
“PROPELLER ASSY (6””)”.............. 10-50-2
“PROPELLER ASSY (6””)”.............. 10-50-4
“PROPELLER ASSY (7””)”.............. 10-50-3
PROPELLER SHAFT................... 10-38
PROPELLER SHAFT HOUSING......... 10-40
PROPELLER SHAFT HOUSING ASSY 10-39
PUMP CASE (UPPER) 10-29
PUMP CASE ASSY (LOWER)........... 10-18
PUMP CASE GASKET 10-23
PUMP CASE GASKET 17-5-5
PUMP CASE GASKET 17-6-5
PUMP CASE GASKET 17-8-9
PUMP CASE GASKET (LOWER) 10-17
PUMP CASE GASKET (LOWER) 17-6-8
PUMP CASE LINER 10-30
PUMP CASE LINER 17-5-4
PUMP CASE LINER 17-8-8
PUSH ROD.......................... 1-18
PUSH ROD.......................... 10-37
<R>
RATCHET............................ 6-6
RECOIL STARTER ASSY 6-1
REEL 6-4
RETAINER 1-14
RETURN SPRING 6-7
RING GEAR COVER ASSY 7-7
RIVET 3-22.......................... 11-34
ROCKER ARM........................ 1-21
ROPE ANCHOR 6-12
ROPE ANCHOR PLATE................ 6-13
RUBBER CAP......................... 4-23
<S>
SAFETY ROPE φ4-1000 16-2
SCREW.............................. 4-18
SCREW.............................. 12-7
SCREW.............................. 12-13
SCREW.............................. 17-3-7
SEAL RING........................... 15-15
SHEAR PIN 4-24...................... 10-46
SHEAR PIN 4-24...................... 17-8-2
SHIFT DECAL 13-16-1
SHIFT LEVER SHAFT ASSY 9-6
SHIFT ROD (S) 9-1
SHIFT ROD JOINT ASSY............... 9-4
SHIFT ROD LEVER.................... 9-11
SHIM 21-28-0.1 10-8-1
SHIM 21-28-0.15..................... 10-8-2
SHOULDER BOLT 11-36
SLINGER............................. 1-37
SLOW AIR JET (#115)................. 4-11-1
SLOW AIR JET (#125)................. 4-11-2
SLOW AIR JET (#130)................. 4-11-3
SPACER 10.1-15-72 10-12
SPARK PLUG(DCPR6E) 1-38
SPARK PLUG(DCPR6E) 17-8-13
SPIRAL TUBE PROTECTOR φ10-100 ... 4-4
SPLIT PIN 1.6-10 15-23
SPLIT PIN 2-12....................... 9-3
SPLIT PIN 4-35....................... 10-47
SPLIT PIN 4-35....................... 17-8-12
SPRING.............................. 4-22
SPRING.............................. 9-9
SPRING.............................. 10-36
SPRING.............................. 11-9
SPRING.............................. 11-23
SPRING.............................. 12-10
SPRING PIN 2-12..................... 11-8
SPRING PIN 3-8...................... 10-16
SPRING PIN 3-8...................... 17-7-13
SPRING WASHER..................... 10-34
STARTER HANDLE 6-11
STARTER ROPE φ3.5-1200 6-5
STARTER SEAL....................... 6-2
STARTER SPRING..................... 6-3
STEERING BRACKET.................. 8-2
STOP SCREW 4-21
STOP SWITCH ASSY.................. 13-10
STOP SWITCH DECAL 13-20
STOP SWITCH LANYARD ASSY......... 13-11
STOPPER 8-13
STOPPER 11-6
STOPPER 17-7-4
STUD 6-171 8-18
STUD 6-171 17-7-7
SWIVEL BRACKET 11-5
SWIVEL BRACKET 11-21
<T>
TANK FILLER CAP GASKET............ 15-20
THERMOSTAT 1-28
THERMOSTAT CAP................... 1-29
THERMOSTAT CAP................... 1-30
THERMOSTAT CAP GASKET........... 1-31
THERMOSTAT CAP GASKET........... 17-4-3
THROTTLE DECAL.................... 12-14
THROTTLE DRUM 5-4
THROTTLE OPENER 5-5
THROTTLE ROD...................... 5-9
THROTTLE SHAFT.................... 12-5
THROTTLE SHAFT DAMPER........... 12-4
THROTTLE SHAFT SUPPORT 12-12
THROTTLE WIRE 12-15
THROTTLE WIRE BRACKET............ 5-1
THRUST BUSHING 11-28
THRUST PLATE 20.2-32-1............. 2-3
THRUST ROD ASSY................... 11-20
THRUST SUPPORTER................. 11-18
TILLER HANDLE...................... 12-2
TILLER HANDLE ASSY 12-1-1
TILT STOPPER........................ 11-4
TOOL KIT 16-1
TOP COWL ASSY..................... 14-2-1
TOP COWL SEAL L=1100............. 14-8
TOP COWL SUB-ASSY 14-3-1
<V>
VALVE SPRING L=35 1-13
VALVE SPRING SEAT 1-16
<W>
WASHER 1-7
WASHER 4-32
WASHER 7-2
WASHER 8-20
WASHER 9-2
WASHER 10-33
WASHER 11-11
WASHER 11-17
WASHER 11-24
WASHER 15-21
WASHER 17-7-10
WASHER 10.2-19-1................... 3-5
WASHER 10.2-19-1................... 17-8-11
WASHER 10.5-18-1.5 9-10
WASHER 6.5-21-1 13-8
WASHER 6-16-1.5.................... 1-27
WASHER 6-16-1.5.................... 5-8
WASHER 6-16-1.5.................... 6-15
WASHER 6-16-1.5.................... 13-15
WASHER 6-16-1.5.................... 15-4
WASHER 8.5-28-1.................... 11-14
WATER PIPE ASSY (L)................. 10-48-2
WATER PIPE ASSY (L)................. 17-7-14
WATER PIPE ASSY (S)................. 10-48-1
WATER PUMP GUIDE PLATE 10-22
WATER PUMP GUIDE PLATE 17-5-6
WATER PUMP GUIDE PLATE 17-8-7
WATER PUMP IMPELLER 10-27
WATER PUMP IMPELLER 17-5-2
WATER PUMP IMPELLER 17-6-3
WATER PUMP IMPELLER 17-8-5
WATER PUMP REPAIR KIT 17-5-1

INDEX (Parts Number)

172-36008-0 8-14
172-36008-0 17-7-5
301-66023-0 10-25
301-66023-0 11-2
301-66023-0 17-6-12
307-62116-1 11-14
309-00131-0 2-7
309-00132-0 7-3
309-60111-0 10-42
309-60111-0 17-6-9
309-62115-2 11-12
309-62117-1 11-15
309-62441-2 11-22
309-62446-1 11-23
309-62463-0 11-3
309-64106-0 10-50-2
309-64126-1 10-46
309-64126-1 17-8-2
312-72201-0 16-2
314-64103-0 10-50-1
332-00021-1 2-10
332-60005-2 10-5
332-60006-1 8-8
332-60006-1 10-6
332-60006-1 17-6-2
332-60006-1 17-8-3
332-61315-0 9-10
332-62101-1 11-35
336-60007-0 16-3
338-02215-0 3-12
338-02215-0 4-40
338-60218-2 10-3
338-60218-2 17-8-4
344-67177-1 ....8-1a
345-01111-0 1-4
345-01111-0 3-3
345-01111-0 8-4
345-65015-0 10-43
345-65015-0 17-6-10
345-66021-0 9-7
346-67115-0 13-8
350-00024-1 2-11
350-67154-0 ....12-13a
353-06283-0 13-13
353-06821-0 13-11
369-61016-0 8-9
369-62106-1 11-32
369-64014-0 10-8-1
369-64015-0 10-8-2
369-65021-1 10-27
369-65021-1 17-5-2
369-65021-1 17-6-3
369-65021-1 17-8-5
369-65022-0 10-28
369-65022-0 17-5-3
369-65022-0 17-6-4
369-65022-0 17-8-6
369-66021-1 10-24
369-66021-1 17-6-11
369-66112-1 9-9
369-66116-0 9-8
369-66241-0 9-4
369-70063-0 15-15
369-70311-0 15-6
393-62416-1 11-27
398-06972-0 1-32
398-06972-0 5-2
398-06972-0 6-16
3A0-76079-0 3-9
3A0-76079-0 4-29
3A0-76079-0 13-3
3AA-67503-0 6-2
3AB-00001-1 2-9
3AB-00040-2 2-5
3AB-00059-0 2-6
3AB-00070-1 2-1
3AB-00115-0 2-3
3AB-00121-0 2-4
3AB-00121-0 17-4-5
3AB-01024-1 1-25
3AB-01024-1 17-4-2
3AB-01032-0 1-31
3AB-01032-0 17-4-3
3AB-01111-0 8-5
3AB-01111-0 8-16
3AB-01111-0 17-7-15
3AB-01210-0 3-14
3AB-01215-0 3-15
3AB-01215-0 17-4-11
3AB-02104-0 4-6
3AB-02104-0 17-4-8
3AB-02215-1 15-12
3AB-03265-0 4-21
3AB-03266-0 4-24-1
3AB-05003-0 6-6
3AB-05004-0 6-3
3AB-05006-0 6-8
3AB-05007-0 6-10
3AB-05012-0 6-7
3AB-05013-0 6-5
3AB-05019-0 6-11
3AB-05090-0 6-1
3AB-05104-0 6-4
3AB-05131-0 6-12
3AB-05134-0 6-13
3AB-05138-0 6-9
3AB-06300-1 7-7
3AB-06303-1 7-8
3AB-06846-1 15-2
3AB-07201-0 1-11
3AB-07231-0 1-17
3AB-07233-0 1-19
3AB-07235-0 1-21
3AB-07402-0 3-6
3AB-07402-0 17-4-9
3AB-07421-0 3-2
3AB-07431-0 1-34
3AB-07432-0 1-35
3AB-07432-0 17-4-4
3AB-07435-0 4-37
3AB-07640-0 1-37
3AB-60003-0 8-12
3AB-60003-0 17-7-3
3AB-61012-0 3-13
3AB-61012-0 17-4-13
3AB-61336-1 11-19
3AB-62212-0 11-18
3AB-62321-1 11-26
3AB-62464-3 11-4
3AB-63068-0 11-7
3AB-63102-0 12-17
3AB-63617-0 5-9
3AB-64332-0 8-13
3AB-64332-0 17-7-4
3AB-65025-0 10-22
3AB-65025-0 17-5-6
3AB-65025-0 17-8-7
3AB-65031-0 10-49
3AB-65191-0 10-48-1
3AB-65192-0 10-48-2
3AB-65192-0 17-7-14
3AB-66130-1 9-6
3AB-66214-0 9-1
3AB-66225-0 9-11
3AB-66334-1 11-6
3AB-66336-0 11-9
3AB-67104-0 13-5
3AB-70036-1 15-17
3AB-70310-3 15-1-2
3AB-87121-0 17-4-1
3AB-87322-0 17-5-1
3ABB01021-0........1-24
3ABB01031-0........1-29
3ABB07400-0........3-1
3ABB63508-0........5-1
3ABQ61020-3........8-1
3ABQ61100-0........8-11
3ABQ61100-0........17-7-2
3ABQ62001-1........8-2
3ABQ62102-0........11-33
3ABQ62111-2........11-1
3ABQ62391-1........11-5
3ABQ62392-1........11-21
3ABQ87312-3........17-7-1
3AC-72200-0 13-20
3AE-07203-0 1-13
3AS-03266-0 4-24-2
3AU-04468-0 4-10-3
3B2-63063-0 12-12
3B2-65022-0 10-20
3BJ-72100-0 16-1
3BMQ60000-2 10-1
3BMQ87301-3 17-1-1
3BMQ87302-3 17-1-2
3BR-63102-1 12-18
3BRB02091-1........4-1
3C7-02215-0 4-5
3C7-72191-0 14-11
3C8-62104-2 11-34
3C8-62107-0 11-36
3C8-66308-0 1-27
3C8-66308-0 5-8
3C8-66308-0 6-15
3C8-66308-0 13-15
3C8-66308-0 15-4
3DJ-04458-0 4-10-1
3F0-60223-0 10-19
3F0-60223-0 17-6-7
3F0-61101-1 8-18
3F0-61101-1 17-7-7
3F0-62160-0 11-20
3F0-64101-0 10-50-3
3F0-64211-0 10-38
3F0-64215-0 10-35
3F0-64221-0 10-36
3F0-64223-0 10-37
3F0-64301-0 10-10-1
3F0-64302-0 10-10-2
3F0-64302-0 17-7-11
3F0-64321-0 10-12
3F0-65011-0 10-30
3F0-65011-0 17-5-4
3F0-65011-0 17-8-8
3F0-65016-0 10-29
3F0-65018-0 10-23
3F0-65018-0 17-5-5
3F0-65018-0 17-6-5
3F0-65018-0 17-8-9
3F0-65020-0 10-17
3F0-65020-0 17-6-8
3F0-65029-0 10-21
3F0-65029-0 17-5-7
3F0-65029-0 17-6-6
3F0-65029-0 17-8-10
3F0-65032-0 10-31
3F0-66011-0 10-14
3F0-66012-0 10-15-1
3F0-66013-0 10-15-2
3F0-66013-0 17-7-12
3F0-66031-0 10-26
3F0-72185-0 14-1-3
3F0-87321-0 17-6-1
3F0B64512-0........10-50-4
3F0Q60101-1........10-40
3F0Q87323-1........10-39
3FK-87123-0 2-12
3G9-66136-0 15-14
3GP-70020-0 15-19
3GR-02409-0 4-27
3GR-06870-0 13-10
3GR-07905-0 1-16
3GR-64010-0 10-9
3GR-64020-0 10-13
3GR-70021-0 15-20
3GR-76191-0 8-21
3GT-02161-0 4-41
3GT-02165-0 15-8
3GT-02175-0 15-11
3GT-03200-0 4-8-1
3GT-03221-0 4-16
3GT-03231-0 4-12
3GT-03231-0 17-3-2
3GT-03252-0 4-9-1
3GT-03256-0 4-23
3GT-04000-0 4-38
3GT-04915-0 4-11-1
3GT-04925-0 4-11-2
3GT-05101-0 3-8
3GT-06001-0 7-1
3GT-06041-0 7-4
3GT-07810-1 1-10
3GT-07921-0 1-14
3GT-35143-0 15-9
3GT-60108-0 6-14
3GT-62442-0 11-25
3GT-67120-1 13-2
3GT-67501-0 14-8
3GT-70062-0 15-13
3GT-70310-1 15-1-1
3GT-70321-0 15-18
3GT-70325-0 15-10
3GT-70326-0 15-7
3GT-72183-0 15-16
3GT-87122-1 17-3-1
3GT-87130-0 2-8
3GT-87500-0 17-8-1
3GTB01031-0........1-30
3GTB01100-2........1-1
3GTB02010-1........4-2
3GTB87090-5........17-2-1
3GTQ62105-1........11-30
3GTQ62108-1........11-31
3GU-03252-0........4-9-2
3GU-04930-0........4-11-3
3GU-10230-0........16-4-1
3GU-60001-0........8-17
3GU-60001-0........10-45
3GU-60001-0........17-7-8
3GUB87090-0........17-2-2
3H2-65040-1 10-18
3H6-01030-0 1-28
3H6-02011-0 4-25
3H6-02011-0 17-3-9
3H6-02011-0 17-4-7
3H6-03222-0 4-17
3H6-03222-0 17-3-6
3H6-03232-0 4-15
3H6-03232-0 17-3-5
3H6-03240-0 4-13
3H6-03240-0 17-3-3
3H6-03244-0 4-14
3H6-03244-0 17-3-4
3H6-03267-0 4-22
3H6-03292-0 4-19
3H6-03293-0 4-20
3H6-03293-0 17-3-8
3H6-03293-0 17-4-6
3H6-03952-1 4-26
3H6-06999-0 7-5
3H6-07232-0 1-18
3H6-07234-0 1-20
3H6-07236-0 1-22
3H6-07406-0 3-5
3H6-07406-0 17-8-11
3H6-07705-1 3-4
3H6-07937-0 1-23
3H6-62325-0 11-28
3H6-63048-0 12-4
3H6-63510-0 12-3
3H6-63611-0 5-4
3H6-63612-0 5-5
3H6-63618-0 5-6
3H6-67151-1 13-6
3H9-70095-0 15-22
3H9-70313-0 12-16
3KY-07923-0 1-15

3LR-10230-0 16-4-2
3LR-67197-0 13-7
3PA-72181-1 6-17
3R0-07422-0 1-9
3R0-07422-0 17-4-10
3R0-71015-1 1-8
3R1-03251-0 4-10-2
3R3-07204-0 1-2
3R3-07206-0 1-3
3R3-63012-0 12-6
3R4-03252-0 4-9-3
3T5-76079-0 15-3
3V1-00011-0 2-13
3V1-00012-0 2-14
3V1-00013-0 2-15
3V1-02012-0 3-16
3V1-02012-0 17-4-12
3V1-07202-0 1-12
3V1-60001-1 11-29
3V1-63035-1 12-8
3V1-63036-0 12-10
3V1-63041-0 12-5
3V1-63077-0 12-9
3V1-63107-0 12-19
3V1-63600-0 12-15
3V1-76148-0 4-4
3V1Q63011-3. 12-2
3V9-72019-0 12-14
3WD-03200-0. 4-8-2
3WD-87801-0. 14-9-5
3WE-03200-0 4-8-3
3WE-67578-0 13-16-1
3WE-67580-0 14-10
3WE-72024-0 13-17-1
3WE-72046-0 13-18-1
3WE-87801-0 14-9-3
3WEQ63003-0 12-1-1
3WEQ67100-0 13-1-1
3WEQ67640-0 14-3-1
3WEQ67645-0 14-2-1
3WH-87801-0. 14-9-1
3WL-72180-0 14-1-1
910103-0612 13-9
910103-0616 1-26
910103-0616 10-4
910103-0625 12-11
910103-0625 15-5
910103-0635 5-7
910103-5612 13-12
910103-5616 1-36
910103-5616 9-5
910103-5616 13-4
910103-5620 3-10
910103-5620 4-39
910103-5625 5-3
910103-5625 7-6
9101E3-0616 12-20
9101E3-0616 13-14
9101E3-5612 8-15
9101E3-5612 17-7-6
9101E3-5620 3-17
9101E3-5620 10-44
9101E3-5630 1-33
9101E3-5630 8-6
9101E3-5835 8-3
9101F4-5630 4-7
9101F4-5635 1-5
9101F4-5635 3-7
9106E3-0808 8-7
910903-6512 9-12
9161E3-0645 10-32
9161E3-0650 11-10
9161F1-0685 4-31
9161F9-0675 1-6
9208E3-0518 12-7
921503-0612 12-13
922503-6412 4-18
922503-6412 17-3-7
930103-0600 11-16
930103-0600 17-7-9
9301E3-0600 8-19
930403-0800 11-13
940103-0400 15-21
940103-0600 4-32
940103-0600 9-2
940103-0600 10-33
940121-1000 7-2
9401E3-0600 1-7
9401E3-0600 8-20
9401E3-0600 11-11
9401E3-0600 11-17
9401E3-0600 11-24
9401E3-0600 17-7-10
941303-0600 10-34
951403-0212 11-8
951407-0308 10-16
951407-0308 17-7-13
951503-0212 9-3
951503-0435 10-47
951503-0435 17-8-12
951503-1610 15-23
9601-0-6000 10-2
9601-0-6000 10-11
9601-0-6001 10-41
9601-0-6004 10-7
9601-3-6204 . . . . 2-2a
9603-3-6204 2-2
9701-1-1103 1-38
9701-1-1103 17-8-13
98AB-30-050 8-10
98AB-30-230 4-36
98AB-50-080 3-11
98AB-70-185 4-3

Copyright © 2020 Tohatsu Corporation. All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means without the express written permission of Tohatsu Corporation.

2020 PARTS CATALOG

MFS 2C
MFS 2.5C
MFS 3.5C
Models

Serial Number 000001BX～
OB No.002-21052-1BX 3AB 2001

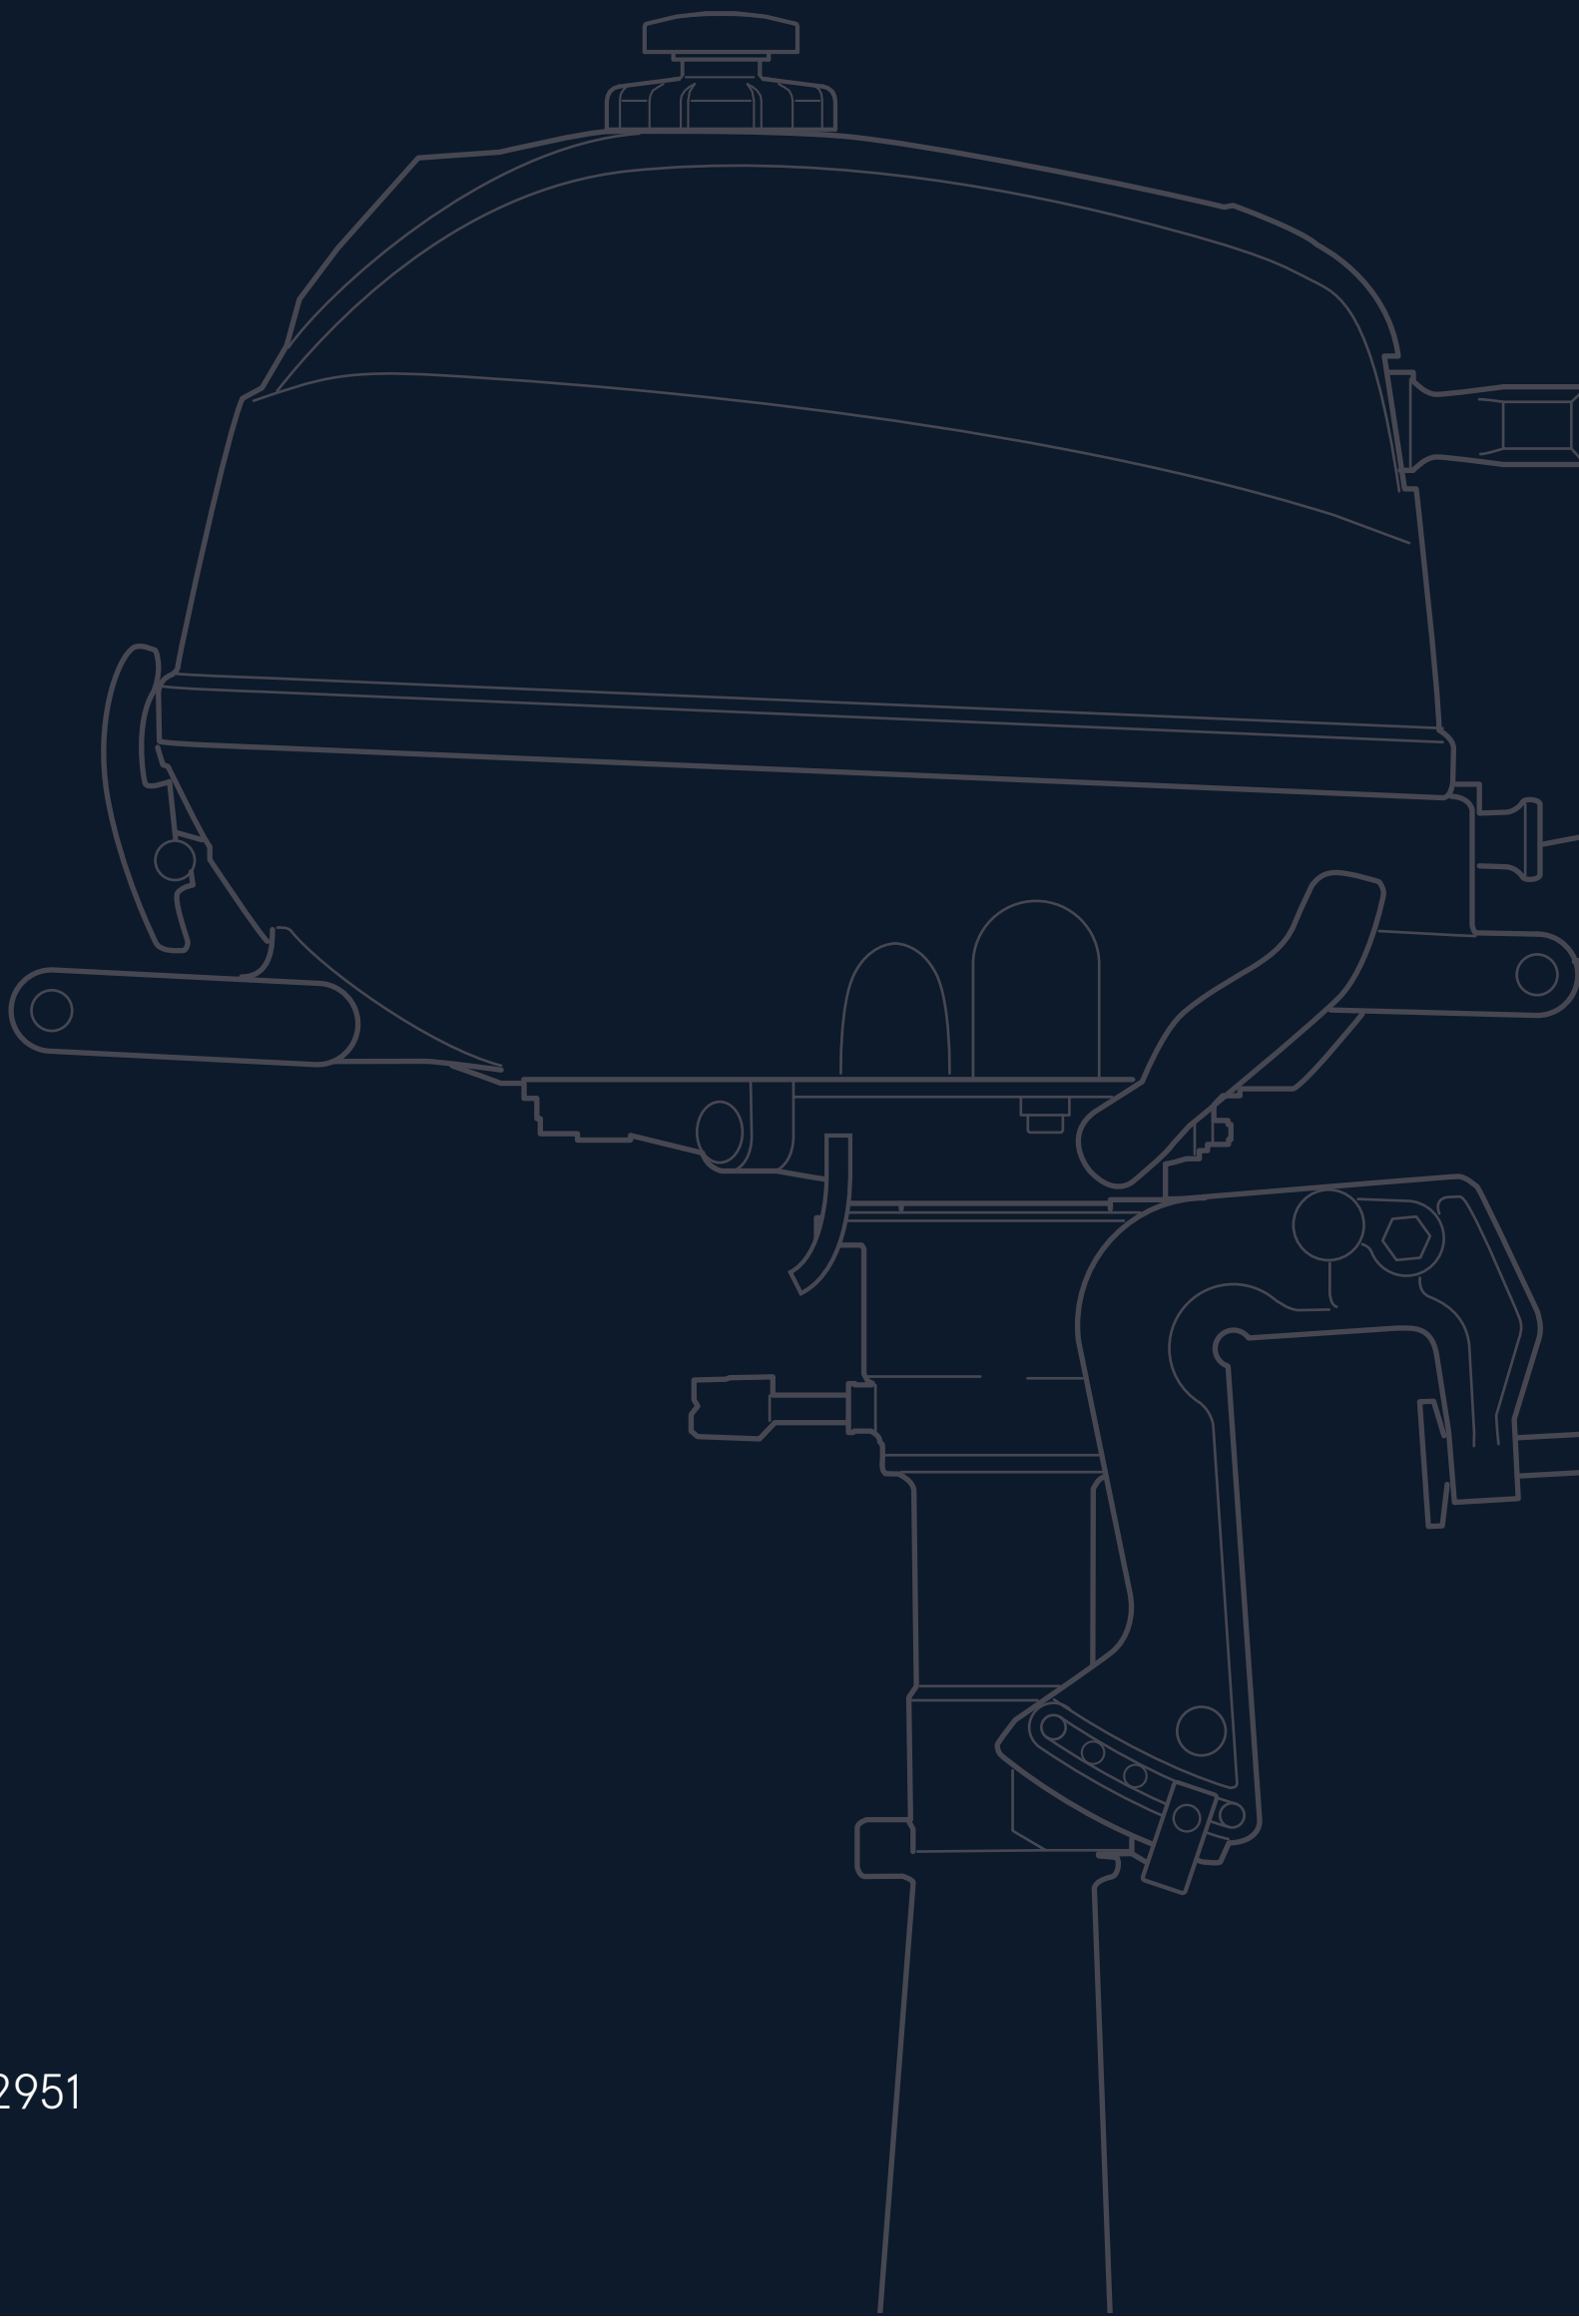

トーハツ株式会社

〒174-0051
東京都板橋区小豆沢 3-5-4
Tel: 03 (3966) 3116

TOHATSU CORPORATION

5-4, Azusawa 3-Chome, Itabashi-Ku
Tokyo 174-0051, Japan
Tel: +81-3-3966-3117 Fax: +81-3-3966-2951
www.tohatsu.com